




10. **Never** exceed the 220 lb (100 kg) maximum load rating.


11. The electric scooter should **never** be used by children under the age of 13.


12. **Maximum Speed** - Your electric scooter goes the maximum speed of 20 mph.

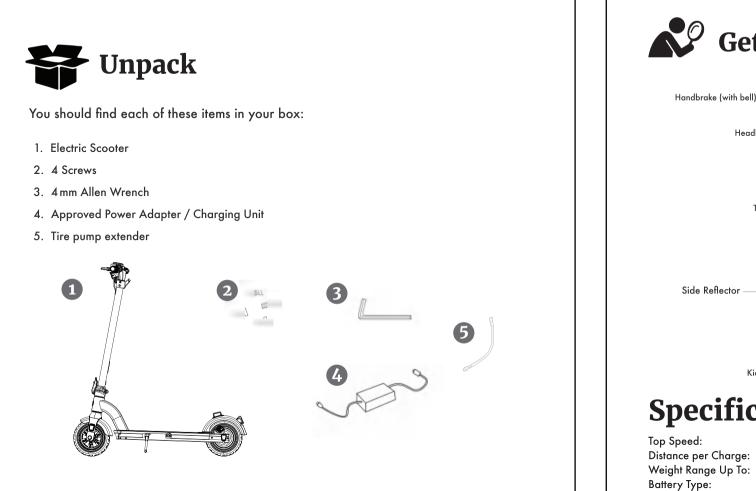


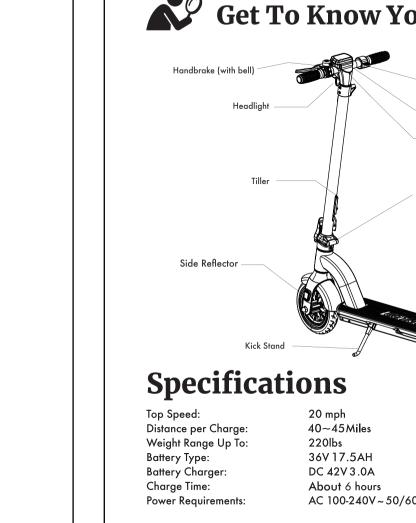


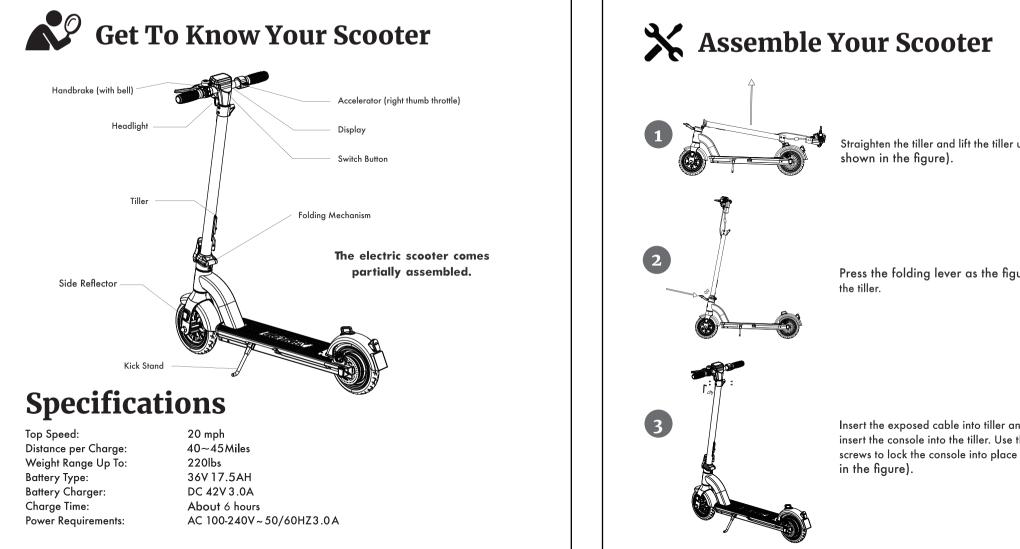


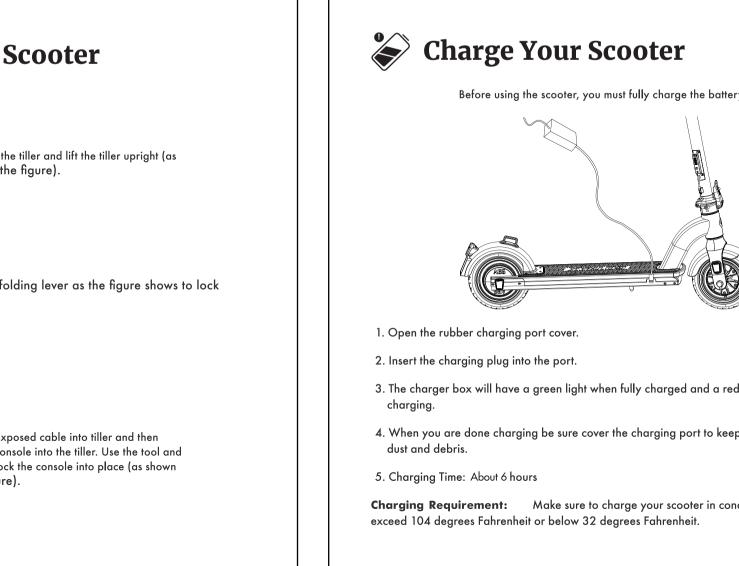


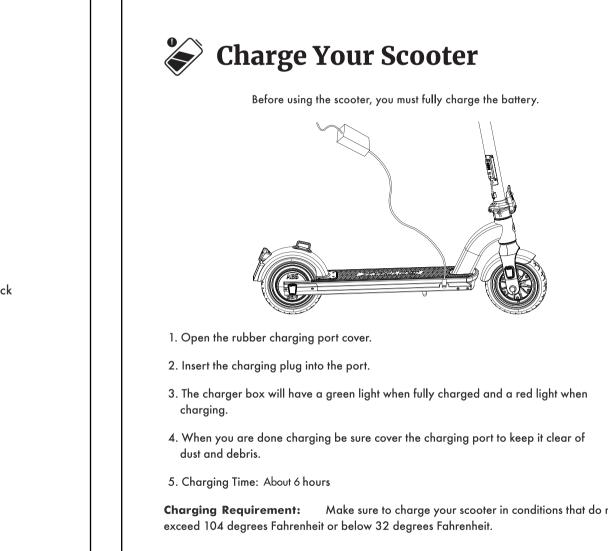

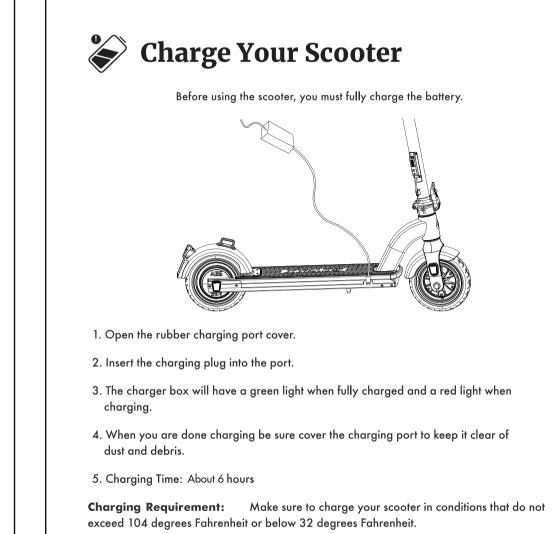

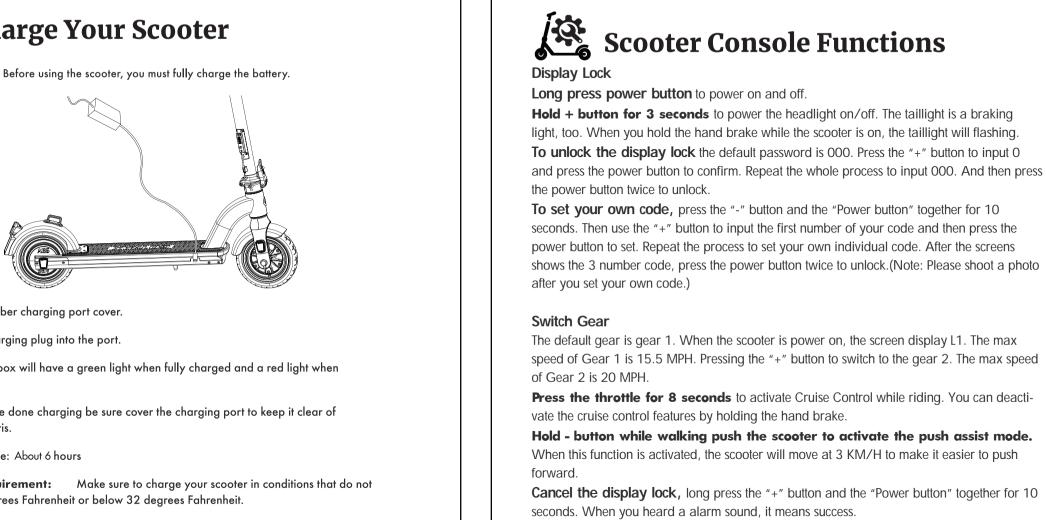

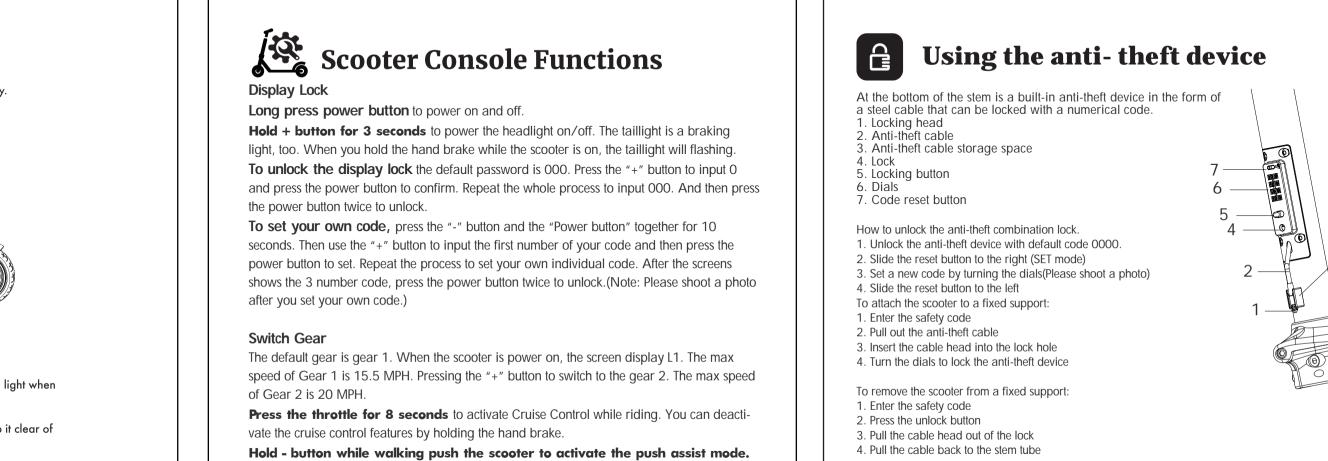


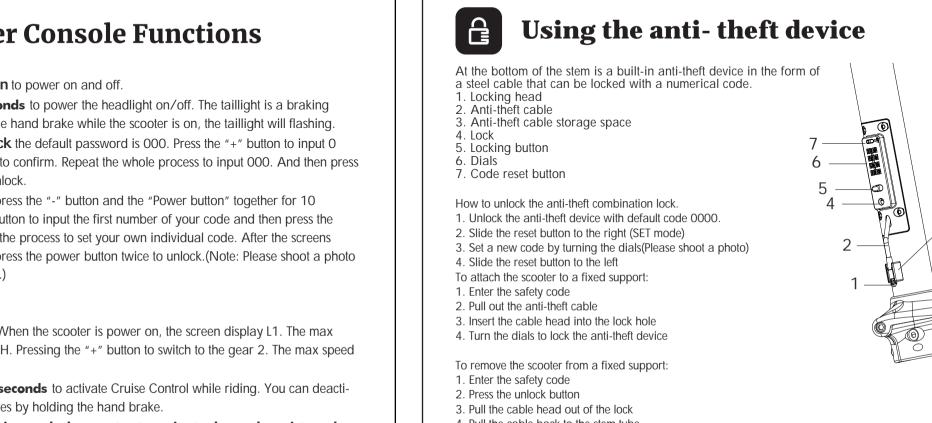





tube and secure the cable head in the storage bracket to prevent it from


hanging down and getting caught in the wheel.

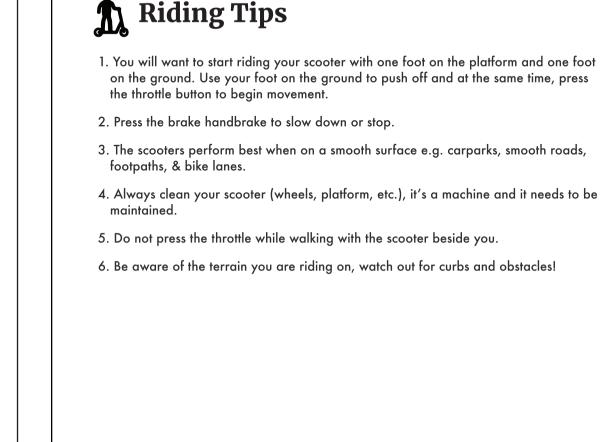

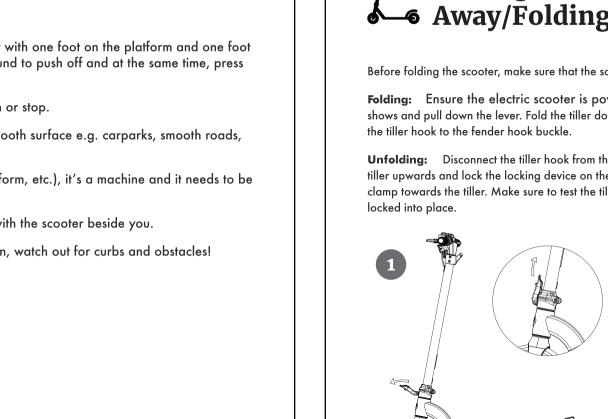

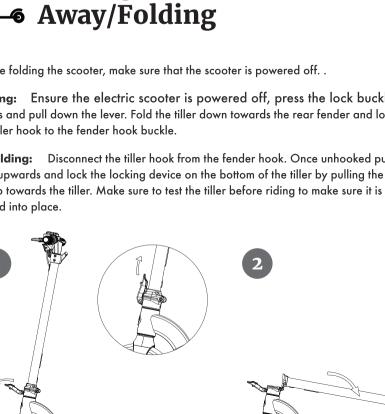

Putting Your Scooter

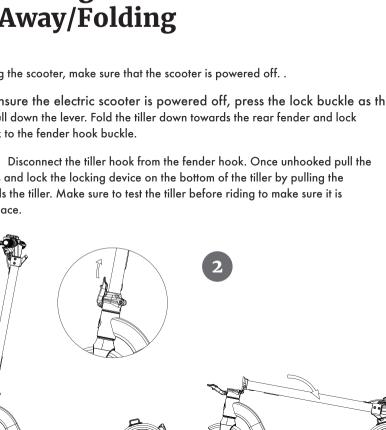



Cleaning and storage: If the scooter is dirty, wipe it clean with a soft damp clot

**Disc Brake Adjustments:** If the brake is too tight, use a 4mm Allen wrench to loos the screws counterclockwise. Push the brake wire to shorten and lock the screw in

Make sure to store your scooter and power adapter in conditions that do not exceed 122 degrees Fahrenheit or below -4 degrees. place. If the brake is too loose, loosen the screws and pull the brake wire to extend the wire and lock the screws. **Warning** - Risk of Fire - No User Serviceable Parts, The prolonged exposure to UV Rays, Rain and the Elements may damage the enclosed materials, store indoors when Tiller Adjustments: If the tiller wiggles while riding, please check the folding

mechanism. Use an Allen wrench to tighten the screws as the figure shows.

may cause wear on the life of the battery and tires.

Tires: If you notice that the tire pressure is low, please fill to the recommended PSI the side of the tire. Recommended PSI: 50

> **DO NOT** use alcohol, gasoline, kerosene, or other corrosive chemical solvents to cle the scooter. It can severely damage the appearance and structure of the scooter. Plea We frequently update our user manuals at GOTRAX.com, and reserve the rights to update and change manuals online. do not use a pressure washer as it may also cause damage to the electronics.

**Storage:** When you're not using your scooter store in a dry and cool location. Avoistoring your scooter outdoors because sun exposure can damage it's appearance an Please contact our customer service team if you are experiencing problems or need more detailed information.

For warranty information, please visit GOTRAX.com.

**Battery Information** 

cause risk of fire & equipment may be damaged.

Only use the approved GOTRAX power adapter to charge your scooter, others may

They can be reached at GOTRAX.com

**X** Warranty

#RideGOTRAX





GOLABS, INC