

# August<sup>®</sup>

# User Manual

## SE15



# User Manual

Thank you for purchasing August SE15 Portable CD and MP3 Player with Bluetooth. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

## Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble the SE15, it can be unsafe and will invalidate the manufacturer's warranty.

## Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

## Declaration of Conformity


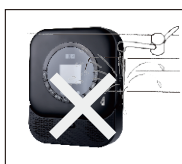 

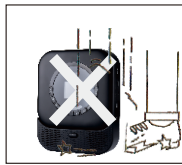 
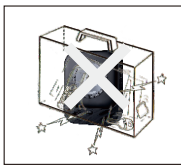 
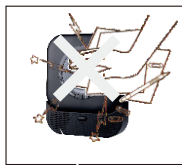 
The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

## Customer Service

You can contact us by phone on: +44(0)845 250 0586 (Carrier Rates Apply) or by email at: [service@augustint.com](mailto:service@augustint.com) should you require further technical support or customer service.


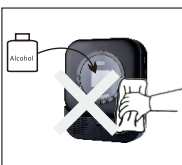 
# 1. Safety Instructions

## ■ Storage and Use

|  |  |   |  |
|--|--|---|--|
|  | Do not store or use this device in extreme temperatures.             |  | Do not store or use this device in wet or damp environments. |
|  | Do not expose this device to dust, oil or smoke.                     |  | Do not drop or strike this device.                           |
|  | When transporting this device store securely to avoid impact damage. |  | Do not scratch this device with sharp objects.               |

## ■ Maintenance

Please unplug all leads before cleaning this device.

|   |  |  |  |
|---|--|--|--|
|  | Wipe the device and buttons with a soft cloth. |  | Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products. |
|---|--|--|--|

 
# 2. Main Features

 
- Transmit and Receive Audio with Bluetooth v5.3
- Inbuilt Audio Equaliser and Stereo Speakers
- Electronic Skip and Shock Protection
- USB Music Play and 3.5mm AUX-In/Out

# 3. Box Contents

|  |  |  |   |
|--|--|--|---|
| <br>SE15 | <br>USB to Type-C cable | <br>User Manual | <br>Remote control |
|  | <br>Earphones           | <br>AUX cable   | <br>Wall bracket   |

# 4. Part Names and Functions

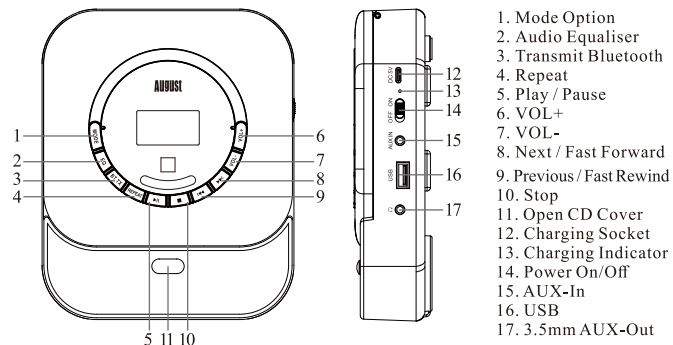

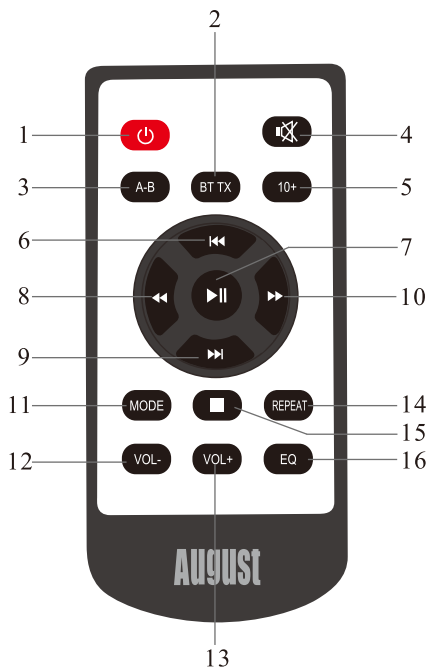

- |                         |                  |
|-------------------------|------------------|
| 1. Power On/Off         | 9. Next          |
| 2. Transmit Bluetooth   | 10. Fast Forward |
| 3. A-B Repeat           | 11. Mode Option  |
| 4. Mute                 | 12. VOL-         |
| 5. Go Forward 10 Tracks | 13. VOL+         |
| 6. Previous             | 14. Repeat       |
| 7. Play / Pause         | 15. Stop         |
| 8. Fast Rewind          | 16. Equaliser    |

## 5. Operation

### 5.1 Charging

 
Please fully charge the SE15 before first use or left unused for a long period of time.

To charge, use the USB-C charging cable provided to connect the CD player to a powered USB port. Ensure the output voltage from the USB port or charger is 5v/2A.

### 5.2 Power On

The power switch is located on the side. Please toggle it to the ON position to power on the device.

When a CD is played to the end or there is no CD inserted, the CD player will enter standby mode after 20 seconds. Please press the PLAY button again to wake up the device.

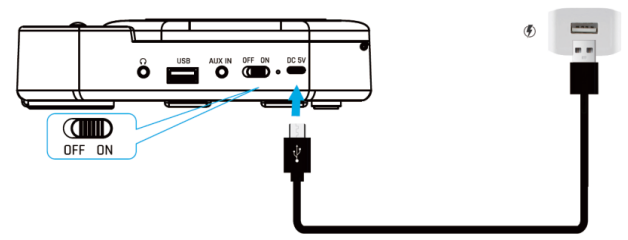


### 5.3 Power Off

There are two ways to turn off the player:

1. Please toggle the power switch to OFF if the player will not be used for a long time.

2. Press and hold the STOP button or use the power button on the remote control to put the player into standby mode. Press the Power button on the remote control again to activate the player.

 Note: In standby mode, the player's power supply is not completely disconnected, to maximise battery life, turn the power switch to the off position if it is not to be used for a long period of time.

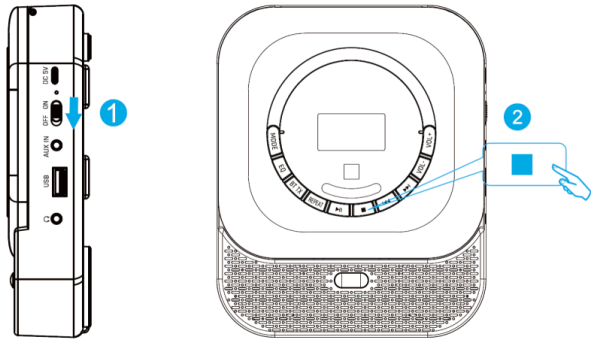


## 5.4 CD play

### 5.4.1 Insert a CD Disc


Push the OPEN button to make the cover pop up. Insert the disc into the CD player with the lettered side facing up, gently press the disc to firm it up, and verify that the CD snaps into place. Gently and fully close the CD cover otherwise the player will not be able to read the disc.

 Note: The player is only compatible with CD, CD-R, MP3 and HDCD formats.

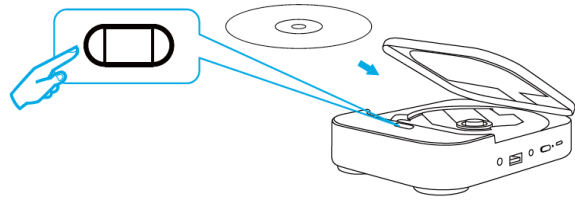

### 5.4.2 Mode Function Selection

 
Press the Mode button to enter the mode menu page, then use ◀◀, ▶▶ and ▶|| to select the CD Mode.

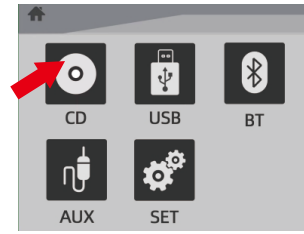

### 5.4.3 Repeat Mode

There are four repeat modes, and each time the REPEAT button is pressed, the order in which the tracks are played will change as follows:

 - Repeat List (≡L)
- Repeat Current Track (One)
- Repeat All (All)
- Random Play (Ran)

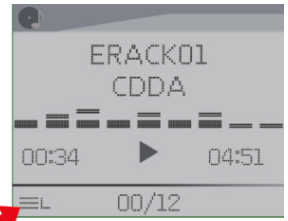


#### 5.4.4 Equaliser

Press the EQ button to change the equalisation effect. There are total of 5 presets: Flat, Pop, Jazz, Rock, Classic.




#### 5.4.5 A-B Repeat

 Please use the A-B button on the remote control to start and end the function. The first press marks point A, the second press marks point B, and the A to B repeat will automatically begin. Then press the button again, and the A to B repeat will be cancelled.

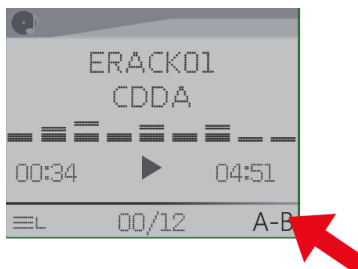

#### 5.5 USB Input

 Press the Mode button to enter the mode menu page, then use ◀▶, ▶▶ and ▶▶ to select the USB Mode.

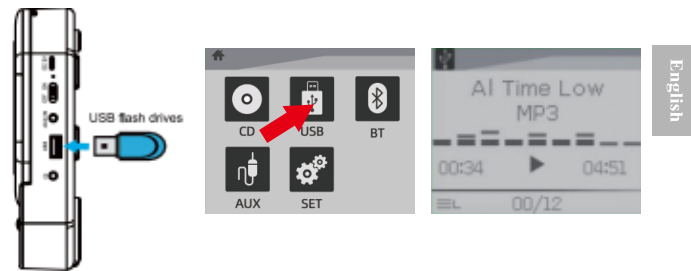


Note: When using a USB flash drive, only FAT32 format is supported for storage capacity below 32GB. The supported audio file formats are MP3/WMA/FLAC.

#### 5.6 Bluetooth Input

 Press the Mode button to enter the mode menu page, then use ◀▶, ▶▶ and ▶▶ to select the BT Mode.

Use your mobile phone's Bluetooth settings to search for SE15, then click to connect.



Once the connection is complete, you can play music from your mobile phone.

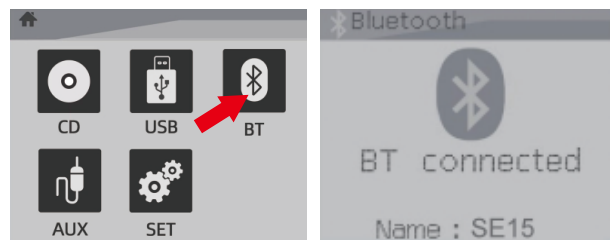

## 5.7 AUX Input

Press the Mode button to enter the mode menu page, then use ◀◀ , ▶▶ and ▶|| to select the AUX Mode.

  Connect the device that supports AUX-Out to SE15 via a 3.5mm audio cable.

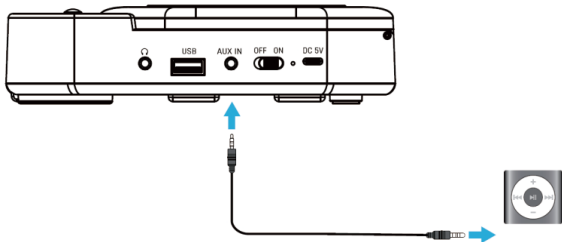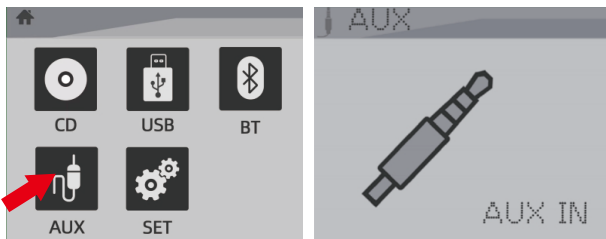


## 5.8 Transmit Bluetooth

The transmit Bluetooth function lets you play CD, USB, and AUX-in music on another Bluetooth Speaker or headphone.


Before connecting the Bluetooth, please check if the Bluetooth speaker or headphones enter the pairing state. The CD player won't be able to find your Bluetooth speaker or headphones if they are already connected to another device.

 1. Press and hold the BT TX button to quickly switch Bluetooth transmission on/off. When switched on, the Bluetooth symbol pops up at the top of the screen.
  2. After turning on the transmitting Bluetooth, it will automatically search for a nearby Bluetooth speaker or headset and connect to it automatically. (It is recommended to use this connection method when there is only one Bluetooth device nearby for quick connection).
  3. If there is more than one Bluetooth device in the vicinity, you can press the BT TX button to access the device list page. All found devices will be listed here and you can select and connect.
- The “◀◀” and “▶▶” buttons are used to navigate to devices. The “▶||” button is used to confirm the selection. After the connection is complete, press the BT TX button to return to the playback interface.

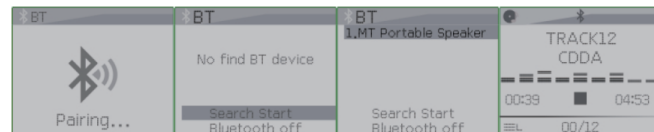

## 6. Settings

 Press the **Mode** button to enter the mode menu page, then use ◀◀ , ▶▶ and ▶|| to select the SET.

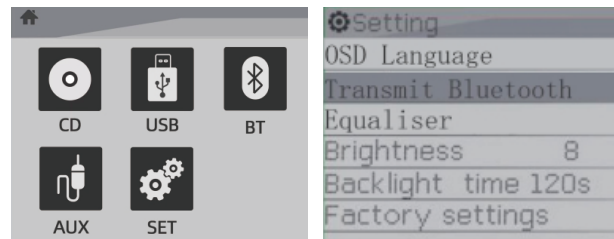

## 7. Specification

|                            |   |
|----------------------------|---|
| Bluetooth Version          | V5.3  |
| Power Supplier             | USB-C 5V/2A   |
| Display                    | LCD Display   |
| Speaker                    | 3W*2  |
| Battery                    | 3.7V/2000mAH  |
| Work Time                  | CD Mode: 3h25m (50% volume)<br>USB Mode: 6h30m (50% volume)<br>Bluetooth Mode: 12h (50% volume) |
| Supported Disc Format      | CD, CD-R/RW, MP3, WMA, HDCD   |
| Supported USB Format       | Max 64G, FAT32<br>MP3,WAV,APE,FLAC,AAC,WMA  |
| Electronic Skip Protection | 40 seconds of anti-shock protection for CD,<br>120 seconds of anti-shock protection for MP3     |

## 8. Warranty

This product is guaranteed for 12 months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

### Customer Service:

Telephone: +44 (0) 845 250 0586 (Carrier Rates Apply)

Email: [service@augustint.com](mailto:service@augustint.com)

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>

### **Industry Canada Statement**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

No Unauthorized Modifications: Do not make any changes or modifications to this product without the prior express written approval of August International Ltd. Any changes or modifications made without express written approval could void the user's authority to operate this product.

For details of further relevant technical standards, please contact us at the address above.