 


COSLUS

C51

Oral Irrigator

User Manual

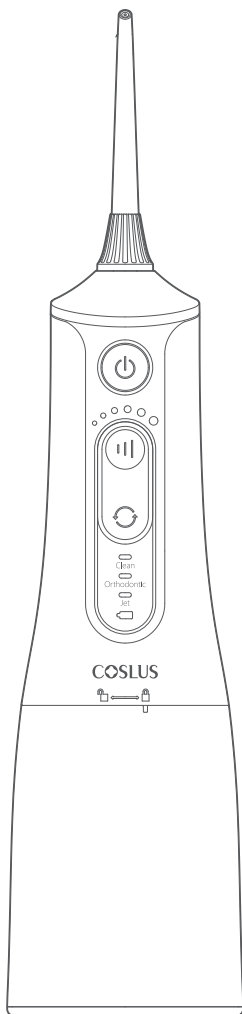



IMPORTANT SAFETY CAUTIONS

All information in this part is provided to instruct you to use the appliance in a correct and safe way so that you can avoid injuries to yourself and others as well as damage to property.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the charging cable provided with the appliance and a power adapter that meets the specified requirements.
- Never alter the appliance. Also, do not try to disassemble or repair it.
- The battery must be removed from the appliance before it is scrapped.
- Unplug the appliance from power supply when removing the battery.
- The battery should be disposed of safely.
- Regarding how to remove the battery, please refer to disposal instruction.
- Do not fill the tank with water warmer than 40°C.
- If the external flexible cable or cord is damaged, please ask the manufacturer, service agent or qualified professional person for help to avoid hazard.
- Keep the cable or cord away from heated surfaces.
- Please do not use it if you lost the nozzle.
- Do not submerge the device in water.
- Do not use for any purpose other than oral cleaning.
- Keep nozzle away from small children. The nozzle is small enough to be swallowed and can be lodged in the throat.
- Certain types of mouthwash may damage the appliance by causing the housing or water reservoir to crack. Therefore, do not fill water tank with mouthwash.
- People who is suffering from tooth or gum pain may not be able to use the appliance and should consult their dentist before use.
- Do not press the nozzle too firmly against your teeth or gums, or it may cause injury.
- Oral Irrigator must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

Product specifications

Model	C51
Charge Input	5V $\equiv$ 2A (Max)
Voltage	3.7V
Power	4.5W
Battery capacity	800mAh
Noise	<72dB
Waterproof rating	IPX7
Water pressure range	30-130PSI
Storage temperature	0-40°C
Humidity	20%-85%
Atmospheric pressure	70-106kPa
Water tank capacity	300ml


Package list

- 1 Main unit × 1
- 2 Standard jet nozzle × 2
- 3 Orthodontic nozzle × 1
- 4 Tongue scraper × 1
- 5 User manual × 1
- 6 USB cable × 1 (adapter is not included)

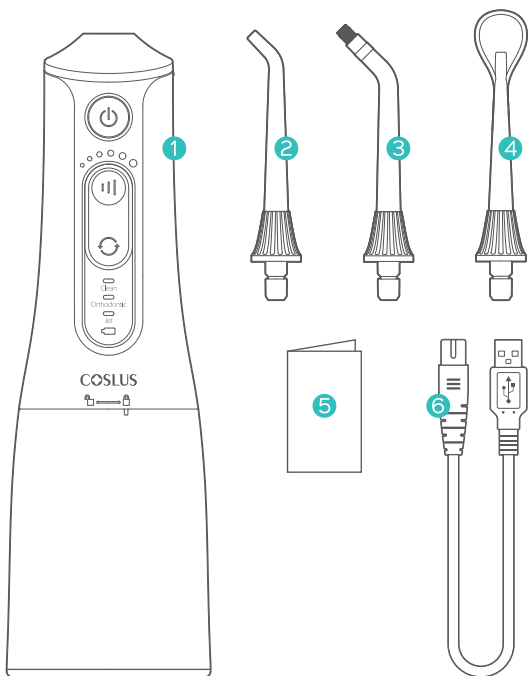

Product overview

- a. Nozzle
- b. On/Off button
- c. Pressure indicator
- d. Pressure button
- e. Mode button
- f. Mode indicator
 - Clean
 - Orthodontic
 - Jet
- g. Charging indicator
- h. Charging port
- i. Charging port cover
- j. Nozzle release button
- k. Nozzle suction tube
- l. Filter
- m. Water tank
- n. Water injection port
- o. Water tank cover

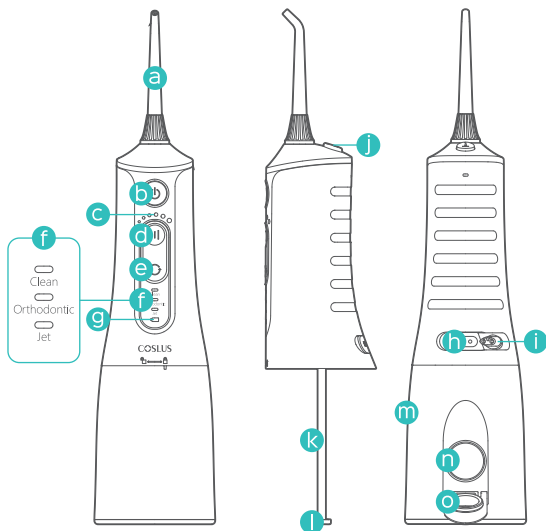


Note: There may be some liquid remaining inside the main appliance before use (tank, water suction tube, etc), this is the remaining distilled water for performance (water flow) test, so there are no health concerns.

Nozzle introduction

Standard Jet Nozzle: daily clean teeth, gum line, fissure, remove food residue, stain, plaque, etc.




Standard jet
nozzle × 2

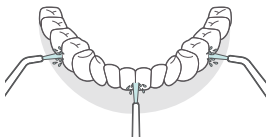

Orthodontic Nozzle: clean bridge and teeth with braces, suitable for those who wear braces or have dental implant.



Orthodontic
nozzle × 1

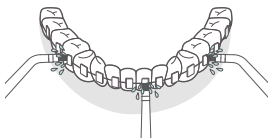

Tongue Scraper: clean tongue surface, remove bad breath, food residue and thick tongue fur. When cleaning tongue, please use the soft mode. Lean forward, put scraper on your tongue and turn it on, then move gently from back to front. You can adjust water pressure according to your need.



Tongue scraper
× 1




Note: It is recommended to replace cleaning nozzle every 6 months for better cleaning experience.

Use instruction

How to charge


1. Take charging port cover down, securely plug USB cable into charging port of the appliance. (Make sure no liquid remaining inside the port before plugging.)
2. Connect the charging adapter securely with the power outlet.
3. “” indicator blinks during the appliance is charging. When fully charged, it will remain steady for 30 seconds and then turn off.
4. Cover charging port again after charging is finished.

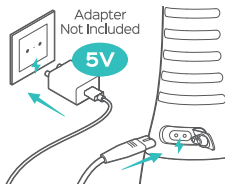


Note: If “” indicator blinks during or after an irrigating, that means the battery need to be recharged. One full charging will take about 2 hours.

How to operate

1. Attach nozzle onto the main unit.

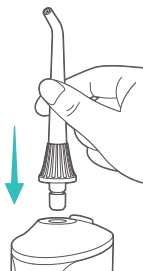

2. Fill the tank with water(not exceed 40°C) by opening and closing the cap of water tank. Or slide the tank body clockwise to pull it. After filling water, attach the tank to the main unit again.

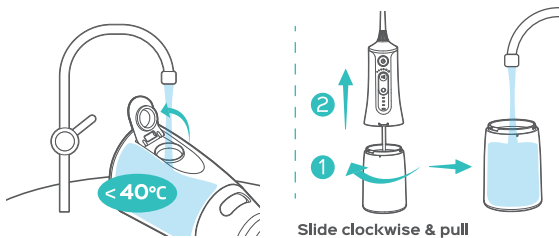


3. Press “↻” button to select desired mode. During irrigating, you can change the working mode.

Mode introduction

Clean: effectively removes debris between teeth.

Orthodontic: designed for orthodontic patients, used with orthodontic nozzle to clean bridges or braces.

Jet: keep pressing the power button to start cleaning, then release the button to stop. Jet Mode requires no manual shutdown.

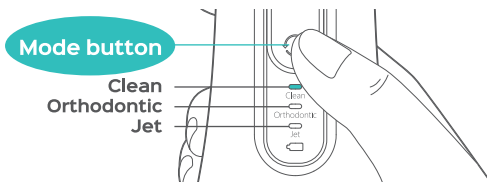


4. Press pressure button to adjust suitable water pressure.

Water Pressure Introduction

Level 1-2: beginners, children, sensitive gums.


Level 3-4: experienced users.

Level 5-6: healthy gums and experienced users.

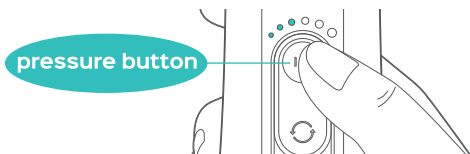


Note: Steps below are very important. Improper operations may cause water leaking or spilling during use.

5. Hold the main unit upright with the nozzle point toward your teeth.
6. Keep your mouth open slightly so that water can flow out.

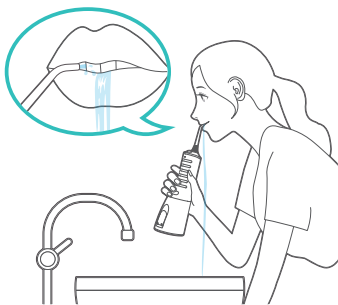


7. Press “On/Off” button to start irrigating.
 - 1). Direct water flow at 90° to the teeth and gums
 - 2). Direct water flow slowly along the teeth
 - 3). Direct water flow along the gum line with nozzle at 90°
 - 4). Clean between the teeth and around any braces, crowns or bridgework thoroughly

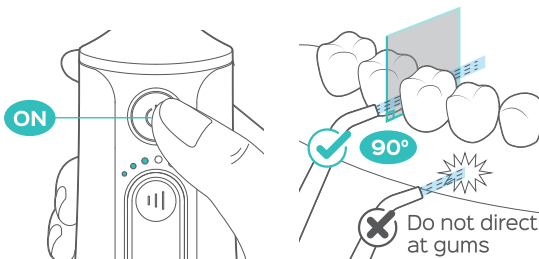

8. After irrigating is finished, press "On/Off" button again to turn off. (Auto shut-off after 2 minutes)



9. Press nozzle release button to remove the nozzle.

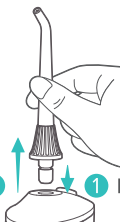

Remove the nozzle 2 **1 Press the button**

10. Nozzle storage: Insert a nozzle into the hole of main unit bottom for travel use.




Maintenance instructions

After using

1. Remove the water tank and pour out water inside.
2. Clean the tank inside with cleaning brush, then invert and air dry.

3. Press On/Off button to turn it on and drain water from the hose, press On/Off button again to turn off.
4. Wipe the product with a dry cloth, then place upturned main unit into the tank for storage.

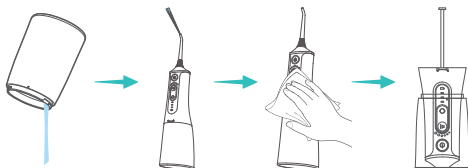

Note: To prevent bacteria breeding, make sure there is no remaining water inside. If you're not going to use the appliance for a long time, be sure to wipe and dry it before storing.

Maintenance

Use only water or neutral cleaning agent to clean the appliance. Never use caustic or abrasive agents (e.g., vinegar or lime scale removers), since they may cause damage to the appliance. Do not use water over 40°C. Keep the appliance away from high temperature and avoid direct sunlight.

• Main unit

1. Wipe the dirt by cloth with soapy water.
2. Do not submerge the main unit in water to clean.
3. Dry after washing with water.

• Water tank cap

Wipe off any grime and dirt with a cloth.

• Nozzle

1. Wash with water and wipe with soft cloth.
2. Replace the nozzle every 6 months.

• Water suction tube

1. Wash with water and wipe with soft cloth.
2. Do not bend, pull or twist the water suction tube.

• Tank


1. Wash with water and wipe with soft cloth.
2. Dry the tank when not using for a long period.

Troubleshooting

Problem	Cause	Solution
Water does not come out	Negative pressure caused by not using for a long time.	Full fill the tank with water, invert the device and shake it to eliminate negative pressure.
		Install the nozzle on the main unit, suck out the air from nozzle with mouth to eliminate negative pressure
	You've just purchased the appliance or it has been left unused for a period.	Pull out the nozzle, then flush nozzle hole on the body.
It does not work	You've just purchased the appliance or it has been left unused for more than 3 months.	Charge the appliance for at least 2 hours.
It only works for a few minutes even after charging	The battery has reached the end of its service life.	Contact service center for support.
	Charging time was insufficient.	Charge the unit for at least 2 hours.
Water pressure is very low	There is dirt stuck in the nozzle.	Replace the nozzle.
	The nozzle is deformed.	
	There is dirt stuck in the filter.	Clean the filter.


Disposal / disassembly instructions

The rechargeable battery inside your appliance is easy to remove for recycling. At the end of its service life and prior to disposal, please remove the rechargeable battery following the instructions below.

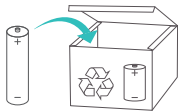


Note: During below operation, be sure to protect your eyes, hands, fingers, and the surface on which you work.


1. Remove the nozzle and twist off the water tank.

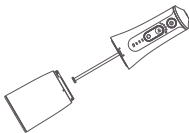


2. Pry open the top cover using a flathead screwdriver.

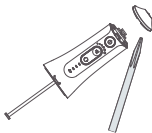

3. Remove the two screws at the bottom, then extract the movement assembly.

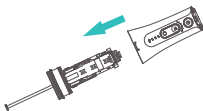

4. Cut the battery wires with scissors and remove the battery.

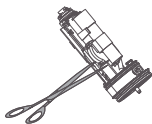

Warm Tip: If you have recycling questions, please contact your local waste management office.



Coslus Group

CONTACT

✉ support@coslus.com  www.coslus.com

☎ +1(855) 594-3950 (9am-5pm Mon. - Fri. (EST))

Made in China



Intertek
4001301

CONFORMS TO STD.
UL60335-1&60335-2-52

V1.2