

OK TO WAKE!

Alarm Clock & Night-Light

enaroo™

Instructions For Use

Model No. OTW091-US



Batteries Not Included

Requires four (4) 1.5V AA (LR6) batteries. Phillips head screwdriver (not included) required for battery replacement. Adult supervision recommended.

IMPORTANT SAFETY INSTRUCTIONS

For your protection, please read these safety instructions completely before operating this product. All operating and use instructions should be followed. All warnings printed on the device and in the operating instructions should be adhered to. Please keep this manual for future reference.

Batteries

Adult supervision is recommended when changing batteries. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the item before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Do not mix old and new batteries. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the item. The supply terminals are not to be short-circuited. Dispose of batteries safely. Batteries may explode or leak if disposed of in a fire.

Moisture & Heat

Do not use this device near water. For example, do not use this device near a bathtub, wash bowl, kitchen sink or laundry tub. Do not place water-filled vessels on this device. Do not place this device near any heat sources such as radiators, stoves, amplifiers or other devices that produce heat. Do not place an open flame on or near this device.

Object & Liquid Entry

Never insert objects of any kind into this product, through ventilation openings, as these objects may touch dangerous voltage points or create a short circuit that could result in a fire or electric shock. Never spill liquid of any kind on or into the device.

Care & Maintenance

Use a soft, damp cloth to wipe down the unit. Do not use liquid, aerosol or abrasive cleaners. Product may wear over time, with use. Parents should periodically examine this product for potential hazards. Any potentially hazardous parts should be repaired or replaced. Keep packaging and manual for future reference.

Damage Requiring Service

Do not attempt to service the unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. All servicing should be referred to qualified personnel. This product should be fixed by qualified service personnel under the following conditions:

1. If liquid has been spilled, or objects have fallen into the unit.
2. If the unit is exposed to rain or water.
3. If the product does not operate normally when following the operating instructions.
4. If the unit has been dropped or damaged in any way.
5. When the product exhibits a distinct change in performance.

Replacement Parts

In the event that replacement parts are required, ensure that the service technician uses parts specified by the manufacturer or those deemed to be equivalent. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SERVICE CONTACT INFORMATION

Please visit onaroo.com for the most up-to-date contact information and for details regarding product servicing and/or warranty claims. You must receive a Return Merchandise Authorization (RMA) number before shipping any item to Patch Products. This product is distributed outside of the U.S., in select regions, by authorized distribution partners. Patch Products does not handle foreign warranty claims. For warranty service please contact your point of purchase for assistance. Patch Products products purchased from U.S. retailers and shipped to international locations are not covered under our domestic warranty policy.



We want your comments about our games, puzzles and toys. Contact us at:
Customer Service
1400 E. Inman Pkwy. Beloit, WI 53511
patch@patchproducts.com 1-800-524-4263
For more fun, visit patchproducts.com.

Introduction



Fig. 1 OK to Wake!™

The *OK to Wake!™ Alarm Clock & Night-Light* is a fun clock for kids that actually helps parents get more sleep!

The secret is the special night-light that can be set to turn green when it's OK to get out of bed to come see mom and dad.

You'll be amazed at how quickly kids learn and how excited they are when the clock glows green. Best of all, *OK to Wake!* does all the work while you catch up on your sleep!

Setup

Unpack *OK to Wake!* making sure to keep all packing materials away from children. The product comes with two interchangeable faceplates. The pre-installed green bug faceplate may be removed as follows:

- 1) If present, remove the adhesive tape at the bottom of the faceplate.
- 2) Slightly rotate the faceplate counter-clockwise and detach.
- 3) Remove the protective screen cover from the display.
- 4) Attach your favorite faceplate by aligning the tabs with the slots on the clock and rotating clockwise to lock it in place.

Insert four AA (LR6) batteries into the battery compartment under the clock. You'll need a small Phillips head screwdriver. Place the batteries over the ribbon to make removal easier next time. If the night light becomes dim or the clock doesn't work properly, it's time to change the batteries. See Fig. 2.

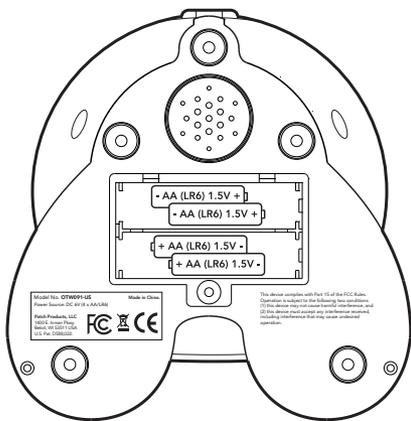


Fig. 2 Battery compartment

Setting the Time

When the batteries are first inserted, *OK to Wake!* beeps and displays "12:00 p.m." To set the correct time, open the rear door to reveal the control panel. See Fig. 3 below.

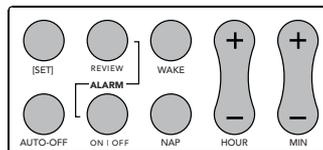


Fig. 3 Control panel

- 1) Hold down the SET button for two seconds. "SET" flashes and "12 Hr" is displayed. See Fig. 4.
- 2) Use the HOUR +/- buttons to toggle between 12- and 24-hour clock format. Tap SET to select the format and continue.
- 3) The clock displays "SET 12:00 p.m." (if in 12-hour format). See Fig. 5.

Use the HOUR +/- and MIN +/- buttons to adjust the time (hold down these buttons to scroll rapidly).

- 4) Press SET again when you are done to lock in the new time. "SET" disappears from the display.

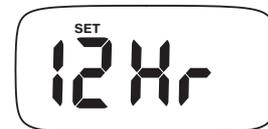


Fig. 4 Set clock format

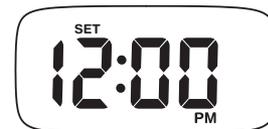


Fig. 5 Set time

Using the OK to Wake! Timer

The OK to Wake! night-light timer is an exciting new sleep aid for parents! OK to Wake! glows green in the morning at a time that you select. Kids quickly learn to stay in bed until "Green means GO!"

To set the OK to Wake! night-light timer:

- 1) Hold down the WAKE button for two seconds until "SET OK TO WAKE!" flashes on the display (OK to Wake! time is 6:00 a.m. by default). See Fig. 6.
- 2) Use the HOUR +/- and MIN +/- buttons to set the time you want the green light to turn on (For example, 7:00 am).
- 3) Press WAKE again to lock in the new setting and return to the time display. See Fig. 7.

Notice that "OK TO WAKE!" will remain on the display as a reminder that the OK to Wake! timer is active.

When the OK to Wake! time is reached, the clock will glow green and the lit bulb icon will appear in the display, letting your kids know that it is now OK to get up. See Fig. 8.

Pressing the left toe button will toggle the green light off and on. Pressing the right toe button will stop the OK to Wake! timer and turn off the green light.

Leave the OK to Wake! timer active if you want the green light to turn on every day. Toggle this function off and on by tapping the WAKE button.



Fig. 6 Set OK to Wake!



Fig. 7 OK to Wake! active



Fig. 8 OK to Wake! time

Note: At the OK to Wake! time, the clock glows green for 30 minutes (or the Auto-Off duration - see page 12). During this period, pressing the left toe button toggles the green light. After this period, the night-light color returns to yellow (if lit) until the OK to Wake! time on the following day.

Setting the Alarm

OK to Wake! can also be used as an alarm clock with snooze function. Note that the alarm is set and/or used completely independently from (or in conjunction with) the green night-light timer. To set the alarm:

- 1) Hold down the ALARM REVIEW button for two seconds until "SET" and the bell icon flash in the display. See Fig. 9.
- 2) Adjust the wake time (7:00 a.m. by default) using the HOUR +/- and MIN +/- buttons (press and hold these buttons to scroll rapidly).
- 3) Press ALARM REVIEW again to lock in your setting. The current time is displayed and the alarm is automatically activated (bell icon is displayed). See Fig. 10.

The alarm will sound each day. Toggle the alarm feature OFF at any time by tapping the ALARM ON | OFF button. When the alarm is off, the bell icon is not displayed. See Fig. 11.

Continued ...

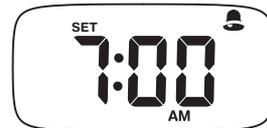


Fig. 9 Set alarm



Fig. 10 Current time



Fig. 11 Alarm off

Setting the Alarm

(Continued)

Review the currently set alarm wake time by tapping the ALARM REVIEW button. "REVIEW" appears on the LCD with the alarm wake time or "OFF". See Figs. 12 & 13.

When Alarms are Sounding

When the alarm is sounding, press the right toe button to turn it off.

Pressing the left toe button will snooze the alarm for 10 minutes ("SNOOZE" will appear in the display). Press the right toe button to cancel the snooze at any time. See Fig. 14.

When the alarm is sounding, an animation will make waking up more fun. See Fig. 15.



Fig. 12 Alarm set for 7:00 am

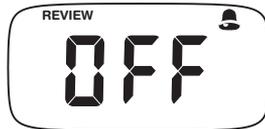


Fig. 13 Alarm disabled



Fig. 14 Alarm snooze

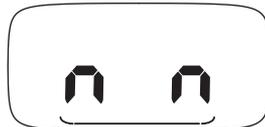


Fig. 15 Fun animation

Using the Nap Timer

OK to Wake! has a handy nap timer that makes it easy to set an alarm and/or a green light alert for naps during the day, without disrupting other settings.

To start a nap, just tap the NAP button. The nap timer will count down and chime after one hour. After one minute the display looks like Fig. 16 (the colon flashes).

The nap timer can be set to chime, turn on the green light, or both. This setting may be toggled by tapping the WAKE button during the nap or when setting the nap duration (see below).

To customize the nap timer duration:

- 1) Hold down the NAP button for two seconds until "SET NAP" flashes. See Fig. 17.
- 2) Adjust the nap duration (the length of the nap in hours and minutes) using the HOUR +/- and MIN +/- buttons.
- 3) Tap the WAKE button to select whether the alarm chime, green light, or both should turn on at the end of the nap.
- 4) Press NAP again when you are done. "SET" disappears and the nap begins (the colon flashes) automatically.

Toggle the nap function on or off at any time by tapping NAP. OK to Wake! remembers the nap duration that you last programmed.



Fig. 16 Nap timer running



Fig. 17 Set nap timer



Fig. 18 Nap ended, snooze on

Note: At the end of the nap, the alarm and/or green light will turn on. Press the right toe button to turn these off. Press the left toe button to snooze the alarm and/or light for 10 minutes (SNOOZE will appear in the display). You can press the right toe button to cancel the snooze at any time. Fig. 18.

Night-Light

The *OK to Wake!* clock also has a soft-glow, yellow night light that can be toggled on and off at any time by pressing the left toe button. The lit bulb icon appears in the display when the night light is on. See Fig. 19.

Note: If the *OK to Wake!* timer is on and the clock is green, pressing the left toe button will toggle the green light on and off, rather than the yellow light. See note on page 8.

Auto-Off

To save energy, the yellow and green night-lights will turn off automatically after a period of time (30 minutes by default).

This setting may be customized by tapping the AUTO-OFF button (0:15, 0:30, 1:00, 1:30 or 2:00). When the desired setting is displayed, stop tapping the AUTO-OFF button. After a moment the clock resumes ordinary time display, and the new auto-off setting is locked in. See Fig. 20.

Brightness

When the clock is displaying the time, you can adjust the display and night-light brightness by pressing the MIN +/- buttons. There are three distinct brightness settings. See Fig. 21.

Surprise

When the clock is displaying the time, press the right toe button for a fun surprise! See Fig. 22.

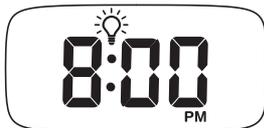


Fig. 19 Night-light on



Fig. 20 Set auto-off time



Fig. 21 Adjust brightness

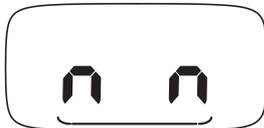


Fig. 22 Surprise!



Night Owl Portable Night-Light



OK to Wake!™ Owl with Night-Light & Music



Danny the Penguin Portable Night-Light



Teach Me Time!™ Talking Alarm Clock & Night-Light

Other Onaroo Products from Patch Products
Please visit us on the web at onaroo.com



LIMITED WARRANTY

Coverage

In the United States, Patch Products, LLC warrants this product against defects in original material and workmanship for a period of one year under normal use and conditions. Warranty coverage outside of the United States may vary. Please see information regarding non-U.S. warranty claims, below.

Non-Coverage

This warranty does not cover customer instruction, installation, or set up problems. This warranty does not cover cosmetic damage or damage resulting from acts of God, accident, misuse, abuse, negligence, commercial application (or rental), or modification. This warranty does not cover damage due to improper operation or maintenance, connection to an improper voltage supply, or attempted repair by anyone other than Patch Products, LLC or Patch Products, LLC authorized service facilities. This warranty does not cover products sold "as is" or "with all faults". This warranty is valid only in the United States and is invalid if the product serial number has been altered or removed.

Making a Warranty Claim - United States

Please check onaroo.com for the latest information pertaining to warranty claims. At the company's discretion, Patch Products, LLC will repair or replace the defective unit. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE, BEGINNING WITH THE ORIGINAL DATE OF PURCHASE. NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

Making a Warranty Claim - Outside of the United States

This product is distributed outside of the United States, in select regions, by authorized distribution partners. Patch Products does not handle foreign warranty claims. For warranty service please contact your point of purchase for assistance. Patch Products products purchased from U.S. retailers and shipped to international locations are not covered under our domestic warranty policy.



onaroo.com



Note: Due to production changes and improvements, actual product may vary slightly from images shown in manual and/or on packaging.