


skinnytaste.
BY vremi

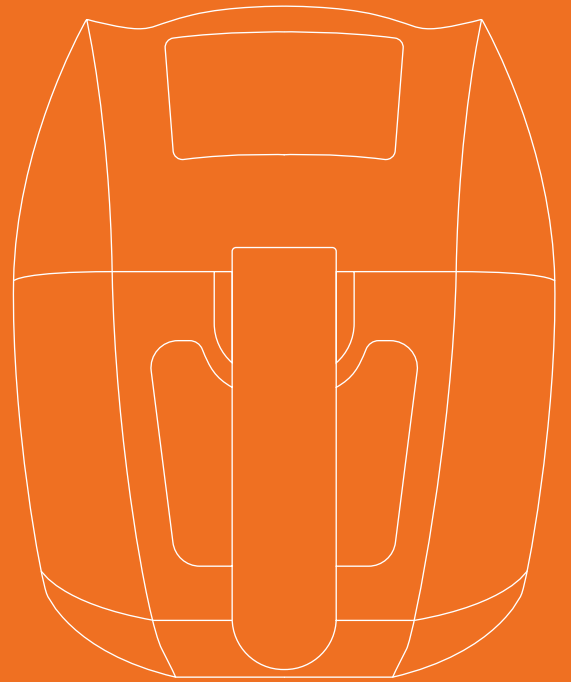

This Is A Manual.

Air Fryer

TABLE OF CONTENTS

Important Safety Instructions	5
Product Overview	6-7
Operation	8-9
Care & Cleaning	10
Troubleshooting	10
Warranty	11
Warning	11
Drop Us A Line	11

IMPORTANT SAFETY INSTRUCTIONS

Before using this appliance, please read the instructions carefully and keep them for future reference. Incorrect operation due to the ignoring of instructions may cause harm or damage.

DANGER

- Never immerse the whole unit in water nor rinse it under tap water (only the Frying Basket and Outer Pot are dishwasher safe).
- To prevent electric shock, do not let water or other liquid enter the appliance.
- Always put the ingredients that are to be fried into the Basket to prevent them from coming into contact with the heating elements.
- Do not cover the air inlet and the air outlet while the appliance is working.
- Do not fill the pot with oil as this may cause a fire.
- Never touch the inside of the appliance while it is working.
- Do not operate the Air Fryer with a damaged cord or plug, after the appliance malfunctions, or it has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination.

WARNING

- Check if the voltage indicated on the appliance corresponds to the local standard voltage before you connect it.
- Do not use the appliance if the plug, the main cord, or the appliance itself are damaged.
- If the main cord is damaged, you must have it replaced by an authorized service center or similarly qualified person in order to avoid a hazard.
- This appliance cannot be used by children ages 8 or under and by people with reduced physical capabilities.
- Children should be supervised around the appliance to ensure that they do not play with it.
- When the appliance is switched on or is cooling down, keep the appliance and its main cord out of reach of children younger than age 8.
- Keep the main cord away from hot surfaces.
- Do not plug in the appliance or operate the control panel with wet hands.
- Only connect the appliance to a grounded wall socket. Always make sure that the plug is inserted into the wall socket properly.
- In order to avoid a hazard, never connect this appliance to an external timer switch.
- Do not place the appliance on or near combustible materials, such as a tablecloth or curtain.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm (4 inches) of free space on the backside and above the appliance. Do not place anything on top of the appliance.
- Do not use the appliance for any other purpose than described in this manual.
- Do not let the appliance operate unattended.

- During hot air frying, keep your hands and face at a safe distance from the air outlet to protect yourself from hot steam and injury. When you open and remove the pot from the appliance, be careful of this hot steam.
- The housing may become hot during use.
- Immediately unplug the Air Fryer if you see dark smoke coming out of the appliance. Wait until the smoke is completely emitted before you remove the pot from the appliance.
- The pot becomes hot when it is used in the Air Fryer. Always use gloves when touching it.

CAUTION


- Place the appliance on a horizontal, even, and stable surface.
- This appliance is intended for normal household use only. It is not intended for use in environments, such as staff kitchens, offices, farms, or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts, and other residential environments.
- Always return the appliance to a service center authorized for examination or repair.
- Always unplug the appliance after use.
- Let the appliance cool down for about 30 minutes before handling or cleaning.
- Remove burnt remnants if the ingredients are overcooked.

SAVE THESE INSTRUCTIONS


For Household Use Only

Product Overview

Air Fryer

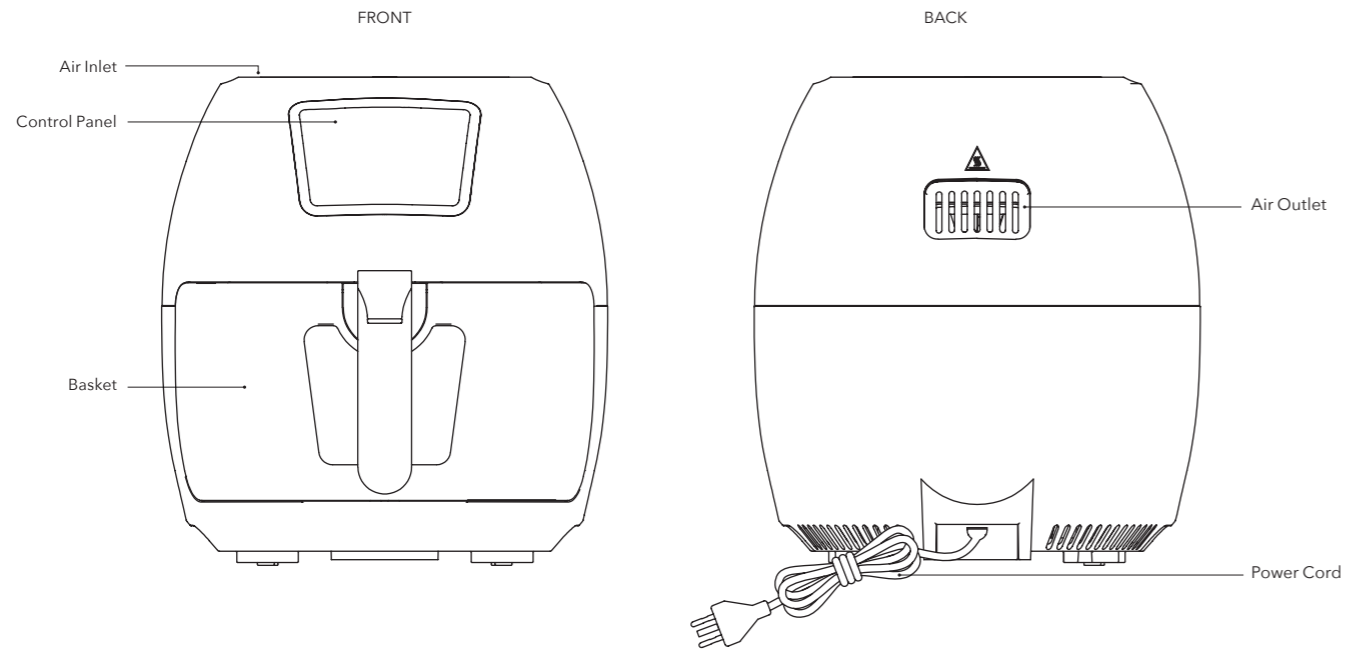


Outer Pot and Frying Basket

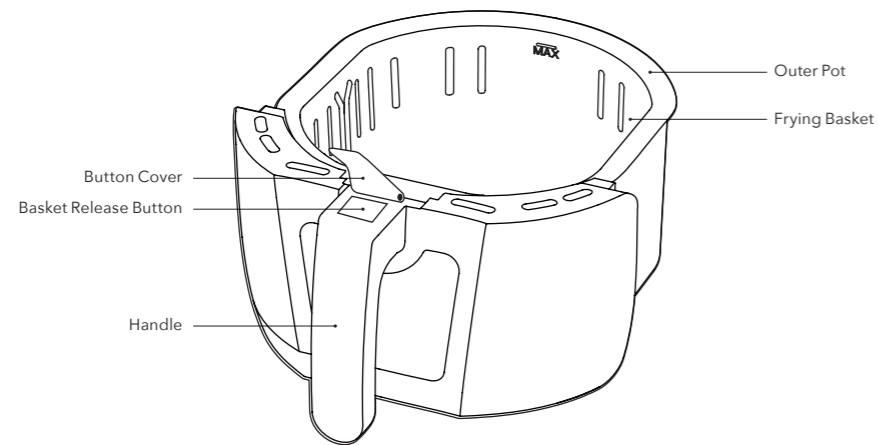

Product Overview

CONTROL PANEL

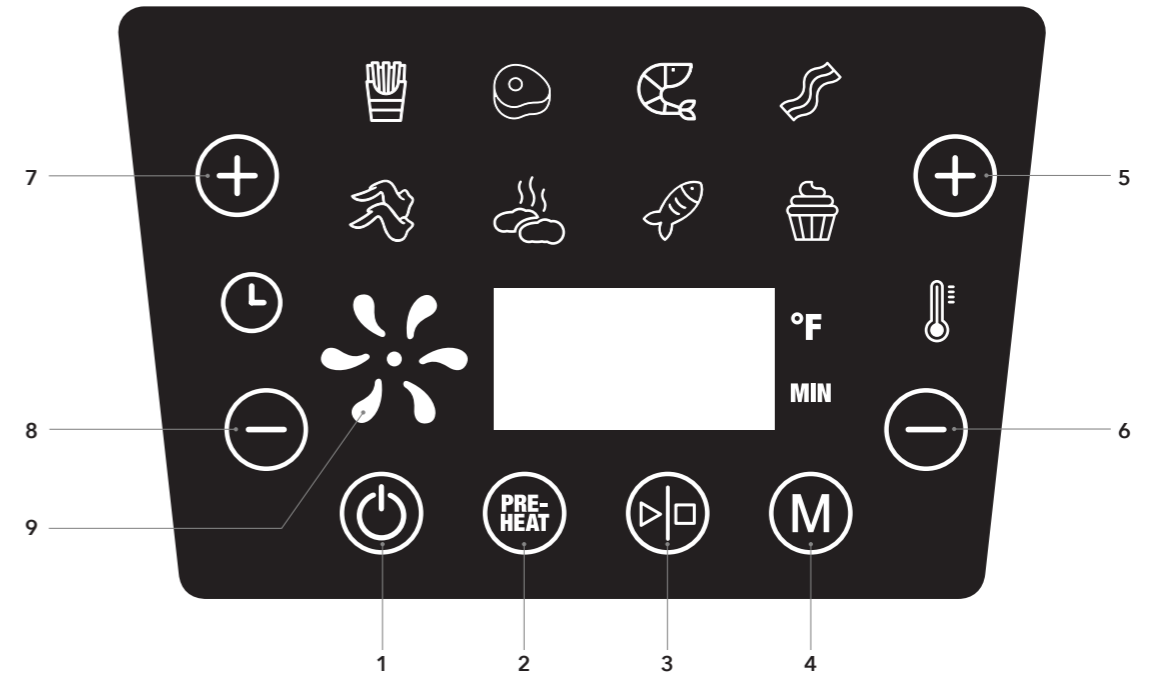

OPERATING BUTTONS

- POWER BUTTON (ON/OFF)** Press to turn the Air Fryer On/Off.
- PREHEAT** The default preset temperature is 360°F for 3 minutes. Press the **TEMPERATURE +** or **TEMPERATURE -** button to adjust it. The Air Fryer will beep and be ready for further operation once preheating is complete.
- START/STOP** Press to start or stop the cooking mode.
- MENU (M)** Press to select from various menus: preset functions, preheat, and manual.
- TEMPERATURE +** Use to increase the cooking temperature by 10°F with each press. Hold button down for rapid increase.
- TEMPERATURE -** Use to reduce the cooking temperature by 10°F with each press. Hold button down for rapid decrease.
- TIME +** Press to increase the cooking time by 1 minute for each press. Hold button down for rapid increase.
- TIME -** Press to reduce the cooking time by 1 minute for each press. Hold button down for rapid decrease.
- FAN ICON** Blue light indicates the fan is on and center red light signifies that the unit is heating.

8 FOOD PRESETS - MENU

Each food preset has a preprogrammed cooking temperature and time for the program.

It is recommended to flip foods over halfway through the cooking process for even heating.

	French Fries	380°F for 12 mins		Chicken Wings	400°F for 22 mins
	Pork Chops	400°F for 8 mins		Baked Potato	400°F for 35 mins
	Jumbo Peeled Shrimp	360°F for 6 mins		Fish	400°F for 7 mins
	Bacon	330°F for 12 mins		Muffins	300°F for 15 mins

NOTE: For best results, use fries that are 1/4 inch thick and pork chops that are 3/4 inch thick.

Operation

BEFORE FIRST USE

1. Remove all packaging material.
2. Always make sure the machine is unplugged and cooled before cleaning.
3. Thoroughly clean the Frying Basket and the Outer Pot with warm water, washing liquid, and a non-abrasive sponge. Then air-dry or towel-dry these parts.

NOTE: You can also clean these parts in a dishwasher.

4. Wipe the inside and outside of the appliance with a moist cloth.

NOTE: Do not fill the Outer Pot with oil or frying fat.

5. Place the appliance on a stable, horizontal, and level surface.

NOTE: Do not place the appliance on non-heat resistant surfaces.

6. Place the Frying Basket in the Outer Pot properly (Fig. 1).

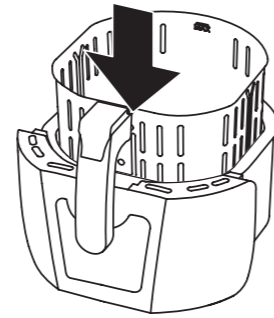


Fig. 1

USING YOUR AIR FRYER

1. Put the main plug in a grounded wall socket.
2. Carefully pull the Outer Pot out of the Air Fryer (Fig. 2).
3. Put the food ingredients in the Frying Basket (Fig. 3).

4. Insert the Outer Pot into the Air Fryer (Fig. 4).

NOTE: The Air Fryer will not work without the Basket fully inserted during cooking.

CAUTION: Do not touch the Outer Pot immediately after use. It is very HOT. Hold the Outer Pot by the Handle.

5. Press the Power Button to turn on the unit. The Air Fryer default setting is 360°F for 15 minutes.

PREHEAT RECOMMENDATION: Let the unit preheat for 3 minutes before adding ingredients.

The default preheat function is set at 360°F for 3 minutes. You may only adjust the temperature using the TEMP + or - buttons.

The fryer will beep once preheating is complete. Remove the Outer Pot and fill the Frying Basket with food.

6. Once the Basket is filled with your desired ingredients and you are ready to begin cooking, use the control panel to set your cooking mode. Choose between either manual mode or preset functions.

For manual operation, use the TEMP + or - and the TIME + or - to set your desired temperature and cook time.

NOTE: When using a food preset function, select the MENU (M) button to select from the 8 available preset functions.

Each preset has a preprogrammed cooking temperature and time that will display on the control panel.

To adjust, use the TEMP + or - and the TIME + or - to set your desired cook time.

7. Press the Start/Stop button to start cooking. The display shows the time countdown.

NOTE: Oil from the heated food will be collected on the bottom of the Outer Pot.

8. If you want to change the cooking side of your food or shake your food while cooking, pull the Outer Pot from the appliance with the Handle and change the cooking side. Shake the Basket back and forth to toss the ingredients. Then slide the Outer Pot back into the Air Fryer.

9. The unit will beep three times when the set cooking time has elapsed. Remove the Outer Pot and place it on a heat-resistant surface.

TIP: Press the Start/Stop button if you want to exit manually.

10. Check if the foods are ready. If the foods are not ready, simply slide the Outer Pot back into the appliance and fry for a few more minutes.

11. To remove foods of smaller sizes, such as french fries, open the Button Cover and press the Basket Release Button to remove the Frying Basket from the Outer Pot. (Fig. 5)

NOTE: Please do not turn over the Frying Basket before disassembling it from the Outer Pot. The oil on the bottom of the pot will flow back to the foods in the Frying Basket.

12. Empty the foods from the Basket into a bowl or onto a plate (Fig. 6).

NOTE: To remove large or fragile foods, pinch the food using tongs (Fig. 7).

Operation

USING THE APPLIANCE

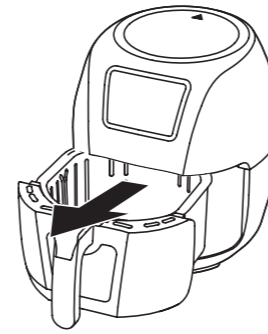


Fig. 2

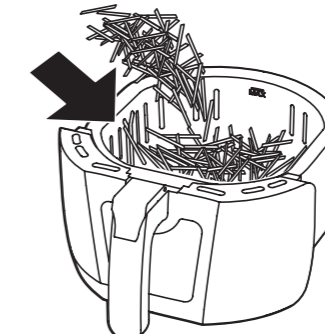


Fig. 3

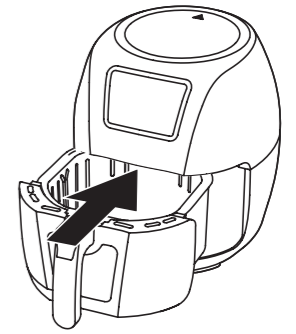


Fig. 4

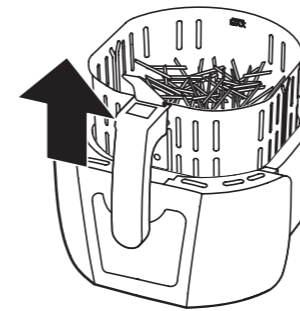


Fig. 5

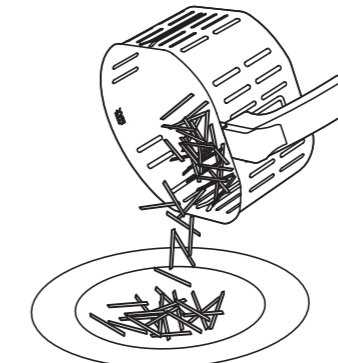


Fig. 6

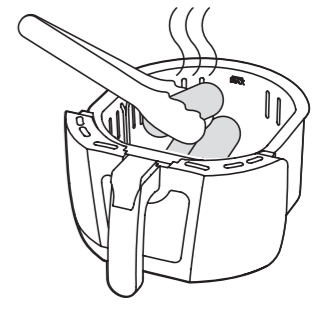


Fig. 7

TIPS

- Foods of smaller sizes usually require slightly shorter preparation time than larger ones.
- It is recommended to flip food over halfway through the cooking time to achieve even results.
- For a more crispy taste, add some oil to fresh potatoes and fry for a few more minutes.
- The optimal amount for preparing crispy fries is 500 grams (17.6 ounces).
- In general, snacks that can be cooked in an oven can also be cooked in the Air Fryer.
- You can also use the Air Fryer to reheat food. Set the temperature to 360°F for 10 minutes.

ENVIRONMENTAL PROTECTION

Do not throw away the appliance with the normal household waste. Recycle properly to an official collection point. By doing this, you are helping to save the environment.

Care & Cleaning

CLEANING

Clean the appliance after every use.

The Outer Pot, Frying Basket, and the inside of the appliance have a non-stick coating. Do not use metal utensils or abrasive cleaning materials to clean them. This may damage the non-stick coating.

1. Remove the main plug from the wall socket and let the appliance cool down.

NOTE: Remove the Outer Pot so that the Air Fryer cools down more quickly.

2. Wipe the exterior of the model and the control panel with a moist cloth.

3. Clean the Frying Basket and the Outer Pot with warm water, washing liquid, and a non-abrasive sponge.

NOTE: The Outer Pot and the Frying Basket are dishwasher safe.

4. Clean the interior with warm water and a non-abrasive sponge.

5. Never clean the main unit of the Air Fryer in the dishwasher.

6. Clean the Heating Element Cover by ensuring the cover is cool, then use water and a soft brush to scrape away excess food and residue.

STORAGE

Before storing the Air Fryer, unplug the appliance and let it cool down. Make sure all parts are clean and dry.

Troubleshooting

Before calling Vremi customer service, review this list. It may save you time and money. This list includes the most common occurrences that are not the result of defective workmanship or materials in this Air Fryer.

PROBLEM	CAUSE	POSSIBLE SOLUTIONS
The food is cooked unevenly.	Certain types of ingredients need to be shaken halfway through the cooking process.	For best results, food should be shaken halfway through the cooking process to avoid piling. Follow the instructions in this user manual.
Snacks are not crispy.	Some snacks are meant to be cooked in a deep fryer.	Lightly brush the snacks with oil for a crispier result. If you are air frying potatoes, cut the potatoes into thinner, smaller chips before cooking.
The Outer Pot does not slide into the Air Fryer properly.	The Basket is too full or the Handle is obstructing the Outer Pot.	Remove some of the food from the Basket. Push the Frying Basket down into the Outer Pot until you hear a click.
The Air Fryer produces white smoke.	You are preparing fatty ingredients or grease has accumulated from previous use of your Air Fryer.	The oil or rendered fat in the Outer Pot may cause white smoke and the pot may get hotter than usual. Carefully remove any excess oil or fat from the Outer Pot and then continue cooking. Clean the Outer Pot and the Basket after each use.
The Air Fryer has a plastic smelling odor inside the device.	It is normal for the inside of the Air Fryer to have a plastic odor when using it for the first time, as the internal wall of the device is made of plastic. The Air Fryer is FDA certified and the coating is PFOA free.	The plastic odor will go away after first-time use with one round of cooking and cleaning. The Air Fryer will not release any noxious gas.

Warranty

Vremi offers a 12-month warranty on all of our products purchased new and unused from Vremi LLC or an authorized reseller with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacturing, parts or workmanship during the Warranty Period. The warranty does not apply where damage is caused by other factors, including but without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modification of the product other than by Vremi. These are our general terms for the warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you experience an issue with a Vremi product, please contact us at support@vremi.com or (646) 490-9904, and we will do our best to resolve it for you.

Warning

This manual is to be used with all items with the model number

VRM010330N

WARNING: Keep all plastic bags away from children.

Manufacturer, distributor, importer, and seller are not liable for ANY damage caused by improper use, storage, care or failure to follow warnings associated with this product.

Drop Us A Line

CHAT WITH US

vremi.com/chat

CALL US

(646) - 490 - 9904

EMAIL US

support@vremi.com



vremi.com