



Wireless Activity + Sleep Wristband



*Product Manual*

# Table of Contents

- Getting Started ..... 1**
  - What's included.....1
  - Putting on your Flex.....1
    - Moving the clasp from the large to small wristband .....1
    - Inserting the tracker into the wristband.....2
    - Securing your wristband.....3
  - Care and wearing tips..... 4
- Setting up your Flex ..... 5**
  - Setting up your Flex with a computer .....5
    - Mac and PC requirements .....5
    - Downloading Fitbit Connect.....5
    - Installing Fitbit Connect and pairing your Flex .....5
    - Syncing your Flex.....5
  - Setting up your Flex with a mobile device..... 6
- Using your Flex ..... 7**
  - Wearing on your dominant vs. non-dominant wrist.....7
  - Using your Flex in wet conditions.....7
  - Understanding the LED indicator lights .....7
    - Goal tracking .....7
    - Sleep mode .....7
    - Charging.....8
    - Updating .....8
    - Alarms .....8
  - Charging your Flex.....8
- Tracking your Fitness with Flex..... 9**
  - Setting goals with Flex..... 9

Checking your goal progress .....	10
Tracking sleep with Flex .....	11
Using silent alarms .....	11
Setting silent alarms from a computer.....	11
Setting silent alarms from an iOS device .....	12
Setting silent alarms from an Android device.....	12
Dismissing silent alarms .....	12
<b>Using your Fitbit.com Dashboard.....</b>	<b>13</b>
Browser requirements .....	13
Adding and removing tiles.....	13
Managing your Flex from fitbit.com.....	13
<b>Updating your Flex .....</b>	<b>15</b>
Updating Flex using a computer .....	15
Updating Flex using an iOS device.....	15
Updating Flex using an Android device .....	15
<b>Restarting your Flex .....</b>	<b>17</b>
<b>Fitbit Flex General Info &amp; Specifications.....</b>	<b>18</b>
Sensors and motors.....	18
Size and weight .....	18
Environmental conditions .....	18
Help .....	18
Return policy and warranty .....	19
<b>Regulatory &amp; Safety Notices .....</b>	<b>20</b>
USA: Federal Communications Commission (FCC) statement .....	20
Canada: Industry Canada (IC) statement.....	20
European Union (EU) .....	21
Taiwan.....	21
Flex.....	21

Wireless sync dongle ..... 22

Other..... 22

Safety statement..... 23

Important safety instructions..... 23

Built-in battery precautions..... 23

Disposal and recycling information ..... 24

# Getting Started

---

## What's included

Your Fitbit Flex Wireless Activity + Sleep Wristband box includes:

- Flex tracker
- Charging cable
- Wireless sync dongle
- 1 small and 1 large wristband



Flex tracker



Charging cable



Wireless sync  
dongle



Wristbands


## Putting on your Flex

Your Flex comes with a large and a small wristband. If you want to use the small wristband, complete the next task before continuing. If you want to use the large wristband, skip the next task and go directly to “Inserting the tracker into the wristband” on page 2.

### Moving the clasp from the large to small wristband

If you choose the small wristband, you'll need to remove the clasp from the large wristband and put it into the small wristband. To do so:

1. Push the clasp out with one thumb from the inside of the wristband.
2. Pull out the clasp.
3. Insert the clasp into the small wristband by pressing a few times with both thumbs to ensure that the clasp is flat and in line with the wristband.

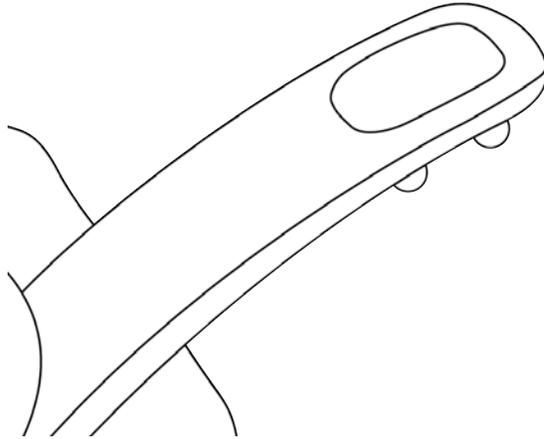


---

**NOTE:** If there is a bulge on the inside of the band between the two inside prongs of the clasp, find a small object like a credit card to push it flat.

---


### Inserting the tracker into the wristband

Hold the tracker in your hand with the grey arrow facing up. Insert this end into the wristband, with the arrow pointing toward the holes in the wristband.

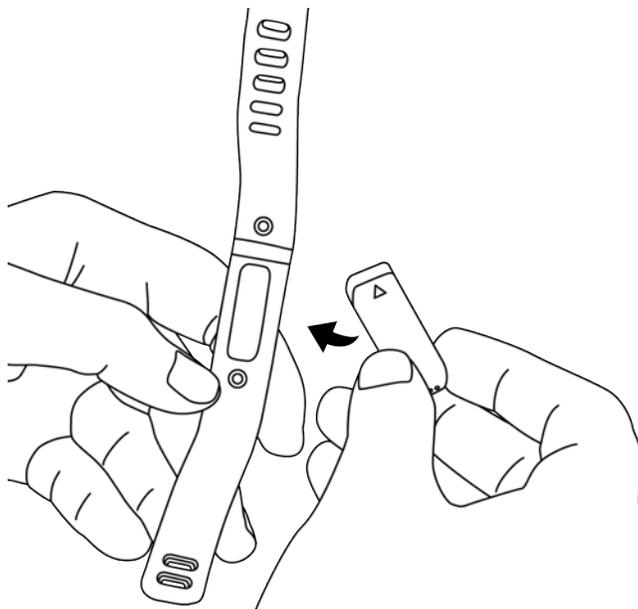


## Securing your wristband


1. Put on the wristband so the window of lights are closest to the outside of your wrist and facing you.
2. Align both ends of the wristband so they are directly overlapping each other with the clasp over the two holes that best fit your wrist.

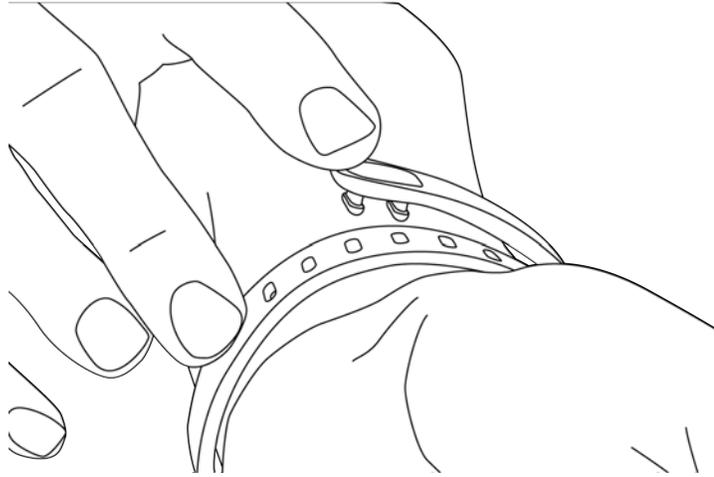

3. Squeeze both the clasp and the wristband between your thumb and forefinger until you hear a click.

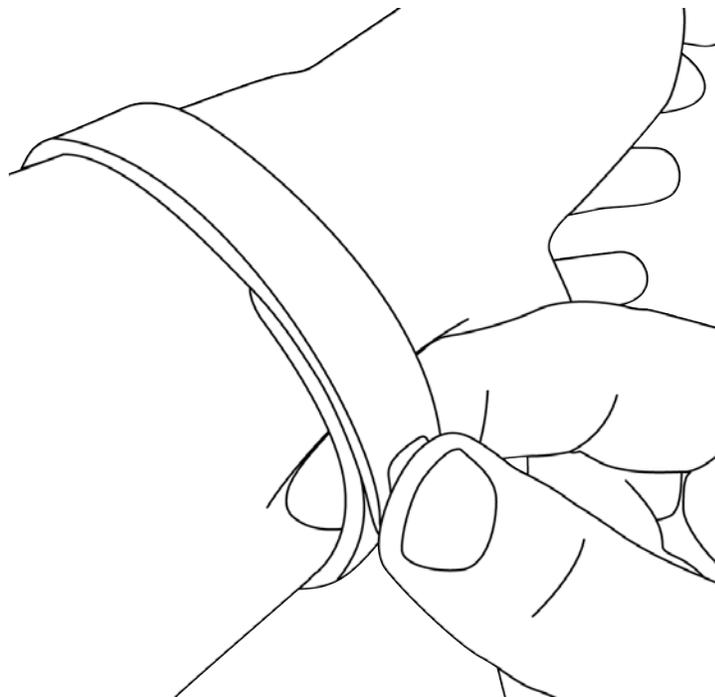

You'll know your Flex wristband is securely fastened if both ends of the wristband are fully inserted.

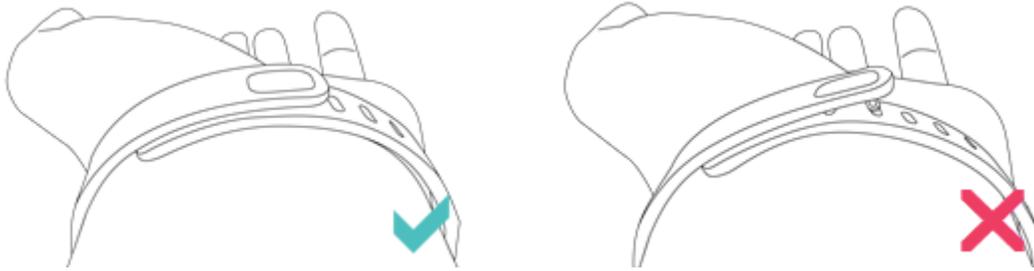

---

**NOTE:** If you're having trouble, try securing the wristband off your wrist to get a feel for how it securely clasps and then try again on your wrist.

---

## Care and wearing tips

Keep the following tips in mind when caring for your Flex:

- Clean and dry the Flex regularly, particularly under the band.
- Wear your Flex band loosely enough to allow air circulation.
- Use skin care products sparingly on the areas of the wrist covered by the Flex.
- If you notice any signs of skin irritation or experience any discomfort, please discontinue use.

# Setting up your Flex

---

You can set up your Flex using a computer or one of our mobile apps for iOS, Android, and Windows Phone.

## Setting up your Flex with a computer

To set up your Flex using your computer, you'll first install Fitbit Connect. Fitbit Connect is the software application that connects ("pairs") your Flex to your Fitbit.com dashboard, where you can view your data, log food, and more.

### Mac and PC requirements



**Software**  
Mac OS 10.5 or later  
Internet Connection

**Hardware**  
USB port



**Software**  
Windows XP, Vista, 7, 8  
Internet Connection

**Hardware**  
USB port

### Downloading Fitbit Connect

1. Go to <http://www.fitbit.com/setup>.
2. Verify that your computer type (Mac or PC) is highlighted, then click the **Download Here** button below the Flex image.
3. You'll be prompted to open or save the installation file. Choose to save the file.

### Installing Fitbit Connect and pairing your Flex

1. Plug your wireless sync dongle into your computer's USB port and have your charged tracker nearby.
2. Find the file you just downloaded. If you don't see it in your Downloads list, search for it using the file name:
  - For Mac: **Install Fitbit Connect.pkg**
  - For Windows: **FitbitConnect\_Win.exe**
3. Once you find the file, double-click it to begin installing Fitbit Connect.
4. Follow the brief onscreen instructions to finish setting up. You're ready to get moving.

### Syncing your Flex

Now that Fitbit Connect is installed, your Flex will automatically and wirelessly sync with your computer every 20 minutes or so if the following requirements are met:

- Your Flex is within 15-20 feet of your computer and has new data to upload (meaning if you haven't moved, an automatic sync won't occur).

- Your computer is powered on, awake, and connected to the Internet.
- The wireless sync dongle is inserted into a USB port and is recognized by the computer.

When Flex syncs, your data is uploaded to your Fitbit.com dashboard. Flex holds detailed minute-by-minute information for the most recent 7 days and daily activity summaries for 30 days. For the most accurate dashboard possible, sync your Flex regularly.

To manually synchronize your Flex with your dashboard, click the Fitbit Connect icon located near the date and time on your computer and click **Sync Now**.

## Setting up your Flex with a mobile device

You can set up and wirelessly sync your Flex using over 120 mobile devices that support Bluetooth 4.0 technology. To see if your mobile device is compatible for syncing with your Flex, visit [www.fitbit.com/devices](http://www.fitbit.com/devices). If your device is listed, you can then download our free iOS, Android, or Windows Phone apps. Once downloaded, open the app and follow the setup instructions provided.

---

NOTE: If your mobile device is not compatible to sync via Bluetooth 4.0, you can still use the Fitbit app to view your data and track your progress, you'll just need to set up and sync using a Mac or PC.

---

# Using your Flex

---

Your Flex is designed to be most accurate when worn on your wrist.

## Wearing on your dominant vs. non-dominant wrist

To get the most accurate reading from your Flex, make sure your account knows if you're wearing the wristband on your dominant or non-dominant wrist. Your dominant wrist refers to handedness, that is, the hand that you use for activities such as writing and throwing a ball.

To configure this setting:

1. Log in to Fitbit.com.
2. Click the gear in the top-right corner of the dashboard.
3. Click **Settings**.
4. Click **Devices** on the left sidebar.
5. Under Dominant Hand choose the correct setting.
6. Sync your tracker to save the change:
  - a. Click the Fitbit Connect icon near the date and time on your computer.
  - b. Click **Sync Now**.

## Using your Flex in wet conditions

Your Flex can be worn while you are in the shower or working out. It is sweat-proof, rain-proof, water resistant, and can be submerged in water up to ten meters.

## Understanding the LED indicator lights

Your Flex features a display that consists of 5 LED indicator lights. The lights behave differently depending on what the tracker is doing.

### Goal tracking

The indicator lights illuminate as you hit 20% increments towards your goal. Tap your Flex to see your progress. When you reach your goal, Flex will celebrate by buzzing and flashing its lights.

### Sleep mode

When you tap your Flex rapidly for one or two seconds to enter sleep mode, it will vibrate and display two slowly dimming lights. During sleep mode, two blinking lights alternate. After you tap your Flex rapidly to exit sleep mode, it will vibrate and flash all five lights three times and then display a spinning light pattern.

## Charging

While your Flex is charging, an indicator light will pulse to show the battery level every few seconds. Each indicator light represents progress towards the total charge. When the Flex has charged completely, all 5 indicator lights will blink.

## Updating

If an update fails to complete, your Flex's LED indicator lights may cycle back and forth repeatedly, from left to right, and your Flex may no longer respond to taps, charging, or resets.

## Alarms


When a silent alarm goes off, the Flex vibrates and the center light flashes.

## Charging your Flex

Your Flex comes equipped with a rechargeable lithium-polymer battery.

With normal use, your Flex should last about five days before needing a charge. You can check the level of your battery by logging in to [Fitbit.com](http://Fitbit.com) and clicking on the gear icon on the top-right corner of the page.

To charge your Flex, plug the charging cable into the USB port on your computer. Remove the tracker from the wristband, and insert it into the charging cable, with the LED indicator lights facing up.

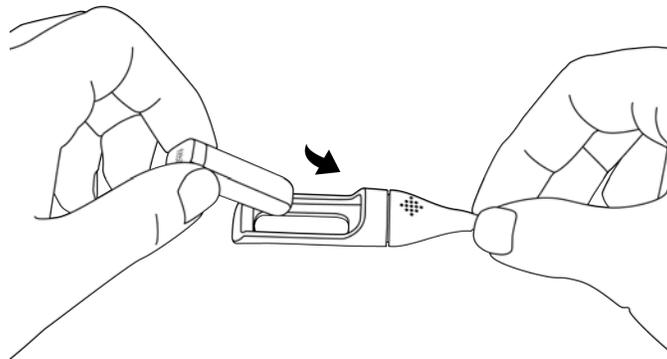

The LED indicator lights will progressively illuminate on your Flex as it charges. Each light represents 20% of the maximum charge. Once all five lights pulse in unison, your Flex will be fully charged. Charging completely can take up to three hours.

# Tracking your Fitness with Flex

---

Your Flex tracks:

- Steps taken
- Calories burned
- Distance traveled
- Active minutes
- Time asleep
- Number of times awoken

## Setting goals with Flex

Your Flex is designed to track your progress towards one specific goal that you define on your Fitbit.com dashboard. Goals can be set for steps taken, calories burned, or distance traveled.

To choose the specific goal you want to track:

1. Log in to your Fitbit.com dashboard.
2. Click the gear icon in the top-right corner of the page.
3. Click **Settings**.
4. Click **Devices**.
5. Under Daily Goal Progress, choose the goal you would like to track.
6. Sync your Flex to send the new goal to your tracker.

---

**Note:** Your Flex starts tracking your goal for the next day at midnight, according to the time zone you've selected for your account. The reset that occurs at midnight does not delete the previous day's data; all your data will appear on your dashboard when you sync your tracker.


---

Once you've chosen which goal you want to track, you can set a specific value for that goal on the Fitbit.com dashboard page or using the Fitbit app for mobile. For example, instead of the default 10,000 steps per day, you may want your goal to be 15,000 per day. To change your goal value using your dashboard:

1. Log into your Fitbit.com dashboard.
2. Find the tile that corresponds to your goal.
3. Click the gear icon in the lower left corner of the tile.
4. Change your **Daily Goal** value.


# Checking your goal progress

Tap your Flex twice to see the LED indicator lights indicate your progress towards your goal.

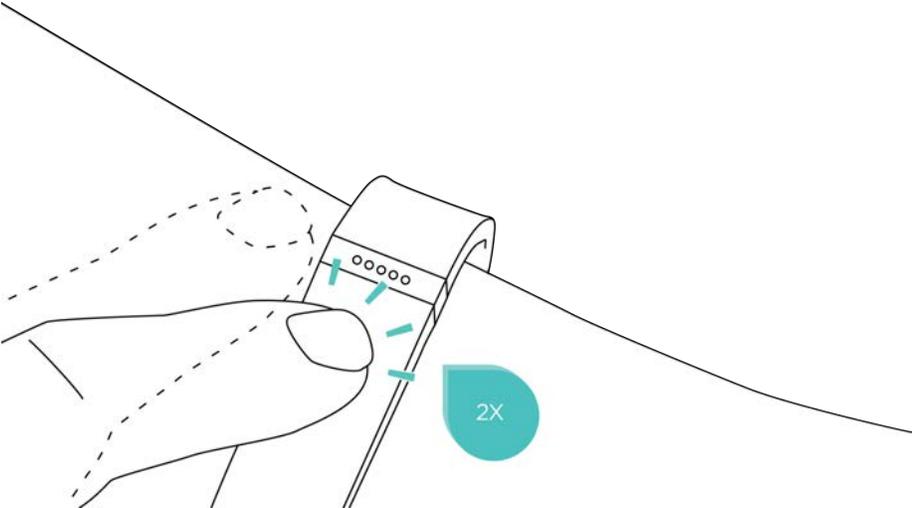

Each fully lit indicator represents 20% of your total goal. A blinking light shows the current segment of the goal you're working on.

In the example below, two lights are solid and the third is blinking. This means you've achieved between 40% and 60% of your overall goal.

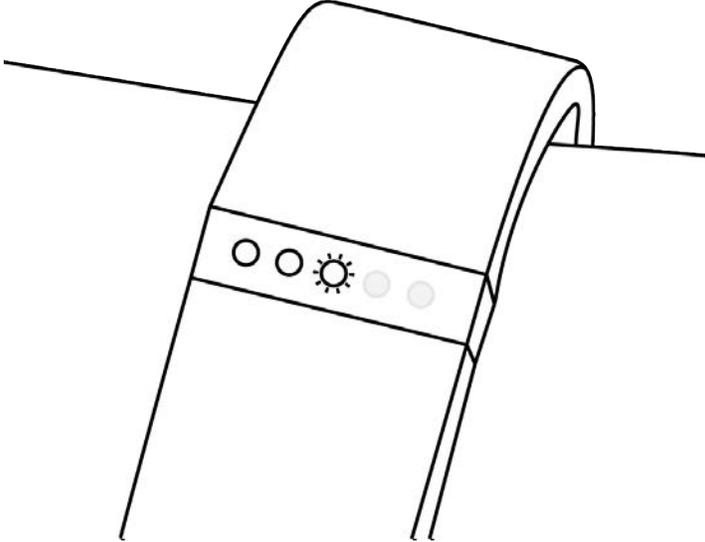

When you reach your goal, your Flex will vibrate and flash the LED indicator lights to celebrate.


## Tracking sleep with Flex

Your Flex can track the length and quality of your sleep to help you improve your sleeping habits.

To enter sleep mode, tap your Flex rapidly for one to two seconds. It will vibrate and display two slowly dimming lights to indicate that sleep mode has begun.

---

**NOTE:** During sleep mode, your Flex will not display goal progress if you double tap. Instead, it will alternate two blinking lights, back-and-forth, to indicate that you are in sleep mode.

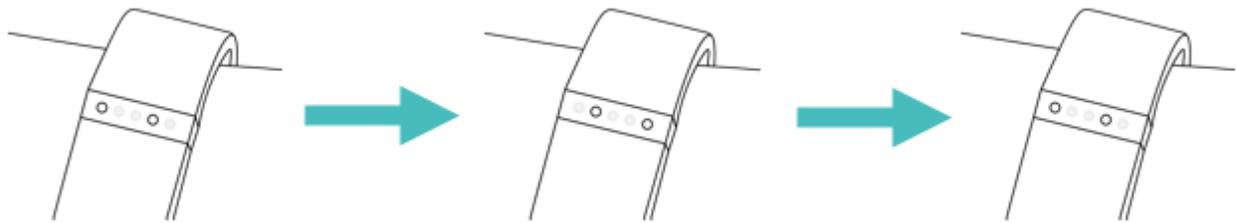

---

When you wake up, tap your Flex rapidly for one to two seconds to exit sleep mode. Upon exiting sleep mode, your Flex will vibrate and flash all five LED indicator lights.

If you forget to put your Flex into sleep mode, you can always enter your sleep time at <http://www.fitbit.com/sleep>. After creating a record, you will be able to view your sleep efficiency. You can view your sleep data on the Fitbit.com dashboard or in the Fitbit mobile app.

## Using silent alarms

You can set up to eight gently vibrating silent alarms on your. Silent alarms can be configured to recur every day, or on particular days of the week.

### Setting silent alarms from a computer

You can set silent alarms from your computer by using the Fitbit.com dashboard.

1. Log in to your Fitbit.com dashboard and click the gear icon in the top-right corner of the page.
2. Click **Settings**.
3. Click **Silent Alarms**.
4. Click the **Add Alarm** button.
5. Enter the time you want the alarm to alert you.
6. Choose how often you want the alarm to occur:
  - a. Once – Your alarm will alert you at the specified time, and not repeat.
  - b. Repeats – Choose which days you want this alarm to repeat every week.
7. Click **Save**.
8. Sync your changes to your tracker:
  - a. Click the Fitbit Connect icon located near the date and time on your computer.

- b. Click **Sync Now**.

## Setting silent alarms from an iOS device

To set silent alarms using the Fitbit app for iOS, first make sure Bluetooth is enabled in your iOS settings.

1. Open the Fitbit app and tap **Account**.
2. Tap **Silent Alarms**.
3. Tap **Set a New alarm**.
4. Set the time by adjusting the click-wheel.
5. If applicable, tap the days of the week you want this alarm to repeat. (for example, at 7:00 AM, every weekday)
6. Tap **Save** and then sync your tracker:
  - a. Make sure your Flex is close to your mobile device.
  - b. In the app, tap **Account** > **Flex** > **Sync Now**.

## Setting silent alarms from an Android device

To set silent alarms using the Fitbit app for Android, first make sure Bluetooth is enabled in your Android device settings and in the Fitbit app.

1. Open the Fitbit app and tap the menu button.
2. Tap **Device Settings**.
3. Choose **Flex**.
4. Tap **Silent Alarm**.
5. Tap **Add a new alarm**.
6. Tap **Next**.
7. Tap **Add a new alarm**.
8. Tap the time to enter a time.
9. If you prefer, tap the **Repeats** checkbox and tap the days of the week you want this alarm to repeat.
10. Tap **Done**.
11. Tap the **Sync tracker to save alarms** button.

## Dismissing silent alarms

Your Flex will vibrate and the LEDs will illuminate when your silent alarm goes off. This notification will repeat three times or until dismissed. You can dismiss the alarm by tapping a few times after the vibration has stopped.

You'll know your alarm has been dismissed when one light appears in the middle of your Flex's display, then slowly fades. If you do not dismiss the alarm, your Flex alarm will repeat in nine minutes.

# Using your Fitbit.com Dashboard

Fitbit provides a free online tool — the Fitbit.com dashboard — to help you track, manage, and evaluate your fitness progress. Use the dashboard to see your progress towards goals, analyze details about specific activities or exercises, view historical graphs, and log food.

## Browser requirements

Browser	Mac Version	Windows Version
 Apple Safari	5.0.5 and higher	Not Supported
 Google Chrome	12 and higher	12 and higher
 Microsoft Internet Explorer	Not Supported	8 and higher
 Mozilla Firefox	3.6.18 and higher	3.6.18 and higher

## Adding and removing tiles

Information on the dashboard is organized by tile. Add or remove tiles to customize the dashboard. If you remove a tile, you can add it back at any time.

To add a tile:

1. Click the grid icon on the upper left side of the dashboard.
2. Check the tile(s) you want to add, then click **Done**.

To delete a tile:

1. Hover over a tile until you see the gear icon at the lower left.
2. Click the gear icon, then click **Remove Tile**.
3. When prompted, confirm that you want to remove the tile.

## Managing your Flex from fitbit.com

To manage various settings for your account, click the gear icon in the top right corner of your Fitbit.com dashboard and select **Settings**. From here you can edit

your personal information, your notification preferences, your privacy settings, and much more.

Click **Devices** to change the following settings for your Flex:

- **Daily Goal Progress:** Choose which goal you want your Flex to display when checking your progress. You can edit the value of this goal from the Fitbit.com dashboard.
- **Dominant Hand:** Choose which wrist you wear your Flex on to get the most accurate data readings.
- **Sleep Tracking:** Set the sensitivity of your sleep. The Normal setting is sufficient for most people. If you are a sound sleeper, you can choose Sensitive to capture the smallest movements of your body.

Your changes will take effect after you sync your tracker.

# Updating your Flex

---

Free feature enhancements, product improvements, and bug fixes are occasionally made available through firmware updates. You can update your Flex on your computer using Fitbit Connect, or by using a Fitbit mobile app. We recommend keeping your Flex up to date.

## Updating Flex using a computer

To update your Flex on a Mac or PC.

1. Make sure your wireless sync dongle is plugged in and that your Flex is charged.
2. Click the Fitbit Connect icon near the time and date on your computer.
3. Click **Open Main Menu..** and then click **Check for device update.**
4. Log in to your account using your Fitbit.com credentials. Fitbit Connect will now look for your Flex. You can make Flex easier to find by tapping it twice to wake it up.
5. If an update is found for your Flex, Fitbit Connect displays a progress bar representing the update's progress. Keep your Flex close to your computer during the update.

You'll receive a notification when the update is complete. If you have trouble updating your Flex, see <http://help.fitbit.com>.

## Updating Flex using an iOS device

To update your Flex from an iOS device:

1. Make sure your Flex is charged and then open the Fitbit app on your iOS device.
2. Tap your tracker name at the top of the app dashboard. You'll be taken to your tracker's device settings page.
3. Tap **Sync Now.**
4. Tap the **Update Available** button at the top of the page. The option only appears if a update is available.

Make sure your Flex remains near your mobile device during the update. You can make your Flex easier to find for your mobile device by tapping it twice to wake it up.

You'll receive a notification when the update is complete. If you have trouble updating your Flex, see <http://help.fitbit.com> for more information.

## Updating Flex using an Android device

To update your Flex from an Android device:

1. Make sure your Flex is charged and then open the Fitbit app on your Android device.

2. Tap the **Menu** button.
3. Tap **Device**.
4. Choose **Flex** from the menu, then keep your Flex close to your mobile device while the app searches for your Flex. You can make Flex easier to find by tapping it twice to wake it up.
5. Tap the **Update Available** button at the top of this screen. If this option doesn't appear, no update is available.

You'll receive a notification when the update is complete. If you have trouble updating your Flex with the Fitbit app for Android, see <http://help.fitbit.com> for more information.

# Restarting your Flex

---

Restarting your Flex turns it off and then back on, which may fix any of the following problems if they happen to occur:

- Your Flex is not syncing
- Your Flex is not responding to movement
- Your Flex isn't tracking your steps
- Your Flex isn't responding to taps

To restart your Flex:

1. Remove the tracker from the wristband.
2. Plug your charging cable into the USB port and insert your tracker into the charging cable.
3. Insert a paperclip into the small pinhole on the back of the charger.
4. Press on the pinhole for 3-4 seconds. Your Flex will restart and you can put it back in the wristband.

If restarting your Flex doesn't resolve your issue, go to <https://help.fitbit.com/> and click the Flex image. From here you can browse or search for troubleshooting information or contact Customer Support if you don't find what you're looking for.

# Fitbit Flex General Info & Specifications

## Sensors and motors

Your Flex uses a MEMS 3-axis accelerometer that measures your motion patterns to determine your calories burned, distance traveled, steps taken, and sleep quality. Flex also contains a vibration motor, which allows it to vibrate when alarms go off.

## Size and weight

	Length	Width	Weight
Small wristband (incl. tracker)	5.5 – 6.9 in 140 – 176 mm	0.6 in 13.99 mm	13.4 grams
Large wristband (incl. tracker)	6.3 – 8.2 in 161 – 209 mm	0.6 in 13.99 mm	14.6 grams

## Environmental conditions

Operating Temperature	-4° to 113° F (-20° to 45° C)
Non-operating Temperature	-22° to 140° F (-30° to 60° C)
Water Resistant	Device is water resistant and can be submerged up to 10 meters.
Maximum Operating Altitude	30,000 feet (9,144 m)

## Help

Troubleshooting and assistance for your Flex can be found at <http://help.fitbit.com>.

## Return policy and warranty

Warranty information and the Fitbit.com Store Return Policy can be found online at <http://www.fitbit.com/returns>.

# Regulatory & Safety Notices

---

Model Name: FB401

## USA: Federal Communications Commission (FCC) statement

This device complies with FCC part 15 FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device meets the FCC and IC requirements for RF exposure in public or uncontrolled environments.

## Canada: Industry Canada (IC) statement

IC Notice to Users English/French in accordance with RSS GEN Issue 3:

This device complies with Industry Canada license exempt RSS standard(s).  
Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada RSS standard exempts de licence (s). Son utilisation est soumise à Les deux conditions suivantes:

1. cet appareil ne peut pas provoquer d'interférences et
2. cet appareil doit accepter Toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC ID XRAFB401

IC ID 8542A-FB401

## European Union (EU)

Declaration of Conformity with Regard to the EU Directive 1999/5/EC

Fitbit Inc. is authorized to apply the CE Mark on Flex, Model FB401, thereby declaring conformity to the essential requirements and other relevant provisions of Directive 1999/5/EC.



Compliant with the standard R&TTE 99/CE/05

Conforme à la norme R&TTE 99/CE/05

## Taiwan

Flex




CCAJ15LP1140T1

## Wireless sync dongle



## Other

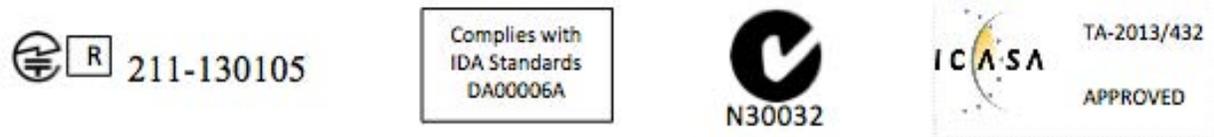

אישור התאמה 51-37156

אין לבצע כל שינוי טכני בחלק המודולארי של המוצר.

**“ 해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다. ”**

- 사용 주파수 (Used frequency): 2402 MHz-2480 MHz
- 채널수 (The number of channels): 40
- 공중선전계강도 (Antenna power): 0.4 dBi
- 변조방식 (Type of the modulation): Digital
- 안테나타입 (Antenna type): Horizontal
- 출력 (Output power): 2.19 mW/MHz E.I.R.P.
- 안테나 종류 (Type of Antenna): PCB



### **KCC approval information**

- 1) Equipment name (model name) : 무선데이터통신시스템용 특정소출력무선기기 FB401
- 2) Certificate number : MSIP-CRM-XRA-FB401
- 3) Applicant : Fitbit, Inc.
- 4) Manufacture: Fitbit, Inc.
- 5) Manufacture / Country of origin: P.R.C.

## Safety statement

This equipment has been tested to comply with safety certification in accordance with the specifications of EN Standard: EN60950-1:2006 + A12: 2011.

## Important safety instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings
- Follow all instructions
- Do not attempt to open the tracker. Substances contained in this product and/or its battery may damage the environment and/or human health if handled and disposed of improperly.
- Do not tamper with your Flex.
- Do not use abrasive cleaners to clean your Flex.
- Do not place your Flex in a dishwasher, washing machine or dryer.
- Do not expose your Flex to extremely high or low temperatures.
- Do not use your Flex in a sauna or steam room.
- Do not leave your Flex in direct sunlight for an extended period of time.
- Do not leave your Flex near open flames.
- Do not dispose of your Flex in a fire. The battery could explode.
- Do not attempt to disassemble your Flex. It does not contain serviceable components.
- Never allow children to play with the Flex; the small components may be a choking hazard!

## Built-in battery precautions

- Do not attempt to replace your Flex' battery. It is built-in and not changeable.
- Charge the battery in accordance with the instructions supplied with this guide.
- Use only the charger that shipped with your product to charge the battery.
- Charge your Flex using a certified computer, powered hub or power supply
- Do not attempt to force open the built-in battery.
- Your product uses a California Energy Commission battery charger.

## Disposal and recycling information



The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centers so as to help conserve natural resources. Each country in the European Union should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off point, please contact your local electrical and electronic equipment waste management authority or the retailer where you bought the product.

Le symbole sur le produit ou sur son emballage signifie que ce produit à la fin de sa vie doit être recyclé séparément des déchets ménagers ordinaires. Notez que ceci est votre responsabilité d'éliminer les équipements électroniques à des centres de recyclage afin d'aider à préserver les ressources naturelles. Chaque pays de l'Union européenne a ses centres de collecte et de recyclage pour le recyclage des équipements électriques et électroniques. Pour plus d'informations ou trouver un centre de recyclage, contactez votre commune ou le magasin où vous avez acheté le produit.

- Do not dispose of the Flex with household waste.
- Batteries are not to be disposed of in municipal waste stream and require separate collection.
- Disposal of the packaging and your Flex should be done in accordance with local regulations.



