

MASSAGE CHAIR USER MANUAL



Read Carefully Before Use
Keep for Future Reference

Safety Information

Warning!

- Consult your doctor before use, especially if you have a preexisting heart condition, sensitivity to heat, or insensitivity to pain or heat. Do not use if you suffer from osteoporosis, internal injury or malignant tumours, skin ulcers or other serious skin condition, vertebral malformation, or any joint disease. Do not use while pregnant or while using any medical implant such as a pacemaker.
- Stop using this device **IMMEDIATELY** if you feel any discomfort during use.
- **DO NOT** allow people unfamiliar with this device or these instructions to operate it. Do not let children under the age of 12 or people with compromised physical or mental capabilities use this device. Do not use this device while under the influence of drugs or alcohol.
- **DO NOT** use while wearing jewellery or any other hard objects. Empty any pockets before use.
- **ONLY** use for personal home massage and comfort. Do not use to replace any medical treatment or to provide any professional service.
- **ONLY** use with a stable and compatible power source. In case of power loss during operation, switch off this device **IMMEDIATELY** and then unplug it until power is restored. Do not move this device by pulling on its power cord.
- **DO NOT** leave this device unattended during use.
- **DO NOT** use this device around flammable, explosive, or corrosive objects or fumes and never smoke on or near this device.
- **DO NOT** get this device wet, operate it with wet hands, or use it in highly humid environments.
- **DO NOT** load with more than 150 kilograms at one time. Do not stand or sit on the armrests, leg rests, backrest, or headrest.
- **DO NOT** use your hands to apply pressure or play with the massage rollers or extend any body parts under the cover of the massage rollers.
- **DO NOT** move this device while someone is sitting in it. Before lowering the backrest or leg rest, ensure no people or items are underneath.
- **DO NOT** overuse this device. The recommended use is 30 minutes per day per person.
- Use and store this device indoors in a location away from direct sunlight, rain, or snow.
- Keep this device clean and avoid letting any foreign objects enter its vents, power inlet, etc.
- **ALWAYS** disconnect this device from its power source before any cleaning, maintenance, or repair.
- **DO NOT** operate this device if it malfunctions or shows signs of damage. Repair or replace damaged components before further use. Never replace any parts with non-identical ones.

Specifications


Input Power	220–240 V~ 50 Hz
Rated Power	90W
Fuse Type	F5AL125/250V (5 × 20 mm)
Timer Range	15–30 min.
Backrest Inclination Range	100°–180°
Audio Connection	Bluetooth (AMY-888)
Dimensions	150 × 75 × 97 cm (60 × 30 × 38 in.)
Leg Rest Width	15 cm (6 in.) ea.
Weight Capacity	150 kg (330 lb. or 23 st. 8 lb.)
Net Weight	48 kg (105 lb.)

Package List


Item	Name	Qty.
1	Main Body with Controller	1
2	Power Cord	1

Product Diagram

Massage Chair

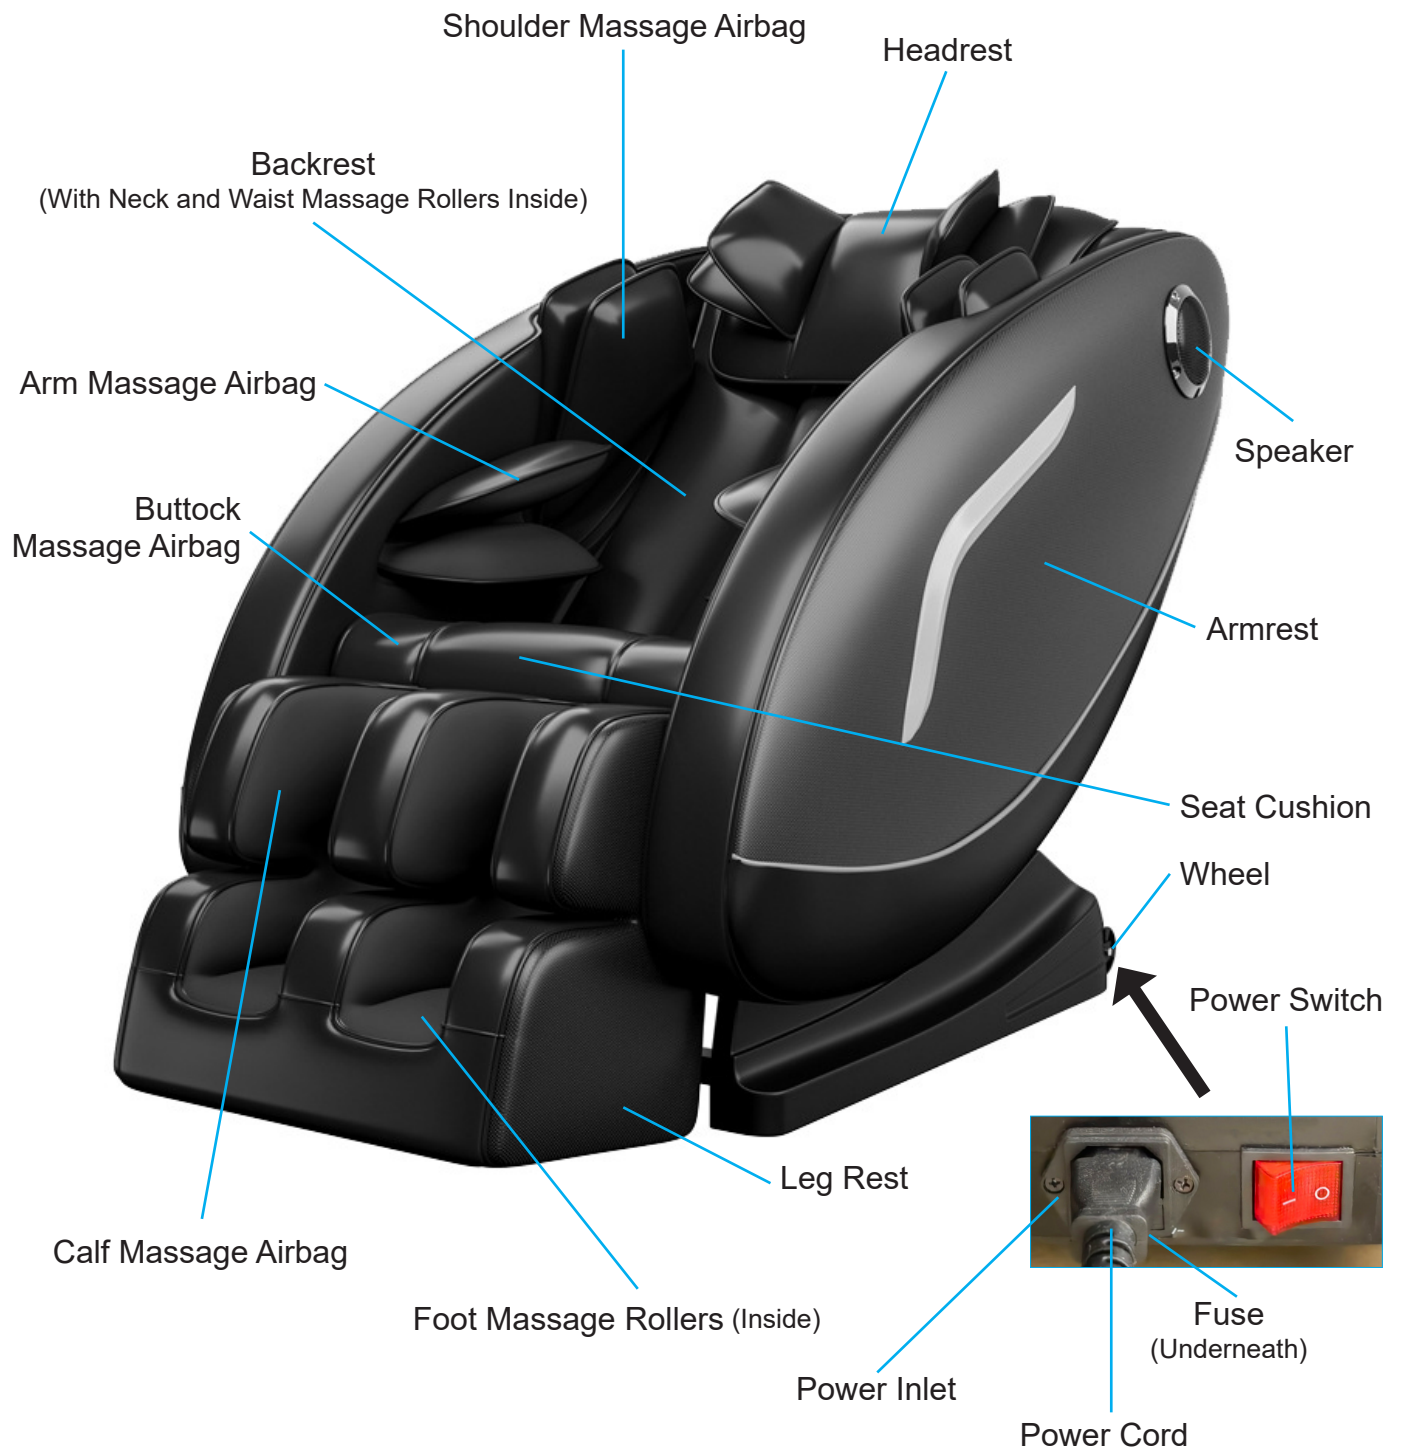

LED Screen

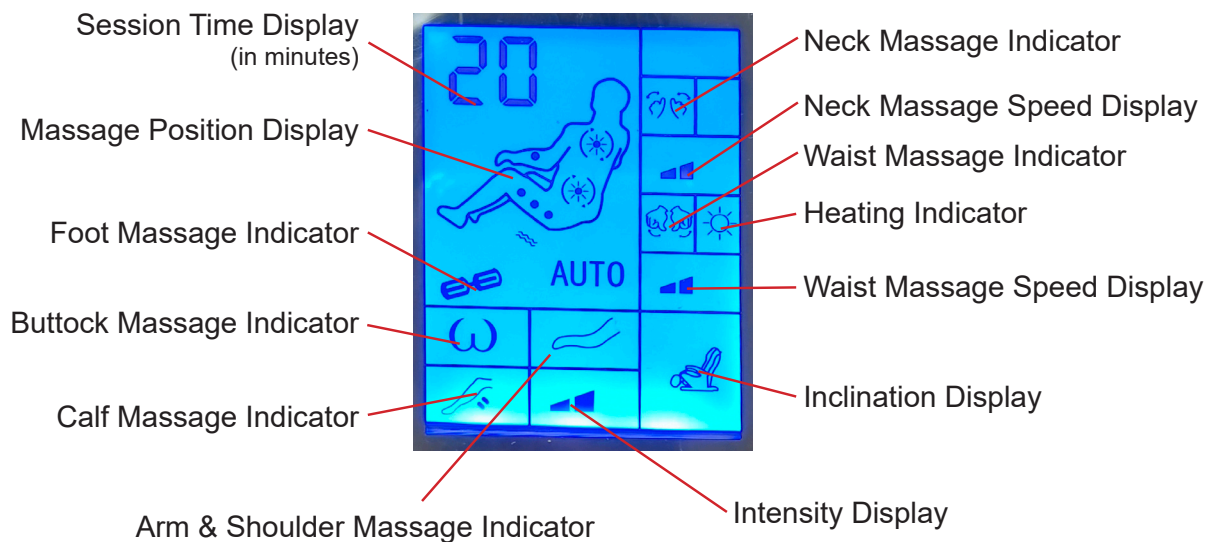

Control Panel



	Activates the chair with preset full-body massage & sets the timer
Auto	Activates, pauses, & reactivates full-body massage
Kneading	Activates & deactivates neck massage
Massage	Activates & deactivates waist massage
Upper Model	Toggles between 2 neck or waist massage modes
Lower Model	Activates & deactivates foot massage
Speed	Adjusts the speed of neck and waist massage
Wobbling Mode	Activates & deactivates automatic adjustment of the chair's incline during massage
Hips	Activates & deactivates buttock massage
Calf	Activate & deactivates calf massage
Arm	Activates & deactivates arm & shoulder massage
Vibration	Activates & deactivates seat vibration
Pressure	Activates & deactivates arm and shoulder, buttock, and calf massage together
Intensity	Adjusts the intensity of arm and shoulder, buttock, and calf massage
Heat	Activates & deactivates heating
Back Ascend	Adjusts the inclination of the chair forward and upward
Back Descend	Adjusts the inclination of the chair backward and downward

Operation

1. Connect the chair to a stable and compatible power socket with the provided power cord. Do not use a 3-to-2 prong adapter or an ungrounded extension cord.
2. Flip the power switch to **I** at the lower right corner of the chair's back.
3. Seat yourself comfortably on the chair.
4. Press **⏻** on the controller to start the preset full-body massage, which provides neck, arm, shoulder, waist, buttock, calf, and foot massage simultaneously. The preset programme will apply various inclines, roller motions, speeds, and intensities by itself. The length of the session will count down on the display. To pause the full-body massage, press **Auto**.

5. The controller can also customise your massage and focus on particular body parts as needed.

For time adjustment, press **⏻** to toggle the session length to 15, 20, 25, or 30 minutes. For neck massage, press **Kneading**. To change the neck rollers' motions, press the upper **Model** button to toggle modes. To adjust the massage speed, press the **Speed** buttons to move up or down its 4 levels.

For waist massage, press **Massage**. To change the waist rollers' motions, press the upper **Model** button to toggle modes. To adjust the massage speed, press the **Speed** buttons to move up or down its 4 levels.

For foot massage, press the lower **Model** button.

For automatic adjustment of the chair's incline, press **Wobbling Mode**. The preset programme will shift the chair's inclination by itself during any other massage.

For buttock massage, press **Hips**. To adjust the massage intensity, press the **Intensity** buttons to move up or down its 3 levels.

For calf massage, press **Calf**. To adjust the massage intensity, press the **Intensity** buttons to move up or down its 3 levels.

For arm & shoulder massage, press **Arm**. To adjust the massage intensity, press the **Intensity** buttons to move up or down its 3 levels.

For vibrating massage, press **Vibration**.

To activate the airbag massage without the kneading neck, waist, and foot massage, press **Pressure**.

To activate the chair's heating elements, press **Heat**. Take care if you are sensitive to heat.

For incline adjustment, hold **Back Ascend** or **Back Descend** until the desired position is reached.

6. To use the chair's speakers, connect your phone or computer to the chair's Bluetooth name, AMY-888. The connection can be used to play music, audiobooks, or phone calls as you enjoy your massage. Make any necessary adjustments directly from your device. End the Bluetooth connection to turn the speakers off.
7. The chair will turn off automatically at the end of a timed massage. To end a custom massage or end a timed massage immediately, hold **⏻** until the chair stops.

When finished with your chair, flip the power switch to **O**.

Maintenance

- Turn off and unplug this device prior to any cleaning, maintenance, or repair.
- Clean the exterior of this device periodically.

For all vents, the power inlet, and the speakers, dust them with a soft dry brush or cloth.

For all non-electric parts, wipe them with a soft damp cloth. Do not rinse them or use abrasive cleaners or caustic chemicals. Allow all parts to dry completely before further use.

- Check the parts of this device for any wear or damage after use. Repair or replace any problematic parts before further use.
- If this device will not be used for an extended period of time, clean it, disconnect it from its power source, and cover it with a dust-free cloth before storing in a cool, dry, and clean place.

Troubleshooting

Problems	Possible Solutions
There are noises during operation.	Some small noises from the massage nodes, vibration and massage motors, air bags, etc. are perfectly normal and no cause for concern.
	Loud or sharp noises may indicate worn or damaged components. Cease use and have the chair examined by a trained technician.
There is smoke or any abnormal smell during operation.	IMMEDIATELY turn off and unplug the chair. Contact customer service or a trained technician for repair or replacement.
The chair does not turn on or the controller does not function correctly.	Ensure the power cord is firmly and fully inserted into the power inlet and an appropriate power socket.
	Check for damage to the power cord. Replace it if necessary.
	Check the power switch to ensure the chair is turned on.
	Check the fuse beside the power inlet. Replace it if necessary.
The chair suddenly stops working.	The device's temperature may be too high from extended use. Allow it to cool to a safe temperature before continued use.
	Check the fuse beside the power inlet. Replace it if necessary.

Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at **help@cs-supportpro.com** and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.

