



⑤

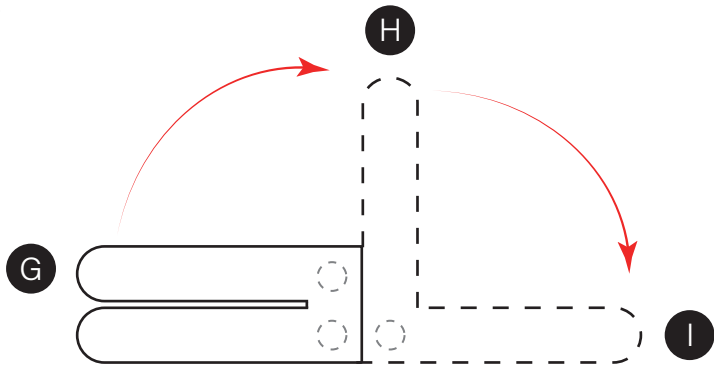

STEP 5

When the floor chair is in a folded state and needs to be used again, you need to first pull back the top of the backrest from position G to position H, and then continue to pull back to the position I, it can be restored to the original 180° flat state, and then finally carry out the second step to adjust the floor chair to your comfortable use of the position.


FASTMOMENT

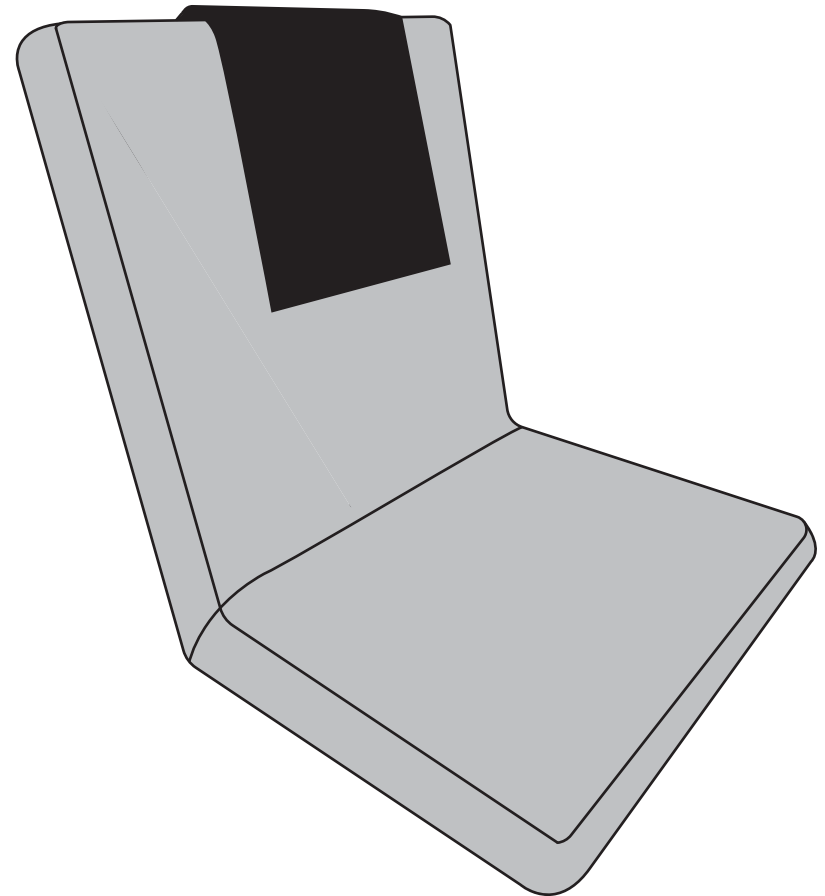

14-POSITION ADJUSTABLE FLOOR CHAIR

INSTRUCTIONS FOR USE

①

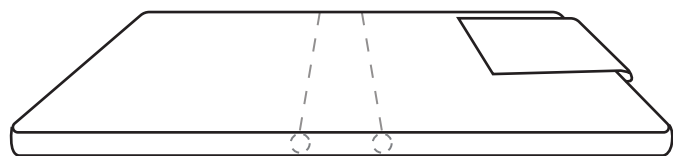


Japanese KoYo Bearings for
adjusting backrest position

Japanese KoYo Bearings for
folding floor chair

STEP 1

When you take the floor chair out of the box, it is in its original 180° unfolded position.

②

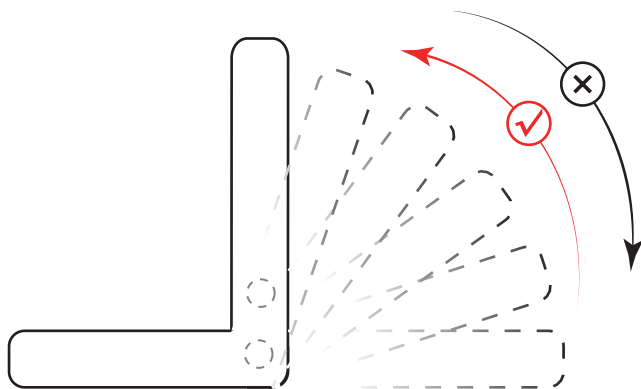


14 positions between 90° and 180°

STEP 2

Place the floor chair flat on the floor, press down on the end of the seat cushion with one hand and push the top of the backrest with the other hand, adjustable between 90° and 180°. Stop pushing when you reach the desired position that you feel comfortable with. (Note: Pushing is not reversible, if you want to go back to the previous position, you need to re-flatten the floor chair and push it to the position you want.)


③

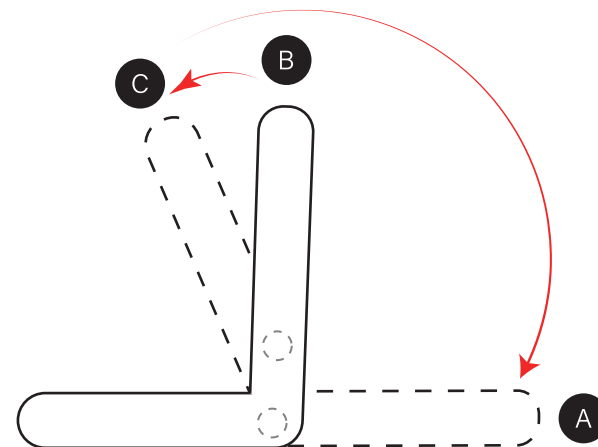

STEP 3

When you want to use the floor chair in a lie-flat position, you need to push the backrest of the floor chair forward from position B to position C first, and then pull it backward from position C to position A.

④

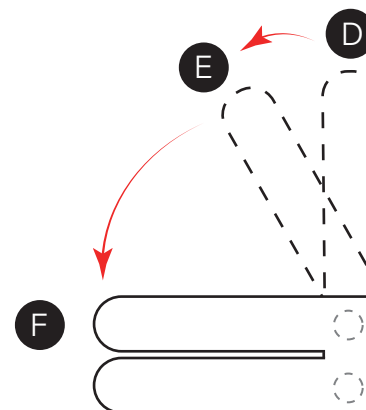

STEP 4

When you want to fold the floor chair for storage, you need to start by placing the chair in the 90° position D, then press the top of the backrest down to position E, and continue to press it down to position F.