


# VIRTUAL REALITY HEADSET

## for SWITCH | SWITCH OLED


### USER GUIDE

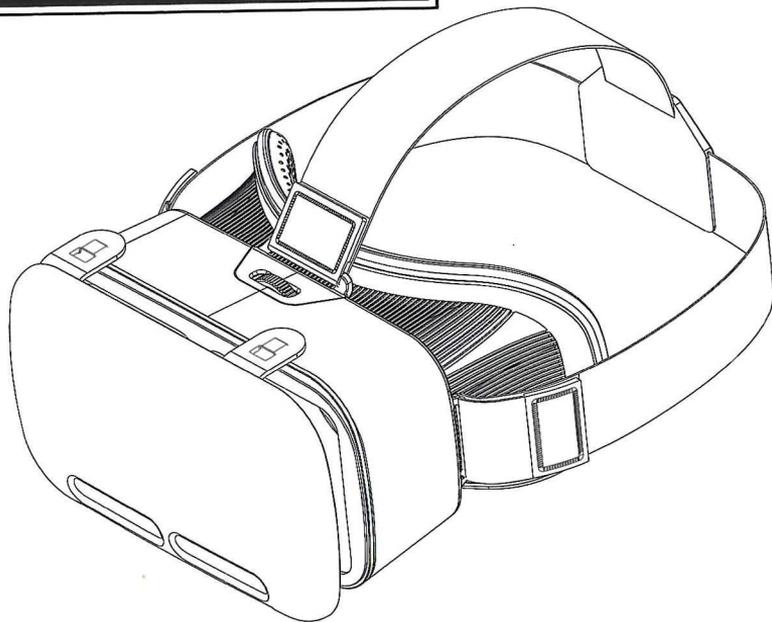

### Specification

Thank you for purchasing the Orzly VR Headset for Nintendo Switch  
Please read through carefully.

#### Contents:

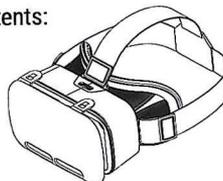


VR Headset




Manual

#### Features:

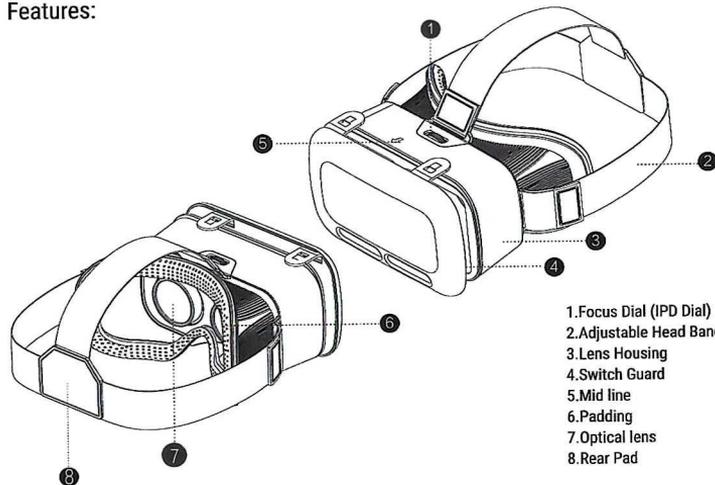

- 1.Focus Dial (IPD Dial)
- 2.Adjustable Head Band
- 3.Lens Housing
- 4.Switch Guard
- 5.Mid line
- 6.Padding
- 7.Optical lens
- 8.Rear Pad


## VR Headset Setup

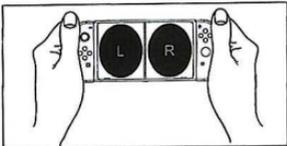

**Please note: Children may require adult assistance during setup and supervision during use.**

First, load a VR supported game onto your Nintendo Switch or Switch OLED and turn the VR mode on in the games settings.

For video on apps such as Youtube please select a dual image video to view the 3D effect.

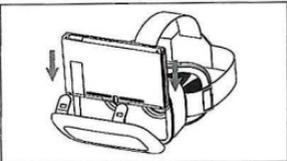


Remove the plastic film covering your lenses

Unlock the Joy-Cons from your Switch, place it into the VR Headset and latch it securely.

**Where possible, we recommend using the wrist straps that come with your Joy-cons when playing in VR.**

**The correct way to mount your headset may vary from person to person (shape of your head and features). It is critical to do it the right way to avoid discomfort during use.**

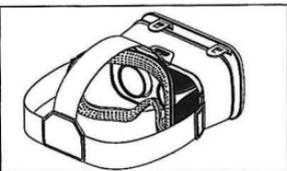

1. Loosen the top and side straps.

2. Place the VR Headset on your face, where you'd expect it to be when playing a game.


3. Grab the Rear Pad and make sure it sits under the base of your skull (the "bump" on the back up your head).

4. Tighten the top strap.

5. Next, grab both the left and right strap, and tighten the VR Headset on your face – not too tight as this may cause discomfort.

6. Finally, tilt the VR Headset a little to find the most comfortable position.

6. If you feel the VR Headset is leaning forward: tighten the top strap a little more.

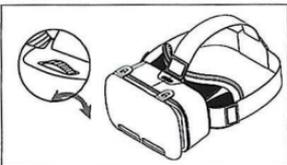

**Pro Tip: The top strap should hold the bulk of the weight of your VR Headset over-tightening the side straps may cause discomfort.**

To improve the focus, adjust the distance between the lenses to suit your needs using the IPD dial.

# orzly

*Love your headset? Show us! Post & Tag us!*

#orzly



© Orzly 2022

Orzly Accessories. All rights reserved. Orzly is a trademark or registered trademark of Syntiga Ltd. All other trademarks are property of their respective owners.



FC

RoHS



CE



## VR Tips and Tricks

---

### **Take a few minutes to adjust**

To get the perfect fit, also adjust during game play as needed.

For beginners, the best start with VR would be by starting the first experience by simply sitting down on a chair. This gives a better "grounded" feeling. Things feel more stable for the player thus reducing the chance of nausea than when standing up.

Make sure you have enough space around you

### **Cleaning your VR Headset**

To clean the shell of your VR Headset you can use a soft, clean, damp cloth only. Use of detergents may damage the casing finish and leak inside. Allow Headset to dry completely before use. Do not expose to high heat or direct sunlight to speed up the process.

Lenses may require cleaning due to fog build up or dust. If you feel the need to clean the lenses: use a clean microfiber cloth. One is provided with your headset. Do not attempt to clean your lenses with your fingers or an item of clothing as it may damage your lenses.

### **Take regular breaks**

When playing any video game, it's beneficial to take frequent breaks to reduce muscle and eye strain.

Nintendo recommends taking regular breaks – at least every 30 minutes.

### **Adjust brightness regularly**

Hold the home button on your Joy-Con to quickly adjust brightness on the fly for light or dark gameplay areas.

### **Relax your shoulders and neck regularly**

After playing for a while your head will naturally lift up and your shoulders tense. Be mindful to relax the shoulders and bring down the head to reduce strain.

## VR Motion Sickness

---

### **Try the VR headset in short bursts at first.**

When you first try the VR headset or a new game, keep the headset on for only five minutes. Assess how you feel afterwards.

If symptoms like dizziness, nausea, blurred vision or other similar issues arise stop immediately. Players can get nauseous if motion is not quite in sync with what the mind expects.

We recommend starting with simpler experiences so that the body can adjust. Please note people will adapt to VR at different rates.

### **Take regular breaks.**

Taking breaks in VR can also help prevent nausea and dizziness.

Be aware that you may not even realize how affected you are until you take off the headset.

This is why it's a good idea to set a timer on your cellphone to remind you to take off the VR headset and see how you feel.

Even if you feel fine, walk around, get some fresh air and take some time before you put it back on and play again.

We recommend a 10 to 15-minute break for every 30 minutes of VR play, even if you don't think you need it

### **Do not use VR when you're sick.**

Your ears, eyes, sinuses and brain are all key to feeling physically stable and balanced.

If you are already suffering from a cold, sinus infection, headache, eye problem, upset stomach or other illness, using a VR headset can make nausea and other symptoms worse.

If you have a chronic health condition, especially one that affects your balance, eyes or inner ears, check with your doctor before trying the headset.

## Usage

Please keep this instruction manual for future reference. If you require any help or assistance please contact us at [support@orzly.co.uk](mailto:support@orzly.co.uk)

Do not disassemble; there are no serviceable parts inside.

During installation/use, please make sure that hands are dry to avoid damage to you and the product.

Please do not submerge the product in water or any liquid. This product is not waterproof.

For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the casing finish and leak inside.

If product does come into contact with water please cease use until properly checked. Continued use may cause a fire or electric shock.

Do not expose to dust, high humidity, high temperatures or mechanical shock.

Do not expose the product to heat sources or fires directly.

Keep away from strong magnetic forces as these can cause the product to become non operational.

Never expose to direct sunlight or wet weather conditions.

Do not use if the equipment is damaged.

Not recommended for children under the age of 8

Adult assistance and supervision may be required when in use by minors

### NEED HELP?

Scan the QR code with your smart phone camera or go to: [orzly.tech/oled-vr](http://orzly.tech/oled-vr) for a full VR Headset start up guide.

Questions? Contact us! [support@orzly.co.uk](mailto:support@orzly.co.uk)



## Warranty



At Orzly, we're proud of our products and their durability. Please register your product to make it easier for us to identify you in case you need to use your warranty.

[orzly.tech/warranty](http://orzly.tech/warranty)



Thank you for purchasing Orzly products. This Limited Warranty applies to physical goods, and only for physical goods, purchased from Orzly.

What does this Limited Warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period. During the Warranty Period, Orzly will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

What will we do to correct problems?

Orzly will either repair the product at no charge, using new or refurbished replacement parts or replace it completely.

How long does the coverage last?

The Warranty Period for Physical Goods purchased from Orzly is 365 days from the date of purchase. A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 365 days from the date of replacement or repair, whichever is longer.

What does this Limited Warranty not cover?

This Limited Warranty does not cover any problem that is caused by:

- Exceeding the Expiry Date of service and free maintenance period.
- Breakdown or malfunction caused by improper use/maintenance/ storage not in accordance with the manual instructions.
- Breakdown or malfunction caused by other maintenance agency without our authorisation.
- No seal or information of the distributor shows on the Warranty Card.
- Failure or damage caused by force majeure such as natural disasters.
- Failure or damage caused by human factor (such as operation error, collision, inappropriate input voltage, etc.)
- Failure or damage caused by other non product design, technology, manufacturing, quality and other issues

What do you have to do?

To obtain warranty service, you must first contact us to determine the problem and the most appropriate solution for you. [support@orzly.co.uk](mailto:support@orzly.co.uk)