


Parts Identification

Deluxe Rice Cooker:

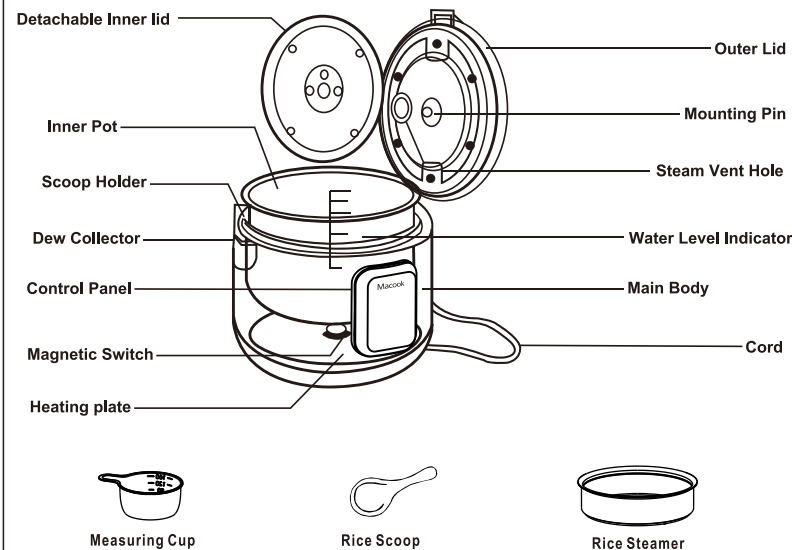

*The instructions are only for reference.
Please be subject to the actual products.

Warranty:

- 1 year for warranty.
- If there is any quality issue, please send the following information to mgsservices@hgcooker.com
 1. the picture of the rice cooker
 2. the picture of the defective part

NOTE:


1. Do not use metal utensils or abrasive cleaners when cleaning to avoid scratching the inner pot coating.
2. Do not immerse the base unit in water.
3. Please make sure the rice cooker is in power-off state when cleaning and take/put the inner pot gently to avoid collision deformation.
4. Don't exceed the corresponding highest water level, as this may cause water to overflow.
5. Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
6. Please ensure that the exterior of the cooking pan is dry before placing it on the heating element or it will damage the rice cooker.
7. Do not obstruct the steam vent hole.
8. Supervision is necessary when the appliance is used near children.
9. Never leave the cooker unattended while in use.
10. Avoid touching hot parts of the cooker: outer lid, cooking pan, inner lid, steam tray and the steam vent hole during operation as these parts emit heat.
11. Switch off and unplug from the power outlet when the rice cooker is not in use or prior to cleaning.
12. To avoid electric shock, do not immerse the cooker or cord /plug in water or any other liquids.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. If supply cord is damaged, it must be replaced by the manufacturer or similarly qualified persons in order to avoid a hazard.

Operating Instructions

1.How to cook rice

Step 1:

Plug in the power cord, the selection button light is on and the rice cooker is in standby mode.

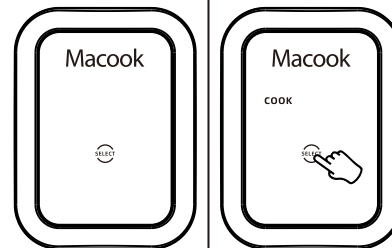


Step 2:

Cooking light flashes after touching the selector button

1 2
3 4

Step 3:

After waiting for 3 seconds, the cooking light will be on and the rice cooker will enter the cooking state.

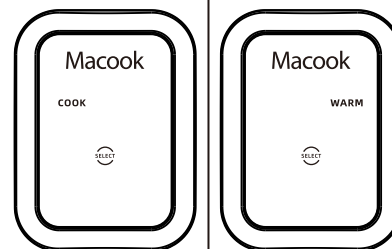

Step 4:

After the rice is cooked, the buzzer will sound three prompts and the keep warm light will always be on, so the rice cooker will enter the keep warm state.


ps: a buzzer sounds when the selection button is pressed.

Operating Instructions

2.How to keep Warm manually

Step 1:

Plug in the power cord, the selection button light is on and the rice cooker is in standby mode.

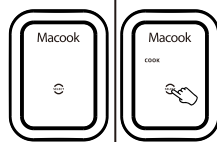


Step 2:

Cooking light flashes after touching the selector button.

Step 3:

Touch the select button again and the keep warm light flashes.

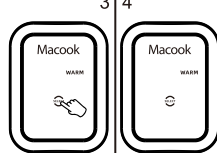


Step 4:

Wait 3 seconds for the Keep warm light is always on and the rice cooker enters the keep warm state.

3.How to cancel cooking/Keep Warm


Step 1:

Rice cooker is cooking/keeping warm.

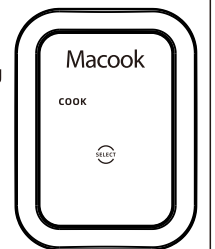

Step 2:

Press and hold the selector button for two seconds to cancel the current function and the rice cooker will enter standby mode.

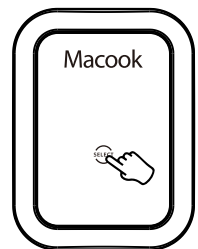

ps: a buzzer sounds when the selection button is pressed.

Instructions

1.Use the measuring cup provided to measure the rice volume

Each cup of uncooked rice can usually produce about double amount of cooked rice. Please do not exceed the volume indicated inside the cooking pan.

2.Add water to rinse the rice and then drain

3.Add water according to the amount of rice and water line, don't exceed the corresponding highest water level.

Rice-water volume ratio of 1:1.2. In addition, The effect of cooking rice it also varies with voltage, water quantity, rice species, etc. For example, 1.2 cups of water for 1 cup of rice, 2.4 cups of water for 2 cups of rice, 3.6 cups of water for 3 cups of rice, 4.8 cups of water for 4 cups of rice and 6 cups of water for 5 cups of rice.

For Indian style rice like Basmati or Jasmine, less water is needed as a drier rice is desired, use no more than 1 1/2 cups of water per 1 cup of rice. Use only 1 to 1 if you washed the rice previously. It is ok to add bay leaves or cardamom pods directly to the rice cooker to enhance the flavor.

4. Plug in the power cord to switch on and touch the select button to cook

Plug in the power cord and the selector light will come on. Touch the select button and the rice cooker will start cooking.

5.Keep Warm

When cooking is finished, the cooker will beep and the light will automatically switch to WARM to indicate the cooker is in keep warm mode. It's better not to use keep warm mode for more than 2 hours to keep the quality of rice.

6.Power off

Unplug the cord from power outlet to power off the rice cooker.

Cleaning and Maintenance:

Unplug the cooker and wait until the temperature cools. Use a damp cloth to clean the outside of the unit and wipe dry. Do not immerse the main body in water or other liquid.

-Durable rice cooker. Clean the outer lid, steamer and cooking pan after use. Soak in water and wash with a soft sponge or cloth.

-Deluxe rice cooker. Remove and clean the inner lid, cooking pan and dew collector after use. Soak in water and wash with a soft sponge and cloth.

Macook



ELECTRIC RICE COOKER USER MANUAL

If there is any question, please feel free to contact us at mgsservices@hgcooker.com