

Mesquul



Contact our experts support@mesqool.com

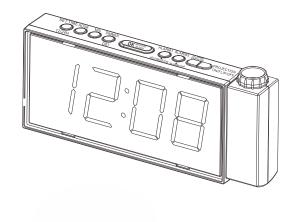


Http://www.mesqool.com



Version 3.0

Chapter 1 LOCATION OF CONTROLS

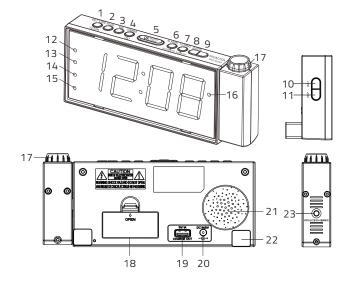

- 1.SET TIME BUTTON 2.HOUR BUTTON 3.MINUTE BUTTON 4.DIMMER/DST BUTTON 5.SNOOZE/OK BUTTON
- 6.ALARM 1 7.ALARM 2
- 8.ALARM ON/PAUSE 9.PROJECTION ON/FLIP/OFF 10.VOLUME+ BUTTON

11.VOLUME-BUTTON 12.AM INDICATOR


- 13.PM INDICATOR
- 14.ALARM 1 INDICATOR
- 15. ALARM 2 INDICATOR
- 16. DST INDICATOR
- 17. FOCUS RING
- 18. BATTERY COMPARTMENT
- 19. USB PORT 20. DC JACK
- 21.SPEAKER
- 22.HOLDER (x 2pcs)
- 23. PROJECTION DIMMER

Chapter 2 POWERING ON

1. Install 2pcs 1.5V "AAA" size batteries to the proper terminals in the battery compartment to memorize the time/alarm setting in case of power outage.

Note: Without AC power in, batteries don't support time display, but alarm will still goes off.

2. Connect the adapter line to DC jack, then plug into a 100~240V AC wall power outlet.



-01-- 02 -

Chapter 3 TIME SETTING


- 1. Press (SET) button once, display | I | starts flashing.
- 2. Press HOUR button to set the hour. press MIN button to set the minute.
- 3. Press **OK**SNOOZE button to save time or wait for another 10 seconds to confirm automatically.
- 4.To change 12H/24H time format

Hold press (SET TIME) to change 12H/24H time format.

- 03 -

Chapter 5 PROJECTION MODE


- 1. Press projection mode PROJECTION button to turn on projection.
- 2. Press PROJECTION ONFLIP/OFF button once again to flip the projection reversely when the time projected backwards.
- 3. Press PROJECTION once again to turn off projection.

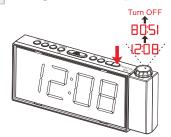

Note: 1. Best projection distance is 1.5 to 3.0 meters (4.92 to 9.84 feet).

- 2. Projector is a common LED light. So the projector is not visible in bright environment.
- 4. Rotate focus ring to adjust clarity of projection image.

Note: if projection is fuzzy, please rotate the focus ring (17) to adjust angle for clear image.

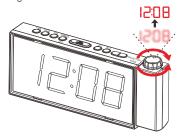

Chapter 4 ALARM SETTING

- 1. Press ALARM button, the alarm indicator will light up, the display starts flickering.
- 2. Press (HOUR) button to set the hour, press (MIN) button to set the minute.
- 3. Press ALARM button or OKSNOOZE button to save alarm time or just wait for another 10 seconds to confirm automatically.
- 4. Press (VOL+) or (VOL-) button to adjust alarm volume.
- 5. Press (OKSNOOZE) button to save volume setting.

Turn off Alarm

When alarm goes off:

- 1. Press **OK**SNOOZE button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
- 2. Press (LARM) button or (LARM) button to turn off alarm for 24 hours. The alarm indicator is still on, which means alarm is still activated and will ring after 24 hours.
- 3. When alarm is off, press ALARM button to active the alarm, setting will be the same as last time.
- 4. Cancel Alarm
 Hold press (LARM) button until the alarm indicator will disappear from the display, the alarm will never goes off.

Setting ALARM 2 is the same as ALARM 1.

Chapter 6 PROJECTION DIMMER

press PROJECTION button to adjust the brightness of projection for your preference.

Chapter 7 DIMMER & DST

Repeat press button to adjust the brightness of display for your preference.

Hold press button to switch DST function.

Chapter 8 USB CHARGING

Our projection clock has a USB Charger Port, which can charge both your phone or tablet at the same time.

The maximum charge current is 1 Ampere.



- 05 - - 06 -