

User Manual of Product 1:


COMFEE' Pressure Cooker 6 Quart with 12 Presets,
Multi-Functional Programmable Slow Cooker, Rice Cooker,
Steamer, Sauté pan, Egg Cooker, Warmer and More

User Manual of Product 2:

COMFEE' Rice Cooker 10 cup Uncooked/20 cup Cooked , Rice
Maker, Steamer, Saute, Steamer and Warmer, 5.2 QT Large
Capacity, Brown Rice, Quinoa and Oatmeal, 8 One-Touch
Programs



12-in-1 Programmable Electric Pressure Cooker

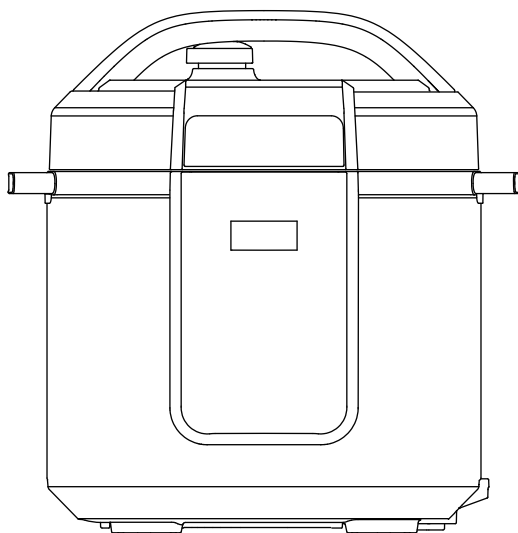

Model: CPC60D7ASB

IMPORTANT NOTE: For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT PRECAUTIONS

CAUTION

READ ALL INSTRUCTIONS.

1. Do not touch hot surfaces of pressure cooker. Use handles only.
2. To protect against electric shock, do not immerse cord, plugs, or outer vessel in water or other liquids.
3. This appliance should not be used by or near children or individuals with certain disabilities.
4. Unplug from outlet when not in use and before cleaning.
Allow to cool before putting on or taking off parts.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. Use of accessories not specifically recommended by the appliance manufacturer may cause injuries or damage to the unit.
7. For household use only. Do not use outdoors.
8. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place the appliance on or near a hot gas or electric burner, or a heated oven.
10. Extreme caution must be used when moving a pressure cooker containing hot liquids or foods.
11. Always attach plug to appliance first, before plugging into wall outlet. To disconnect, turn control to OFF, then remove plug from outlet.
12. Do not use appliance for anything other than intended use.
13. This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly

IMPORTANT PRECAUTIONS

CAUTION

closed before operating. Please see the “Getting Started” section.

14. Do not fill unit over $\frac{2}{3}$ full (Max line). When cooking foods that expand during cooking, such as dried vegetables, legumes, beans, and grains, do not fill the unit over $\frac{1}{2}$ full. Overfilling may cause a risk of clogging the pressure limit valve and developing excess pressure. Be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal and other cereals, split peas, noodles, macaroni, rhubarb, or pasta can foam, froth and sputter, and clog the pressure release devices.
15. Do not open the appliance until the appliance has cooled and all internal pressure has been released. If the float valve is still up and/or the lid is difficult to open, this indicates that the appliance is still pressurized – do not force it open. Any pressure in the appliance can be hazardous. Please see the “Getting Started” section for instructions to safely remove lid.
16. Always check the pressure release devices for clogging or sticking. Both pressure devices must move freely before use.
17. Do not use this appliance for pressure frying with oil.
18. To prevent risk of explosion and injury, replace only dynamic seal ring as recommended by the manufacturer. See Operating Instructions.
19. Do not use under hanging cabinets; steam from pressure release may cause damage.

IMPORTANT PRECAUTIONS

CAUTION

20. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
21. **CAUTION:** Risk of Electric Shock. Cook only in removable container.

22. This appliance is not intended for deep frying foods.

23. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

WARNING

SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

Tips:


1. Before using your Electric Pressure Cooker for the first time, remove any dust from shipping by wiping clean with a damp cloth.
2. Thoroughly clean the cooking pot and sealing ring assembly in the dishwasher or with warm, soapy water. Rinse, towel or air-dry, and place in the pressure cooker.

Note:

- ① Exhaust valve: Pull out the exhaust valve from the lid. Clean the internal side of the exhaust valve and the exhaust valve and float valve of the lid with brush and cloth at least once a month.
- ② Sealing ring: Please remove oil and dirt from the sealing ring with detergent and brush.
- ③ Water box: After cooking, the steam may stay in the water box of the external pot as water. Water in the box should be removed for avoiding bad odor, please clean it with clean cloth.

Disassemble and install the block proof cover and seal ring

1. Disassemble and install the block proof cover

Disassemble: Pull it out upwards	Block proof cover 
Install: Press it down to install	

2. Disassemble and install the seal ring

Disassemble: Pull it out upwards	Seal ring 
Install: Press it down to install	

NOTE:

1. Check if the seal ring and block proof cover are correctly installed in the upper cover before use each time.
2. After use, please clean the seal ring and around of block proof cover for avoiding jamming the cover, keep it clean to avoid bad odor.
3. Please do not pull the seal ring, otherwise, the distorted seal ring may influence the seal and pressure effect.
4. Do not use the damaged seal ring, please replace it at the authorized repair office.

OPERATING INSTRUCTIONS

1 Opening the lid correctly

Hold the handle of upper cover, turn it anticlockwise for about 30° till the lid at unlock state, and then lift the upper cover.

2 Check if the parts and accessories of lid are well installed

Check if the floater valve and exhaust valve are jammed, confirm if the sealing ring and block proof cover are correctly installed.

3 Take out the inner pot, put food content and water into the inner pot

The total amount of food content and water shall not exceed the Max marked on the inner pot.

4 Put the inner pot into the cooker

Wipe to clean the external surface of inner pot, foreign object and water are not allowed on the inner surface of electric pressure cooker;

Turn the inner pot to left and right to ensure good contact with the heating plate.

5 Safely close the lid

Before closing the lid, check if the sealing ring is well installed.


Hold the handle of upper cover, aim the lid in an "unlock state", put the top cover horizontally on the cooker body, turn the upper cover clockwise for about 30° to the lock place as "Lock State".

6 Placing exhaust valve



When working, please turn the exhaust valve to the sealing location, which means the electric pressure cooker keeps at sealing state;

For manual exhaust, please turn the exhaust valve handle to the exhaust location, the electric pressure cooker keeps at the exhaust state; when exhausting, do not keep the hands or face above the exhaust opening;


Check if the floater valve drops down before working (before heating, the floater valve is down).




Unlock State

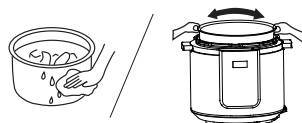

Lock State

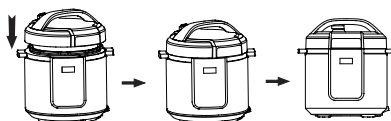

(Picture are for reference only, actual product may differ from picture shown)

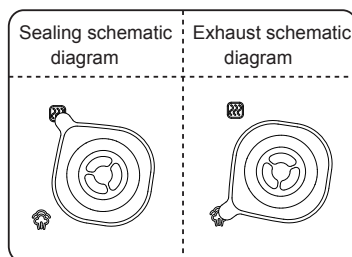

PRESSURE COOKER FUNCTIONS

1. Power on if the buttons are inactive when use, please confirm if the lid is closed at the right place, the buttons are inactive if the lid is not closed correctly.
2. After cooking, the cooker may automatically enter into the keep warm state. The indicator display “0H(0 hour), 1H(1 hour), 2H(2 hour)... “or” L0:00(0 min), L0:01(1 min)....”

Tips:

When the cooker is working, it is normal that it makes “clicking” sound. No need to panic.

To cook small amount of foods, the inner pot may possibly lift when opening the lid, please shake the lid to drop the inner pot in the cooker base and then remove the lid.


SAFETY FEATURES

1. Cut off power supply or remove the power plug
2. **Quick Pressure Release**
 - A. Quickly open the lid (For non-fluid foods)
Turn the exhaust valve to the exhaust location for exhaust release. For some units, by pressing steam release button “” till the float valve drops down.
 - B. Generally open the lid
Keep the electric pressure cooker cool naturally till the float valve drops down.
3. **To Remove Lid**
Turn the upper cover anticlockwise with the left hand, turn it to the cover open limit place, lift the upper cover with the right hand to open the lid.
Do not open the lid before the pressure in the pot has been completely released, do not open the lid fiercely if it is difficult to open.
Do not pull out the exhaust valve when turning the exhaust valve.
After cooking fluid foods (porridge and soup), do not turn the exhaust valve or press the steam release button please cut off power supply to make it cool naturally till the float drops before opening the lid.

PRODUCT INFORMATION


Model	Capacity	Power Supply	Rated Power	Size of Inner Pot	Working Pressure	Keep Warm Temperature
CPC60D7ASB	6 Quart	120V~ 60Hz	1000W	8.66"	0-60kPa	140° F~176° F
Accessories	Spoon 	User Manual 	Power Cord Components 			

PARTS AND FEATURES

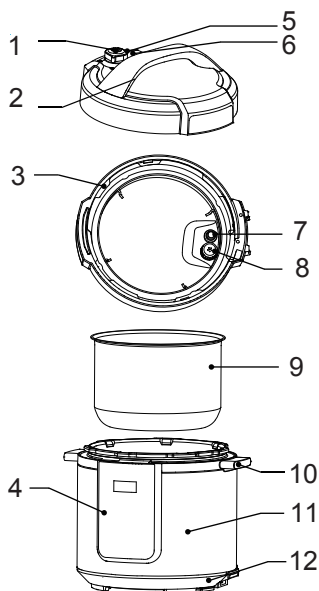

No.	Description
1	Exhaust Valve Handle
2	Upper Cover Handle
3	Seal Ring
4	Control Panel
5	Exhaust Opening
6	Float Valve (Pressure Indicator)
7	Sealing Ring
8	Block Proof Cover
9	Inner Pot
10	Side Handle
11	Outer Body
12	Base

Control Panel

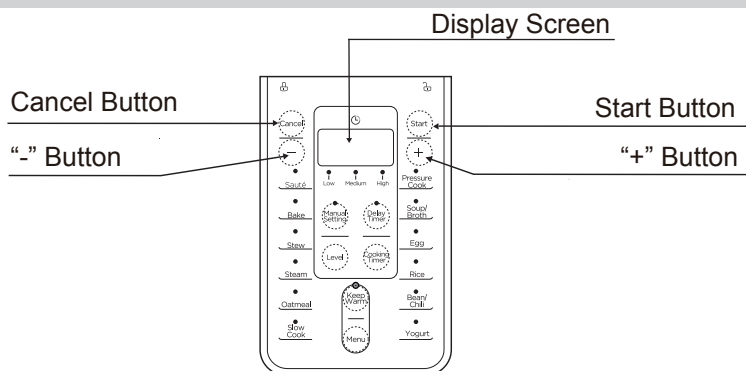

FUNCTION SELECTION

OPERATING INSTRUCTIONS

FUNCTIONS	OPERATING INSTRUCTIONS
Cancel	Under any state, press “Cancel” button to cancel the current work state and return standby state.
Keep Warm	Under standby state, press “Keep Warm” button, the indicator light is on and the digital screen shows default working time. Press “Cooking Timer” button, then press “+” or “-” button to adjust the working time. Press “Start” button to enter into keep warm state. “Keep Warm” indicator light is on and the digital screen shows default working time. Press “+” or “-” button to adjust the working time.
Sauté	Under standby state, press “Menu” button, the indicator light is on and the digital screen shows default working time. Press “Cooking Timer” button ,then press “+” or “-” button to adjust the working time. Press “Start” button to enter into cooking state. Starts countdown and enters to standby state when it finishes working.
Bake	Under standby state, press “Menu” button, the indicator light is on and the digital screen shows default working time. Press “Cooking Timer” button, then press “+” or “-” button to adjust the working time. Press “Start” button to enter into cooking state. The digital screen starts countdown as soon as the temperature rise to working temperature. The pressure cooker automatically shifts to “Keep Warm” feature when finished.
Slow Cook/ Yogurt	Under standby state, press the function button, the indicator light is on and the digital screen shows default working time. Press “Cooking Timer” button, then press “+” or “-” button to adjust the working time. Press “Start” button to enter into cooking state. The digital screen starts countdown and the unit enters to keep warm (Slow Cook) or standby state (Yogurt) when finished.

FUNCTION SELECTION

FUNCTIONS	OPERATING INSTRUCTIONS
Stew Soup/Broth Steam Oatmeal Pressure Cook Egg Bean/Chili Rice Manual Setting	After standby state (plugged in, lid closed, and display reads off), press “Menu” button, the indicator light is on and the digital screen shows default working time. Press “Cooking Timer” button, then press “+” or “-” button to adjust the working time. Press the level button to adjust the cook level from low, medium, or high on some settings. Press “Start” button to enter into cooking state. The digital screen starts countdown as soon as the pressure rise to working pressure. Enters into keep warm when it finishes working. For example: Add food and ensure at least a cup of liquid is inside. Plug in and close the lid. Press the Menu button 7 times to get the Pressure Cook LED to light up. Press Level button to rotate the cooking level setting between light, medium, and high. Press the cooking time button and then the + or - button to adjust the cook time. When done, press start to begin the cooking the food.
Delay Timer	Delay cooking: Before the program starts, press “Delay Timer” button. The screen shows the preset beginning time. Press “Cooking Timer” button, then press “+” or “-” button to adjust the delay time. Then press “Delay Timer” button to change Hour and Minute. Press “Start” button, the unit starts delay time count-down. When it counts-down to the end, the program starts working. NOTE: Yogurt、Sauté、Bake、Keep Warm function cannot set the delay timer.
Level	Before the program starts, you can press the “Level” button to change the internal cooking pressure for “Low” or “Medium” or “High”. Low is more tender and high is less tender.

FUNCTION SELECTION

Smart Program	Setting	Default Cooking Time (adjustable)	Cooking Timer Range	Delay Timer Range	Keep Warm
Sauté	High	00:30	00:01~00:30	-	-
	Medium				
	Low				
Bake	High	00:45	00:01~01:00	-	10h
	Medium	00:40			
	Low	00:35			
Stew	High	00:45	00:01~04:00	00:10~24:00	10h
	Medium	00:40			
	Low	00:20			
Steam	High	00:15	00:01~04:00	00:10~24:00	10h
	Medium	00:10			
	Low	00:03			
Oatmeal	High	00:30	00:01~04:00	00:10~24:00	10h
	Medium	00:05			
	Low	00:01			
Slow Cook	High	04:00	00:30~24:00	00:10~24:00	10h
	Medium	06:00			
	Low	08:00			
Pressure Cook	High	00:45	00:01~04:00	00:10~24:00	10h
	Medium	00:40			
	Low	00:10			
Soup/Broth	High	03:00	00:01~04:00	00:10~24:00	10h
	Medium	00:40			
	Low	00:10			
Egg	High	00:08	00:01~04:00	00:10~24:00	10h
	Medium	00:05			
	Low	00:03			
Rice	High	00:15	00:01~04:00	00:10~24:00	10h
	Medium	00:12			
	Low	00:08			
Bean/Chili	High	00:45	00:01~04:00	00:10~24:00	10h
	Medium	00:40			
	Low	00:20			
Yogurt	High	boil	-	-	-
	Medium	08:00	00:30~99:30		
	Low	24:00			

SAFETY FEATURES

To avoid personal injury and property loss, be sure to observe the following safety precautions.

• Warning Symbols:

 Means “Forbidden” items	 General Forbid	 Disassemble Forbidden	 Wet hands Forbidden
	 Contact Forbidden	 Spray Water Forbidden	
 Means “Mandatory” items	 Must be executed	 Remove the power plug	

• The danger caused by mistaken use if following warnings are neglected includes to two grades




Warning | It may possibly cause death or serious injury if the warnings are ignored.



Caution | It may cause physical injury or property damage if the caution items are ignored.




Warning

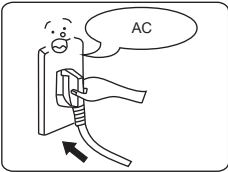


Use correct power outlet (Refer to the label)

- Failure to use correct power outlet can result in a fire or possible electric shock.

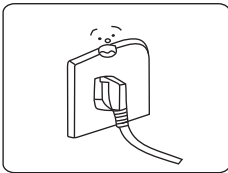

A socket shall be used alone

- A socket of more than 10A rated current with ground-ing wire can be used alone;
- If shared with other electrical appliances, the socket may cause an electric overload heat and result in fire.

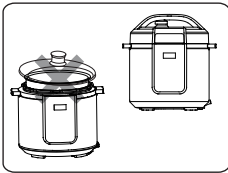


It is strictly prohibited to use other lid

- It is strictly prohibited to use other lid for heating, and in the (switching on) process, the use of non-original lid is not allowed.
- As this may cause electric shock or safety hazards.




SAFETY FEATURES

Warning

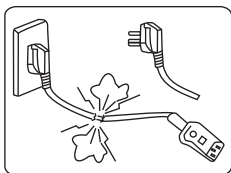


Stop using if the power cord is damaged

- Replace the damaged power cord with special soft cord or replace it with special assembly purchased from the manufacturer or authorized repair center.

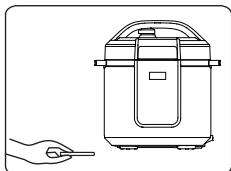


Do not use foreign objects

- It is prohibited to insert metal shavings, needles and other foreign matter in the gap.
- Use of accessories not specifically recommended by Comfee' may cause damage to unit or electric shock.

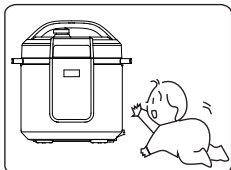


Place the appliance in a location out of reach of infants

- This appliance should not be used by or near children or individuals with certain disabilities.
- This appliance cooks under pressure. Improper use may result in a scalding injury. Make certain unit is properly closed before operating.

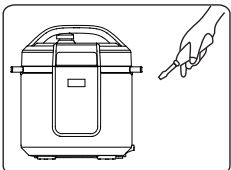

Modification is prohibited

- Modification or repair by non-professionals is prohibited.
- Violation may cause a fire or electric shock.
- Repair or replacement of parts shall be made in a designated service center.

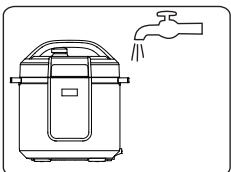

Products may not be immersed or sprinkled in water or other liquids

- Doing so could cause electric shock and electrical short circuits.



SAFETY FEATURES

Warning

Warning on opening the lid

- When the electric pressure cooker is not working, there isn't pressure in the pot, the float valve is down;
- When the electric pressure cooker is working, pressure in the cooker rises, float valve ascends; do not force open the lid before the pressure has been completely released;
- If it is difficult to open the lid, please do not open it with force, otherwise, it may cause scalding or physical injury.




Check periodically

- Be sure to check periodically the block proof cover and exhaust valve core to make sure that they are not be blocked;
- Do not cover the exhaust valve with heavy object or replace it with other object.




Caution

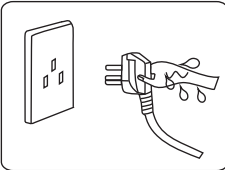


Never pull the plug with a wet hand

- To avoid electric shock.

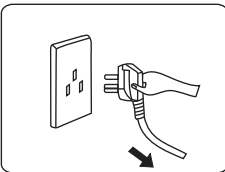


When pulling the plug, you must pinch the plug

- Do not pull the power cord, otherwise it will damage the cord, causing electric shock and short circuit.

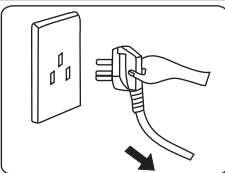

Unplugging when not in use

- Otherwise, it may produce leakage, fire or failure.

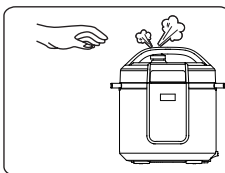


In working, never move your hands to close to the exhaust port.

- In cooking process, never move your hands to close to the exhaust port to avoid burns.
- During cooking, do not cover the vent with a cloth and other items.



SAFETY FEATURES


Caution

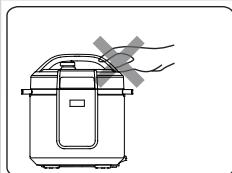

When the cooker is working, please do not touch the lid




- When the cooker is working, lid has high temperature, do not touch it;
- Otherwise, it may possibly cause scalding.

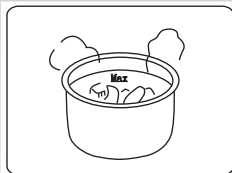

The total amount of food and water can not exceed Max scale


- The total amount of food and water can not exceed Max scale, otherwise food may be cooked unfamiliar, or cause malfunction.

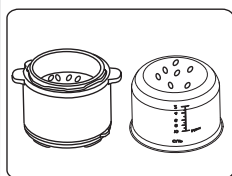

Do not use a pot other than the dedicated pot




- When there is foreign object on the bottom of pot and heating plate surface, remove the foreign object before use.
- Otherwise, it may cause overheating and work abnormalities etc.

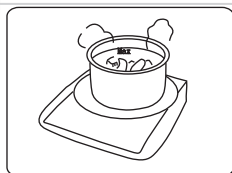

Do not place the pressure cooker in a heated oven or on any stovetop



- Please use the special inner pot.

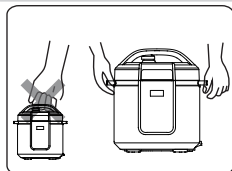

When moving the product, please securely hold the handle of cooker body



- Extreme caution must be used when moving a pressure cooker containing hot liquids or foods.

Do not use in the following locations



- Do not use in unstable locations;
- Do not use in locations near water and fire;
- Do not use near walls and furniture;
- Do not use in locations exposed to direct sunlight and oil splatter;
- Do not approach the stove for avoiding fire.

CLEANING AND MAINTENANCE

1. Clean after each use.
2. Before cleaning and maintenance, please unplug the power cord until the product cools.

3. Remove the lid and inner pot, clean with detergent first, then rinse well with water, and wipe dry with a soft cloth.
4. Clean the internal side of the lid with water, the seal ring, block proof cover, exhaust valve core and float valve can be removed for washing, timely and correctly install them after washing, and then dry the internal side of lid with cloth.
5. Wipe clean the body of the Pressure Cooker with a rag, and it is prohibited to soak body of the Pressure Cooker in water or spray water to it.
NOTE: Any other servicing should be performed by an unauthorized service representative.
6. Periodically clean the cooker and remove oil and dirt if it is stored on the table.
7. Place the electric pressure cooker 12cm away from other kitchen appliances.

TROUBLESHOOTING

When followings occur, it is not the cooker fault, please carefully check once before sending it for repair.

S/N	Symptom	Possible Reasons	Solutions
1	Difficult to close the lid	Sealing ring not installed properly	Position the sealing ring well
		The floater valve clamps the push rod	Lightly push the push rod
2	Difficult to open the lid	Float valve in the popped-up position	Press the float valve lightly with a chopstick.
		Pressure exists inside the cooker	Open the lid after the pressure is completely released.
3	Steam leaks from the lid	Sealing ring installed improperly	Install the sealing ring as required
		Food debris attached to the sealing ring	Clean the sealing ring
		Sealing ring damaged	Replace the sealing ring
		The lid is not closed correctly	Close the lid correctly
4	Steam leaks from float valve	Food debris on the float valve gasket	Clean the float valve gasket
		Float valve gasket worn-out	Replace the float valve gasket
5	Float valve unable to rise	Too little food and water in inner pot	Add water and food according to the recipe
		Steam leaks from the lid or exhaust valve	Send to the service center for repair

TROUBLESHOOTING

S/N	Symptom	Possible Reasons	Solutions
6	Steam comes out from exhaust valve non-stop	Exhaust valve not in sealing position	Turn the exhaust valve to the sealing position
		Pressure control fails	Send to the service center for repair
7	Power indicator doesn't light on	Power socket bad contact	Please check the power socket
8	All indicators flags	Display screen displays E1	Bottom sensor fault Send to the service center for repair
		Display screen displays E2	
		Display screen displays C1	High temperature since there isn't water in the inner pot Add water according to the requirement
			High temperature since there isn't water in the inner pot Insert the inner pot correctly
		Display screen displays E8	Pressure switch fault Send to the service center for repair
9	Rice half cooked or too hard	Too little water	Add water accordingly
		Lid opened prematurely	After cooking cycle completes, leave the lid on for 5 more minutes.
10	Rice too soft	Too much water	Reduce water accordingly
11	- Power cord and plug is expanded, deformed damaged and its color has changed. - One part of the power cord and plug are hotter. - Power cord is flexible with discontinuous power supply. - The electric pressure cooker has abnormal heating and generates a bad odor. - There's abnormal noise or vibration when powered on.		Stop using and call our Consumer Service Center
12	There's dust or dirt on the plug or socket.		Remove the dust or dirt.

NOTE: Please contact our authorized service center for repair.

Customer Service Management Office: 5 Sylvan Way, Suite 100 Parsippany, NJ, 07054

Amazon Store: <https://www.amazon.com/comfee>

Tel: 866-646-4332

E-mail: officialservice@comfeeappliance.com



Programmable Digital 5L Rice Cooker



Instruction Manual

Model: CRS5010BS

IMPORTANT NOTE: Please read the instructions carefully before use the machine. Please properly retention of the instructions for your future reference.

IMPORTANT SAFEGUARDS	3
PARTS AND FEATURES	6
FUNCTIONS REVIEW	7
INSTRUCTIONS FOR USE	8
CLEANING	13
TROUBLESHOOTING	14
WARRANTY	15

Read This Manual

Inside you'll find many helpful hints on how to use and maintain your Rice Cooker properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance.

These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.



CAUTION

- This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been provided with supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance shall be installed in accordance with national wiring regulations.

Welcome

You are about to see how quick, easy, and delicious healthy eating can be! Please read all the safety information, warnings, and instructional material found in this booklet before getting started. Set your rice cooker on a dry, level surface. Then, follow the cleaning instructions to prepare your appliance for use. Always clean your appliance before the first use.

IMPORTANT SAFEGUARDS

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The level of risk is shown by the following indications.

WARNING

- Read all instructions carefully before first use .
- Do not touch hot surfaces. Use the handles or knobs .
- Use only on a level, dry and heat-resistant surfaces.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact COMFEE customer service for examination, repair or adjustment.
- The use of accessory attachments not recommended by Comfee housewares may result in fire, electrical shock or injury.
- Do not use outdoors.
- Do not let cord touch hot surfaces or hang over the edge of a counter or table.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance for other than its intended use.
- Extreme caution must be used when moving the appliance containing rice, hot oil or other liquids.
- Do not touch, cover or obstruct the steam vent on the top of the rice cooker as it is extremely hot and may cause scalding.
- Use only with a 120V AC power outlet.
- Always unplug from the base of the wall outlet. Never pull on the cord.
- The rice cooker should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.

WARNING

- Always make sure the outside of the inner cooking pot is dry prior to use. If the inner pot is returned to the cooker when wet, it may damage or cause the product to malfunction.
- Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding.
- Rice should not be left in the inner cooking pot with the Keep Warm function on for more than 12 hours.
- To prevent damage or deformation, do not use the inner cooking pot on a stovetop or burner.
- To disconnect, remove the plug from the wall outlet.
- Do not use the lid handle to move the cooker when any food is in it.
- **CAUTION:** This appliance is not intended for deep frying foods.
- **CAUTION:** To reduce the risk of electrical shock, cook only in the removable inner cooking pot provided.
- Intended for countertop use only.
- **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

NOTICE

The failure to follow any of the important safeguards and the important instructions for safe use is a misuse of your rice cooker that can void your warranty and create the risk of serious injury.

SAVE THESE INSTRUCTIONS

RECYCLING



The appliance must not be disposed of with household waste, but taken to an authorized waste separation and recycling center.

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.



Polarized Plug



This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

PARTS AND FEATURES

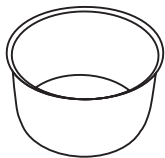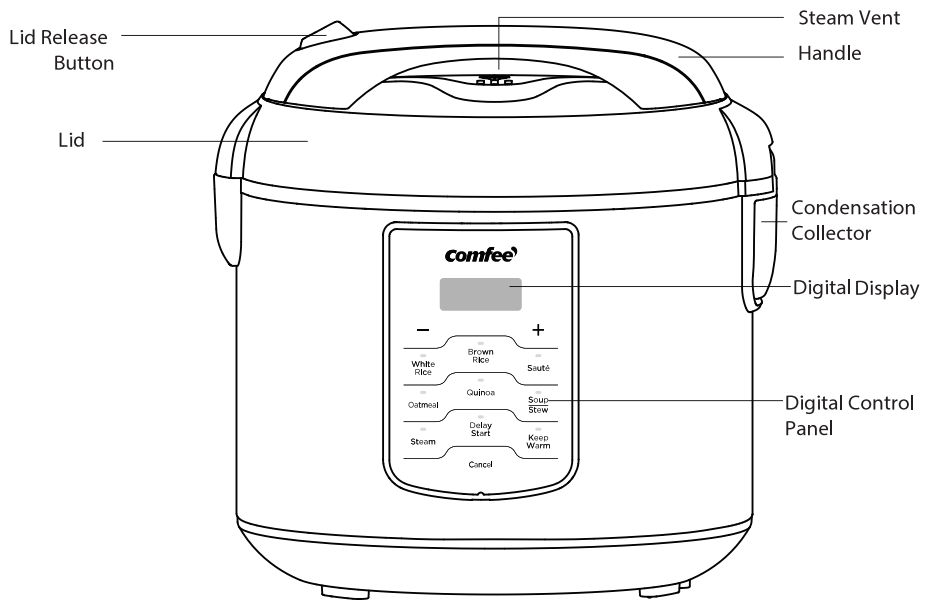

Inner Cooking Pot



Steam Tray



Measuring Cup



Serving Spatula

Functions Review



Keep Warm

Under the standby mode, "Keep Warm" button to start the temperature preservation program. Under the "White Rice", "Brown Rice", "Sauté", "Oatmeal", "Quinoa", "Soup/Stew" and "Steam" mode, Keep Warm mode begins automatically at the end of each cooking program.



Delay Start

The Delay Start button allows rice to be ready when needed. Come home to delicious rice ready to eat!



White Rice

Press the White Rice button. The White Rice light illuminates and remains lit during the cooking process. When cooking is completed, the rice cooker automatically enters Keep Warm mode.



Brown Rice

This button is ideal for cooking brown rice and other tough-to-cook whole grains to perfection



Oatmeal

Makes a quick and healthy breakfast with no need to stir.



Quinoa

Makes fiber and protein-filled grains for a nutritious meal.



Soup/Stew

This button sets for 2-12 hours for perfectly cooked soups and stews.



Steam

The "Steam" button is perfect for healthy sides and main courses. Press the Steam button. The Steam light illuminates and the digital display shows the suggested cooking time.



Sauté

Sauté foods at high temperature, perfect for stir fry, browning foods and much more.



Cancel

Cancel the working function at anytime back to standby mode.



" - "

This button is used to decrease the Delay Start, and the cooking time of the "Steam" and "Soup/Stew" function.



" + "

This button is used to increase the Delay Start, and the cooking time of the "Steam" and "Soup/Stew" function.

Operating Instructions

Before first use

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Keep plastic bags away from children as they can pose a risk to children. Dispose of properly.
4. Wash steam vent and all other accessories in warm, soapy water. Rinse and dry thoroughly.
5. Wipe body clean with a damp cloth.

Standby Mode

After turning-on, the rice cooker will be in a standby mode, "----" icon will appear on the digital screen.

Delay Mode

The Delay Timer delays the start of cooking programs. The start of the cooking process can be delayed for 1 to 15 hours for White Rice and Oatmeal, and 2 to 15 hours for Brown Rice.

IMPORTANT

- To maintain the quality of the rice, it is recommended that you not set the delay timer for longer than 12 hours.
1. Place the ingredients in the cooking pot, place the pot in the rice cooker and close the lid.
 2. Select the desired cooking program, this function is valid only for White Rice, Brown Rice and Oatmeal.
 3. Press the Delay Start button. The Delay Start display will illuminate and three digits will flash.
 4. Press the + and - buttons to set the desired number of hours.
 5. Defaultly, the function will automatically enter the Keep Warm mode once cooking is finished. If you don't need to enter the keep warm mode, press the 'Keep Warm' button, and the 'Keep Warm' light will go off.
 6. After 6 seconds, the countdown timer will start and the cooking process will finish when the delay is finished.
 7. Once cooking is finished, the cooker will beep and automatically switch to keep warm if the "Keep Warm" light is on.
 8. For better results, stir the rice with the serving spatula to distribute any remaining moisture.

Operating Instructions

White Rice

Cooking Time: Approximately 60 minutes

1. Press the White Rice button. The White Rice light illuminates.
2. Defaultly, the function will automatically enter the Keep Warm mode once cooking is finished. If you don't need to enter the keep warm mode, press the 'Keep Warm' button, and the 'Keep Warm' light will go off.
3. After 6 seconds, the Digital Display shows scrolling led lights.
 - The White Rice light remains lit during the cooking process.
4. When cooking is completed, the rice cooker will beep and automatically switch to keep warm if the 'Keep Warm' light is on.
 - The cooking will countdown the final 12 minutes of cook time.
5. For better results, stir the white rice with the serving spatula to distribute any remaining moisture.

Brown Rice

Cooking Time: Approximately 70 minutes

1. Press the Brown Rice button. The Brown Rice light illuminates.
2. Defaultly, the function will automatically enter the Keep Warm mode once cooking is finished. If you don't need to enter the keep warm mode, press the 'Keep Warm' button, and the 'Keep Warm' light will go off.
3. After 6 seconds, the Digital Display shows scrolling led lights.
 - The Brown Rice light remains lit during the cooking process.
4. When cooking is completed, the rice cooker will beep and automatically switch to keep warm if the 'Keep Warm' light is on.
 - The cooking will countdown the final 10 minutes of cook time.
5. Press the lid release button to open the lid, and then stir well before serving.

Oatmeal

Cooking Time: Approximately 50 minutes

1. Press the Oatmeal button. The Oatmeal light illuminates.
2. Defaultly, the function will automatically enter the Keep Warm mode once cooking is finished. If you don't need to enter the keep warm mode, press the 'Keep Warm' button, and the 'Keep Warm' light will go off.
3. After 6 seconds. The countdown timer begins.
 - The Oatmeal light remains lit during the cooking process.
 - Using caution: To avoid escaping steam, open the lid and stir occasionally with a long-handled wooden spoon.
4. When cooking is completed, the cooker will automatically switch to keep warm if the 'Keep Warm' light is on.

Quinoa

1. Using the provided measuring cup, add quinoa to the inner pot.
2. Rinse and Drain rice to remove excess starch.
3. Fill with water to the line which matches the number of cups of quinoa being cooked.
4. Place the inner pot into the cooker.
5. Close the lid securely.
6. Plug the power cord into an available 120V AC wall outlet.
7. Press Quinoa, press 'Keep Warm', if don't need temperature preservation once cooking is finished.
 - After 6 seconds, the cooker will now begin cooking.
 - The cooking indicator light will illuminate and the Digital Display shows scrolling led light.
8. The cooking will countdown the final 12 minutes of cook time.
9. Once cooking is finished, the cooker will beep and automatically switch to keep warm mode.
10. For better results, stir the quinoa with the serving spatula to distribute any remaining moisture.

Sauté

1. Place the inner pot into the cooker.
2. Add a thin layer of oil to the inner pot and close the lid securely.
3. Plug the power cord into an available 120V AC wall outlet.
4. Press the Saute button, then press the “Keep Warm” if don't need temperature preservation once cooking is finished, then wait 6 seconds the cooking indicator light will illuminate and the display begins a chasing pattern.
5. After preheated for 2- 4 minutes, open the lid and adding ingredients to be sautéed to the inner pot. Stir occasionally with a long-handled wooden utensil to saute evenly.
6. Add any other called for ingredients and liquid to the inner pot then securely close the lid. After a few minutes, the cooker will automatically switch to simmer mode.
7. Once the meal has cooked, the cooker will beep and automatically switch to keep warm if the “Keep Warm”light is on.

Steam

Default cooking time: 5 minutes

NOTE: The rice cooker comes with a steamer accessory and can be used to steam foods.

1. Place water in cooking pot.
2. Place cooking pot in the rice cooker.
3. Place ingredients in the steamer basket and place basket in cooking pot.
4. Close the lid of the rice cooker.
5. Press the Steam button. The Steam light illuminates and the digital display shows the suggested cooking time.
6. The cooking time can be adjusted if necessary. To adjust the cooking time:
 - Press the + button to add time, press the - button to subtract time.
7. After 6 seconds. The countdown timer begins.
 - The Steam light remains lit during the cooking process.
8. When cooking is completed, the rice cooker automatically enters Keep Warm mode.
9. The display time begins to decrease when it starts to boil.

Soup/Stew

1. Place the inner pot into the cooker.
2. Close the lid securely.
3. Plug the power cord into an available 120V AC wall outlet.
4. Press the Soup/Stew button. The digital display will show 2:00 to represent 2 hours of Soup/Stew time.
5. Press (+) or (-) to increase or decrease Soup/Stew time by one hour, up to 12 hours. After 12 hours, it will return back to 2 hours. press the "Keep Warm" if don't need temperature preservation once cooking is finished.
6. After setting up cook time, then wait 6 seconds, The Soup/Stew cooking begins to work, and the digital screen displays the cook time.
7. The digital display will countdown in one minute increments from the selected time, and the cooker will automatically switch to keep warm if the "Keep Warm" light is on once cooking is completed.

Cancel

Stop the working function back to standby mode at anytime.


—

1. Decrease the steaming time by one minute from 30 minutes to 5 minute.
2. Decrease the Soup/Stew time by hour from 12 hours up to 2 hours.
3. Decrease the delay time of "White Rice", "Brown Rice" and "Oatmeal" in 10 minutes increments by short press , or 1 hour increments by long press.


+

1. Increase the steaming time by one minute from 5 minute to 30 minutes.
2. Increase the Soup/Stew time by hour from 2 hours up to 12 hours.
3. Increase the delay time of "White Rice", "Brown Rice" and "Oatmeal" in 10 minutes increments by short press , or 1 hour increments by long press.


CLEANING

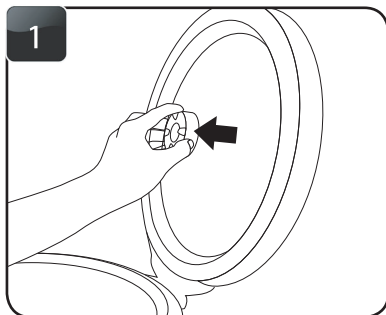


Remove the steam vent.

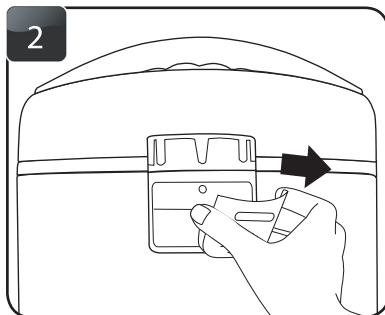


Remove the condensation collector.

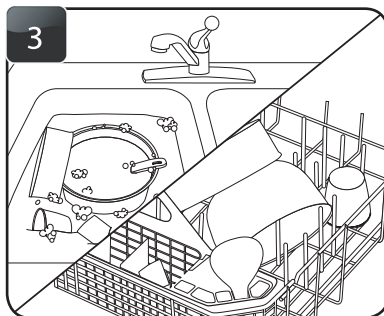


Handwash the inner cooking pot and all accessories or wash them in the dishwasher.

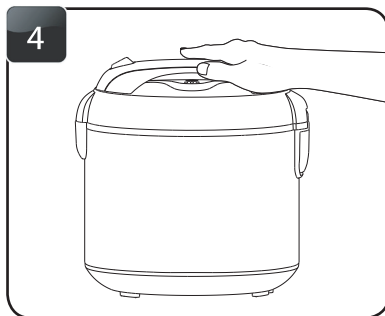

Wipe rice cooker body clean with a damp cloth.

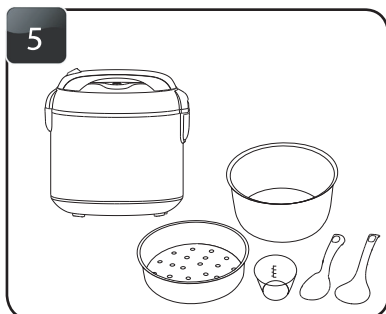

Thoroughly dry rice cooker body and all accessories.

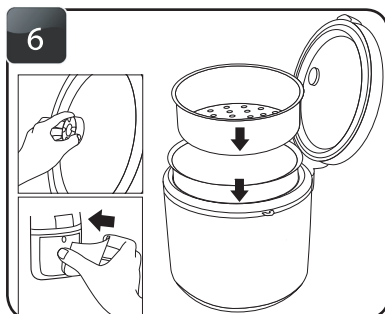

Reassemble for next use.

TROUBLESHOOTING

Before calling for service, review the following tips. It may save you time and money.

This list includes common occurrences that are not the result of poor workmanship or defective materials.

Any other servicing should be performed by an authorized service representative.

Problem	TIPS
Rice is too dry/hard after cooking	If your rice is dry or hard/chewy when the rice cooker switches to Keep-Warm, additional water and cooking time will soften the rice. Depending on how dry your rice is, add 1/2 to 1 cup of water and stir through. Close the lid and press the White Rice button. When rice cooker switches to Keep-Warm, open the lid and stir the rice to check the consistency. Repeat as necessary until rice is soft and moist.
Rice is too moist/soggy after cooking	If your rice is still too moist or soggy when the rice cooker switches to Keep-Warm, use the serving spatula to stir the rice. This will redistribute the bottom (moistest) part of the rice as well as release excess moisture. Close the lid and allow to remain on Keep-Warm for 10-30 minutes as needed, opening the lid and stirring periodically to release excess moisture.
The bottom layer of rice is browned / caramelized	The bottom layer of cooked rice may become slightly browned and/or caramelized during cooking. To reduce browning, rice should be rinsed before cooking to remove any excess starch. Stirring rice once it switches to Keep-Warm will also help to reduce browning/caramelizing.

LIMITED ONE YEAR WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at your option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is valid if product is used for other than single-family household use or subjected to any voltage and wave form other than as specified on the label (e.g., 120V ~)

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you.

NOTICE

Customer Service Management office:

5 Sylvan Way, Suite 100 Parsippany, NJ, 07054

Amazon Store: <https://www.amazon.com/comfee>

Tel: 866-646-4332

E-mail: officialservice@comfeeappliance.com

comfee'