



JP

クイックセットアップ ガイド

シングルコンセント屋内スマート
プラグ、Alexa のみで動作、
ホワイト 1 個パック、日本国
内用

Quick Setup Guide

Single Outlet Indoor Smart
Plug, Works with Alexa
only, White 1 pack, JP

B0CMXNWTP5



パッケージ内容

- ▶ スマートプラグ
- ▶ 安全マニュアル
- ▶ クイックセットアップガイド

互換性

- ▶ 2.4 GHz の Wi-Fi ネットワーク
- ▶ タイプ A 電源コンセント
- ▶ タイプ A プラグで接続されたデバイス
- ▶ 最大出力 10A (抵抗負荷) で接続されたデバイス
- ▶ Alexa アプリが搭載されている iOS/Android/Fire OS デバイス

Alexa (アレクサ) でセット アップする

注記: デバイスによっては、Amazon のフラストレーションフリーセットアップテクノロジーを使用して Alexa に自動的に接続する場合があります。

1. アプリストアから Alexa アプリの最新バージョンをダウンロードして、ログインします。
2. Amazon のベーシックスマートプラグを差し込みます。

3. Alexa アプリで、下部のメニューから **[その他]** をタップし、**[デバイスを追加]** をタップします。
4. **[プラグ]** をタップし、**[Amazon ベーシック]** をタップします。
5. Alexa アプリの手順に従って、セットアップを完了します。プロンプトが表示されたら、製品の背面またはこのクイックセットアップガイドの背面にある QR コードをスキャンします。

注記: パッケージのバーコードをスキャンしないでください。

QR コードのスキャンに失敗した場合、またはこのクイックセットアップガイドを紛失した場合は、www.amazon.co.jp/dp/B0CMXNWTP5 にアクセスして、よくある質問やトラブルシューティングの手順に関するオンラインユーザーマニュアルをご覧ください。

工場出荷時のデフォルトに リセットする


LED が赤と緑に点滅するまで、ボタンを 10 秒間押し続けます。

JP

下記の QR コードまたはスマートプラグ上の QR コードをスキャンして、Alexa をセットアップします。

EN

Scan QR code below or on smart plug for Alexa setup.

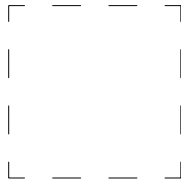

Package Contents

- ▶ Smart plug
- ▶ *Safety Manual*
- ▶ Quick Setup Guide

Compatibility

- ▶ 2.4 GHz Wi-Fi network
- ▶ Type-A outlet
- ▶ Connected device with Type-A plug
- ▶ Connected device with 10A (Resistive Load) max output
- ▶ iOS/Android/Fire OS device with the Alexa app

Set Up with Alexa

Note: Certain devices may automatically connect to Alexa using Amazon's Frustration-Free Setup technology.

1. Download the latest version of the Alexa app from the app store, then log in.
2. Plug in the Amazon Basics smart plug.

3. In the Alexa app, tap **More** from the bottom menu, then tap **Add Device**.
4. Tap **Plug**, then tap **Amazon Basics**.
5. Follow the steps in the Alexa app to complete setup. When prompted, scan the QR code on the back of the product or back of this *Quick Setup Guide*.

Note: Do not scan the barcode on the packaging. If the QR code scan fails or if you lose this *Quick Setup Guide*, visit www.amazon.co.jp/dp/BOCMXNWTP5 for the online *User Manual* for more FAQs and troubleshooting instructions.

Reset to Factory Defaults

Press and hold the button for 10 seconds until the LED blinks red and green.

The Amazon Basics logo, featuring the word "amazon" in a lowercase sans-serif font with a curved arrow underneath it, followed by the word "basics" in a similar lowercase sans-serif font.

amazon.com/AmazonBasics

タイ製

MADE IN THAILAND

V02-3/24