

Model CD705/CD706 - All versions

Instructions & Styling Guide



carefully before using.

product, always read the instruction book

enjoyment of this product, always read the instruction book

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at
www.conair.com/registration

For information on any Conair or InfiniPRO by Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com/infini

©2018 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

18PA056652

IB-15738A



DOUBLE CERAMIC

IMPORTANTE

Incluímos un guante aislante para proteger su mano al enrollar el cabello alrededor del tubo. Tenga presente que este guante aislante no ha sido diseñado para proporcionar una protección duradera contra el calor y que el contacto prolongado con las superficies calientes puede causar molestias.

Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos (con corriente de 60 Hz) o 72 minutos (con corriente de 50 Hz).

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño. En caso de mal funcionamiento, desenchúfe el aparato, permita que se enfríe y regístelo a un centro de servicio autorizado. no trate de reparar este producto.

To achieve the looks you love and for more great Conair® products, visit www.conair.com

BEAUTY TIPS:

PRECAUCIÓN

NUNCA jale, fuerza ni retuerza el cable eléctrico. Nunca lo enrolle alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su rotura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no está dañado. Deje de usar el aparato inmediatamente si el cable está visiblemente dañado o si el aparato deja de funcionar o funciona de manera intermitente.

ALMACENAJE

Después del uso, desenchúfe el aparato, permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

ADVERTENCIA: el tubo se pone muy caliente en segundos; evite el contacto con la piel después de encender el aparato. El tubo se pondrá extremadamente caliente cuando use el ajuste de temperatura alto. Siempre haga una prueba preliminar para asegurarse de que está usando el nivel de temperatura adecuado para su cabello.

DOUBLE CERAMIC WANDS ARE AVAILABLE IN THE FOLLOWING SIZES:


Curling Wands

Model CD705
1 in. (25mm)

Model CD706
1 1/4--3/4 in. (32mm-19mm)

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

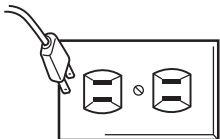

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿sabía usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

GARANTÍA LIMITADA DE DOS AÑOS (VALIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$7.50 para cubrir los gastos de manejo y envío. Los residentes de California solo

necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECIFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos

Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

LIMITED TWO-YEAR WARRANTY (VALID IN THE U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.


ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH WARRANTY. Some states do not allow

limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

LAS TENAZAS CON DOBLE CERÁMICA ESTÁN DISPONIBLES EN LAS SIGUIENTES TALLAS:

Modelo CD705
1 in. (25 mm)

Modelo CD706
1 1/4--3/4 in. (32-19 mm)

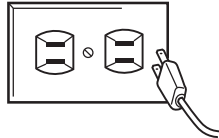

WARNING: NEVER REWIRE OR REPLACE THE SWITCH WHEN THE POWER IS OFF IF YOU THINK IT IS WRONG.

KEEP AWAY FROM WATER

ALWAYS UNPLUG SMALL APPLIANCES

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling wand. Damage will occur at the high flex point of entry into the curling wand, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: The instant-heat barrel will get very hot within a few seconds and should not come into contact with skin after the curling wand is turned on. When the high setting is chosen, the curling wand will have an extremely hot barrel. Always do a test curl before using the wand to ensure the proper setting for your hair type.

IMPORTANT

A heat-protective glove has been provided to help protect your hand from temporary contact with the barrel when wrapping the hair around the appliance.

Please note that the heat-protective glove is only designed to give initial contact protection. Discomfort will be caused by prolonged contact with the hot surface.

Never leave your appliance on and unattended. However, should you fail to turn the curling wand off, it will shut itself off automatically within 60 minutes at 60 Hz, 72 minutes at 50 Hz.

USER MAINTENANCE

Your curling wand is virtually maintenance free. No lubrication is needed. If cleaning becomes necessary, disconnect the curling wand from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling wand, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

DOBLE CERÁMICA



Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.



Modelo CD705/CD706

(todas las versiones)

©2018 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

Para registrar su producto, visítanos en:
www.conair.com/registration

Para más información sobre los productos Conair o InfiniPRO by Conair, llame al 1-800-3-CONAIR o visítanos en www.conair.com/infini

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para conseguir los peinados que le gustan o descubrir más productos Conair®, visite: www.conair.com

CONSEJOS DE BELLEZA:

18PA056652

IB-15738 A

