


BRAUN

BC03
Wecker

Kurzanleitung

DE

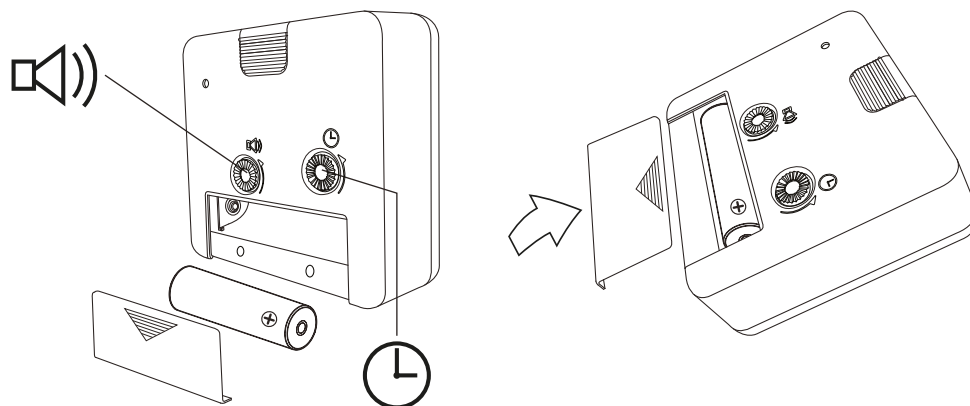

Einlegen der Batterie

1. Legen Sie 1x AA (1,5 V) Batterie ein und achten Sie dabei auf die richtige Polarität (siehe Abbildung).
2. Bringen Sie die Abdeckung wieder auf dem Batteriefach an.


Verwenden Sie nur neue Alkali-Batterien von anerkannten Marken.

Zeit einstellen

Drehen Sie das Time Set-Rad (⌚) auf der Rückseite des Weckers in Pfeilrichtung, bis die gewünschte Zeit angezeigt wird.

Alarm einstellen

Drehen Sie das Alarm Set-Rad (🔊) auf der Rückseite des Weckers in Pfeilrichtung, bis die gewünschte Alarmzeit angezeigt wird.

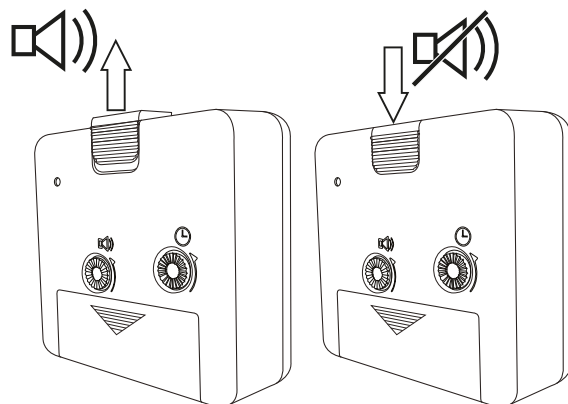

Alarm-Funktion

Schieben Sie zum Einschalten des Alarms den Knopf gegen die Rückseite nach oben. Die grüne Alarmtaste wird sichtbar.

Um den Alarm auszuschalten, drücken Sie den Knopf oben auf dem Wecker. Die grüne Alarmtaste ist nicht mehr sichtbar.

Ausführliche Informationen finden Sie in der vollständigen Bedienungsanleitung unter www.braun-clocks.com/pages/warranty oder scannen Sie diesen Code:




Braun Infoline

Sollten Sie Probleme mit unserem Produkt haben, wenden Sie sich bitte an Ihr örtliches Dienstleistungszentrum unter:

www.braun-clocks.com
www.braun-watches.com

Bestimmte Markenzeichen unterliegen einer Lizenz von The Procter & Gamble Company oder ihren Partnern.

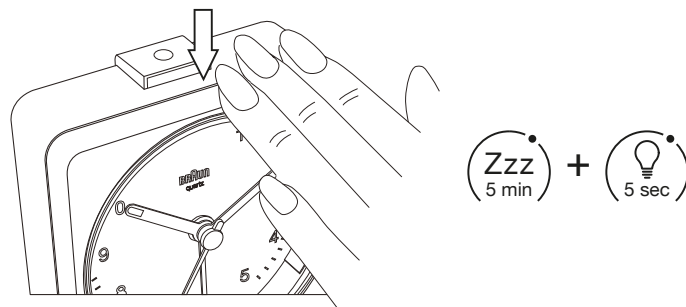

Snooze-Funktion

Drücken Sie sobald der Alarm ertönt auf das Gehäuse des Weckers. Die SNOOZE/LIGHT-Taste wird aktiviert. Der Alarm verstummt und ertönt in ca. 4 Minuten erneut.

Lichtfunktion


Drücken Sie zu einer beliebigen Zeit auf das Gehäuse des Weckers, um die integrierte SNOOZE/LIGHT-Taste zu aktivieren. Das Ziffernblatt wird etwa 5 Sekunden lang beleuchtet.

BRAUN

BC03 Alarm clock

Quick set-up guide

EN

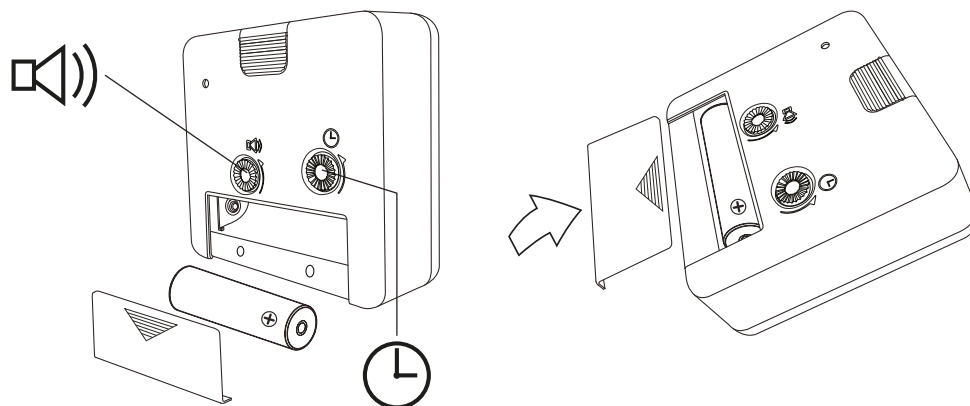

Battery installation

1. Insert 1xAA (1.5V) battery observing the correct polarity, as shown on the diagram.
2. Replace battery cover.


Only use new alkaline batteries from a reputable brand.

Time setting

Turn the time set knob (⌚) on the back of the clock in the direction of the arrow until the correct time is shown.

Alarm setting

Turn the alarm set knob (🔊) on the back of the clock in the direction of the arrow until the desired alarm time is shown.

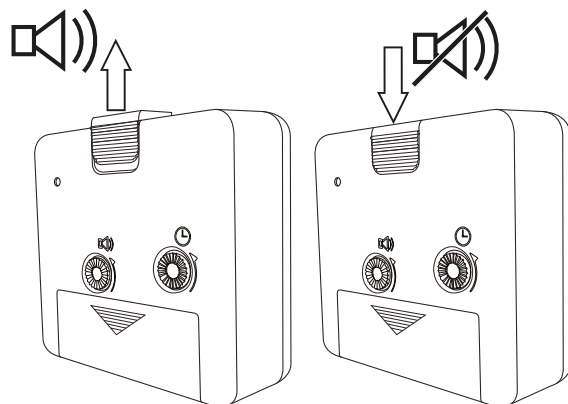

Alarm function

To set the alarm, pull the button up via the back of the clock so that the green alarm bar is showing. To unset the alarm, push the button at the top of the clock so that the green alarm bar is not showing.

For detailed information refer to the full user manual available at www.braun-clocks.com/pages/warranty or scan this code:




Braun helpline

Should you have a problem with your product, please check your local service centre at:

www.braun-clocks.com
www.braun-watches.com

Certain trademarks used under license from the Procter & Gamble Company or its affiliates.

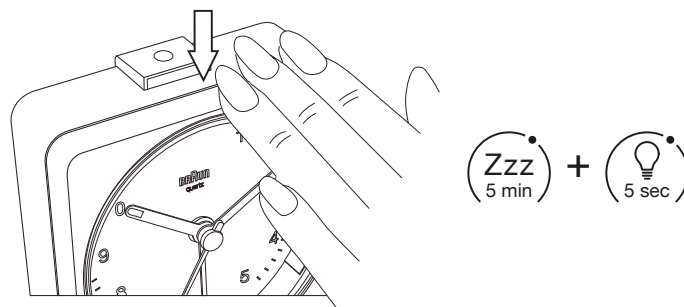

Snooze function

When the alarm is sounding, press down on the main body of the clock and the SNOOZE/LIGHT button at the base will be activated. The alarm will be stopped and will sound again in ~4 minutes.

Light function

Anytime, press down on the main body of the clock and the integrated foot SNOOZE/LIGHT button at the base will be activated. The dial will be illuminated for ~5 seconds.