

STEP 3

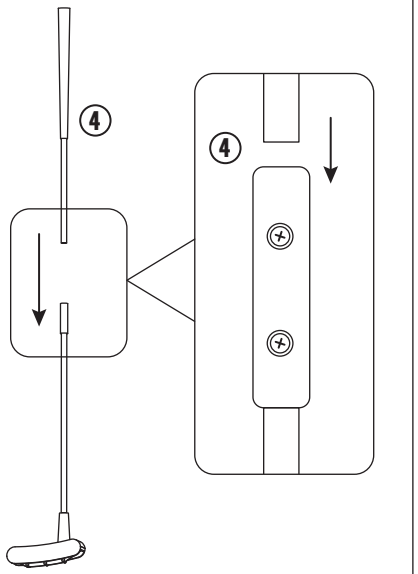

PARTS

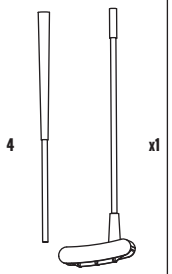

NOTE

Connect the two pieces of the **PUTTER** (#4) together as shown and secure with pre-installed screws.

YOU ARE NOW READY TO PLAY!

GAME PLAY

Two Player Game.

Each player has 5 balls. Select white or yellow.

Step on the peddle to make the targets spin.

Putt to see who goes first.

The person with the highest score continues to putt all their balls. Once the player putts their last ball, the other player gets a chance to putt.

If the ball does not find a hole or rolls back, it is out of play. The player with the highest score wins.

To play again, step on the peddle to stop the spinning targets and then press the flag down to release the balls.

Franklin®

For replacement parts:
Visit: franklinsports.com/instructions
Email: replacementparts@franklinsports.com
Call: 1-800-225-8649

Ages 3+

Franklin®

SPIN N PUTT

GOLF

ITEM NUMBER: **60145** **60145S21**



⚠ WARNING:
CHOKING HAZARD-Toy contains small balls and small parts. Not for children under 3 yrs.
Adult assembly required.

Made In China
Franklin Sports Inc.
Stoughton, MA 02072

NOTE: PRINT FRONT TO BACK

CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **franklinsports.com/instructions**

If possible, please include product part number and parts description so we can best assist you.

WE'RE HERE FOR YOU!


PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

For replacement parts:
Visit: franklinsports.com/instructions
Email: replacementparts@franklinsports.com
Call: 1-800-225-8649

PARTS LIST

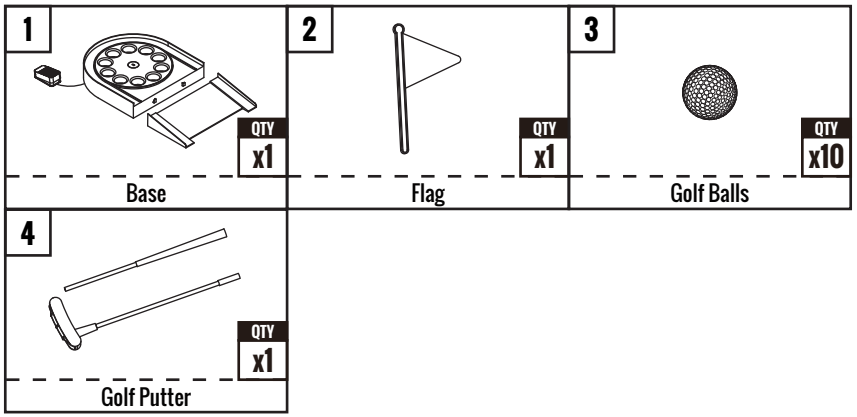


ASSEMBLY INSTRUCTIONS


GENERAL NOTE

Remove the product from the box and make sure all of the parts from the parts list are included.

STEP 1

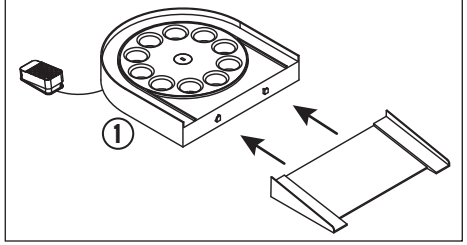


PARTS



NOTE


Connect the two pieces of the **BASE** (#1) together.

STEP 2

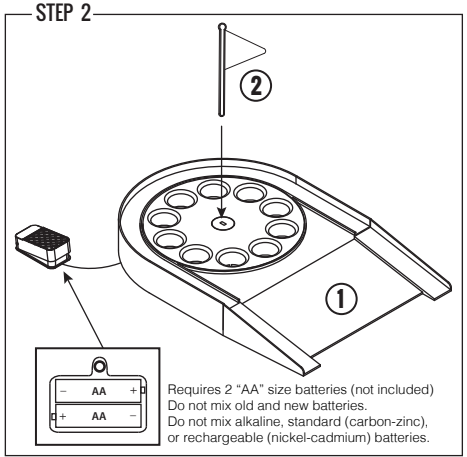

Requires 2 "AA" size batteries (not included)
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

PARTS

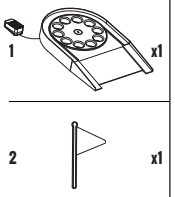

NOTE

Insert **FLAG** (#2) into **BASE** (#1).

Unscrew the cover on the underside part of the pedal. Insert two "AA" batteries. Secure cover back into place.

For replacement parts:
Visit: franklinsports.com/instructions
Email: replacementparts@franklinsports.com
Call: 1-800-225-8649

NOTE: PRINT FRONT TO BACK