REVLON®



ONE-STEP

SALON HAIR DRYER AND STYLER

RVDR5212ARB1



SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

These instructions are also available on our website. Please visit www.hot-europe.com

Do not use this device in a bathtub, shower, or water-filled reservoir.

WARNING: When the appliance is used in a bathroom, unplug it after use since the proximity to water presents a hazard even when the appliance is switched OFF.

For additional protection the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: DO NOT use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: DO NOT leave the appliance unattended. DO NOT allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. DO NOT place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: DO NOT block the air inlet or outlet during use. When using the appliance, care must be taken to prevent hair entering the air inlet opening. The air outlet opening of this appliance will become hot during use, avoid touching the outlet or any accessories attached to the outlet.

NOTE: Use on towel dried hair only.

WARNING: Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

OPERATING INSTRUCTIONS

This appliance is intended for household use only.
The appearance of this appliance may differ from the illustration.
Only use this appliance for its intended purpose as described in this manual.
Do not use attachments not recommended by the manufacturer.

INNOVATIVE 2-IN-1 DESIGN

This unique tool combines the drying power of a hairdryer and the smoothing effect of a paddle brush in one easy step. Combined with powerful airflow, the paddle brush design is perfect for smoothing out curls, waves, and kinks often found in the backside of the hair, resulting in soft, gorgeous styles.

OVERHEATING CUT-OFF

This appliance is equipped with a thermostat that will cycle OFF (0) should the heat of the dryer exceed the optimum drying level, due to partially blocked air inlet or outlet openings. In the event that the appliance stops, turn the appliance OFF (0) and allow it to cool down. Once the appliance cools, the thermostat will automatically reset and usage may resume.

IONIC® CONDITIONING

Helps to eliminate static and frizz and enhances shine for silky-smooth results.

STYLING

- Always towel-dry hair to remove excess water and smooth it with a comb or brush to untangle. Styling hair will be faster if it is slightly damp, not wet.
- Plug the appliance into an electrical outlet and adjust the switch to the selected setting. Use the HIGH setting (II) on thick or coarse hair and the LOW setting (I) on fine or thin hair.
- For best results, separate hair into manageable sections.
- Starting with the bottom section of hair, place brush dryer over the hair and close to the roots. Run brush toward the ends. To prevent over-drying, do not concentrate the airflow on any one area for an extended period of time.
- Repeat for the remaining sections until desired look is achieved.
- Turn the appliance off when styling is complete. Allow the unit to cool completely before storing.

CLEANING

Always unplug the appliance from the mains after use and allow it to cool before cleaning. Wipe the outer surface of the dryer with a slightly moist cloth, then wipe dry.

STORAGE

Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

FEATURES

A. AIR OUTLETS
B. BRISTLES
C. BRUSH AREA
D. HANDLE
E. 4-POSITION SWITCH
F. AIR INLETS

GUARANTEE AND SERVICE SECTION:

Your Revlon appliance is guaranteed against defects under normal use for 2 years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your till receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. Simply take the appliance back to the retailer from where purchased, along with a valid till receipt, for exchange free of charge.

This guarantee does not cover defects which have occurred due to misuse, abuse or are caused by failure to follow the instructions contained within this manual.

For more information regarding Revlon appliances, contact your Authorised Service Centre, or Local Distributor:

Bahrain	Telephone: + 973 17 111051	Fax: +971 17 564318
Kuwait	Telephone: + 965 1 88 55 22	Fax: + 965 2 573 21 01
Oman	Telephone: +968 246 93817	Fax: +968 246 93617
Qatar	Telephone: +974 4 4373644	Fax: + 974 4 4373413
Saudi Arabia	Telephone: +966 3 8692244	Fax: +966 3 8952639
UAE	Telephone: +9714 269 1230	Fax: +9714 269 1232

For product support, please visit us at: **www.hot-europe.com/support**

REVLON®

~~220-240V ~ 50-60Hz 3.41-3.72A~~

~~Type#. EH5212DC~~

~~The REVLON® trademark is used under licence from Revlon by Helen of Troy Limited.~~

Helen of Troy

~~European Headquarters~~
~~Helen of Troy - Kaz Europe Sàrl~~
~~Place Chauderon 18~~
~~CH-1003 Lausanne - Switzerland~~

~~KAZ Hausgeräte GmbH~~
~~Kölner Strasse 23~~
~~DE-57439 Attendorn - Germany~~

HOT (UK) Ltd
PO Box 5984
Sheffield S2 9GN - United Kingdom

22
PAP

~~Made and printed in China~~

© 2021 Helen of Troy. All rights reserved. (AW015235)

~~AW-ISSUE-No#: 1- Date: 19NOV20~~

احتفظي بتعليمات السلامة الهامة هذه

يُرجى قراءة جميع التعليمات قبل استخدام هذا الجهاز.
تتوافر هذه التعليمات أيضًا على موقعنا الإلكتروني. يُرجى زيارة www.hot-europe.com

يُحظر استخدام هذا الجهاز في أحواض الاستحمام أو الدش أو الأوعية المملوءة بالماء.

تحذير: عند استخدام الجهاز في الحمام، افصليه عن الكهرباء بعد الاستخدام إذ إن وضعه بالقرب من المياه يُشكل خطرًا حتى لو كان الجهاز في وضع إيقاف التشغيل.

لمزيد من الحماية، يُنصح بتركيب أداة تعمل بالتيار المتبقي (RCD) والتي تحتوي على تيار تشغيلي متبق مقدر لا يتجاوز 30 ملي أمبير في الدائرة الكهربائية التي تزود الحمام بالطاقة. استشيري فني التركيب.

هذا الجهاز غير مخصص للاستخدام من جانب الأشخاص (بما في ذلك الأطفال) الذين يعانون من نقص في القدرات البدنية أو الحسية أو العقلية أو نقص في الخبرة والمعرفة، ما لم يتم الإشراف عليهم وتزويدهم بالتعليمات حول استخدام الجهاز بواسطة الشخص المسؤول عن سلامتهم.

ينبغي مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف سلك الإمداد بالكهرباء، يجب استبداله بواسطة الشركة المصنعة أو وكيل الخدمة التابع لها أو أشخاص على نفس القدر من الكفاءة لتفادي المخاطر.

تحذير: يجب عدم استخدام هذا الجهاز بالقرب من أحواض الاستحمام أو الدش أو أحواض الغسيل أو الأوعية الأخرى المحتوية على الماء.

تحذير: لا تتركي الجهاز دون رقابة. لا تسمحي للجلد العاري أو العينين بالتلامس مع أي سطح ساخن على الجهاز عند الاستخدام.

لا تضعي الجهاز على أي أسطح حساسة للحرارة عندما يكون ساخنًا أو موصلًا بالمصدر الرئيسي للكهرباء. يتعين عليكِ الحرص على فصل الجهاز عندما لا يكون قيد الاستخدام.

تحذير: يجب عدم سد مدخل أو مخرج الهواء أثناء الاستخدام. عند استخدام الجهاز، يجب توخي الحذر لمنع دخول الشعر إلى فتحة مدخل الهواء. ستصبح فتحة مخرج الهواء ساخنة أثناء الاستخدام، لذا تجنبي ملامسة المخرج أو أي ملحقات متصلة به.

ملاحظة: لا يُستخدم الجهاز إلا على الشعر المجفف بالمنشفة.

تحذير: يجب عدم محاولة إصلاح هذا المنتج إذا لحق به أي خلل وظيفي.
لا يحتوي هذا الجهاز على أي أجزاء أو مكونات يمكن للمستخدم صيانتها.

تعليمات التشغيل

هذا الجهاز مخصص للاستخدام المنزلي فقط.
قد يختلف مظهر هذا الجهاز عما هو موضح.
لا تستخدمي هذا الجهاز إلا للغرض المخصص له كما هو مبين في هذا الدليل.
لا تستخدمي الملحقات التي لا توصي بها الشركة المصنعة.

تصميم مبتكر 2 في 1

يجمع هذا الجهاز الفريد ما بين قدرة التجفيف الخاصة بمجفف الشعر بالإضافة إلى تأثير التمليس الناتج عن فرشاة الريش كل ذلك في خطوة واحدة بسيطة. بالإضافة إلى تدفق الهواء القوي، فإن تصميم فرشاة الريش مثالي لتمليس تموجات والتفافات ولِبات الشعر والتي توجد غالبًا في مؤخرة الرأس، ويجعلك تحصلين على تسريحة ناعمة وفاتنة الجمال.

الإيقاف بسبب الحرارة الزائدة

هذا الجهاز مزود بوحدة ترموستات (منظم الحرارة) والتي تقوم بإيقاف تشغيل الدائرة (0) في حالة تخطي درجة حرارة الجهاز لمستوى التجفيف المثالي، حيث يكون ذلك ناجمًا عن إغلاق فتحات إدخال أو إخراج الهواء جزئيًا. في حالة توقف الجهاز عن العمل، قم بإيقاف تشغيل الجهاز (0) ثم اتركه يبرد. بمجرد أن يبرد الجهاز، سوف تتم إعادة تعيين وحدة الترموستات تلقائيًا ويمكنك استئناف الاستخدام.

تكنولوجيا الترطيب الأيونية

تساعد على التخلص من الاستاتيكية وإزالة التجاعيد وتحسين لمعان الشعر للحصول على تسريحة ناعمة مثل الحرير.

التصفيف

- استخدمي دائمًا المنشفة لتجفيف الشعر والتخلص من المياه الزائدة ثم استخدمي المشط أو الفرشاة لتنعيمه وفك تشابكاته. سيكون تصفيف الشعر أسرع إذا كان رطبًا بدرجة طفيفة، رطبًا وليس مبللًا.
- وصلي الجهاز بمأخذ التيار الرئيسي واضبطي المفتاح على الإعداد المحدد. استخدمي الإعداد HIGH (مرتفع) (II) للشعر الكثيف أو الخشن، والإعداد LOW (منخفض) (I) للشعر الخفيف أو الرفيق، والإعداد COOL (لطيف) (❄) لتثبيت التسريحة.
- للحصول على أفضل النتائج، قسّمي شعرك إلى خصلات يسهل التحكم فيها.
- بدءً بالخصلة السفلية من الشعر، ضعي الجهاز فوق الشعر وبالقرب من الجذور. حركي الجهاز اتجاه الأطراف. لمنع التجفيف المفرط، لا تركزي تدفق الهواء على منطقة واحدة فقط لفترة طويلة من الوقت.
- كرري العملية مع الخصلات الباقية حتى تحصلي على المظهر المنشود.
- أوقفي تشغيل الجهاز بعد انتهائك من التصفيف. اتركي الجهاز حتى يبرد تمامًا قبل التخزين.

التنظيف

احرصي على فصل الجهاز من مصدر الإمداد بالطاقة بعد الاستخدام واتركيه بعض الوقت ليبرد قبل تنظيفه. امسحي السطح الخارجي من المجفف بقطعة قماش رطبة قليلًا، ثم جففيه بقطعة قماش.

التخزين

احرصي على فصل التيار عندما لا يكون قيد الاستخدام.

يجب ترك الجهاز بعض الوقت ليبرد قبل تخزينه. يتعين الحرص دائمًا على تخزين الجهاز في مكان جاف. تجنبي سحب السلك أو تلويه. يجب عدم لف السلك حول الجهاز، إذ قد يؤدي ذلك إلى بلى السلك قبل الأوان والكسارة. افحصي كابل الطاقة بانتظام بحثًا عن حالات التآكل والتلف (خاصةً عند موضع دخوله في الجهاز وعند قابس الطاقة).

الميزات

أ. فتحات خروج الهواء
ب. شعيرات الفرشاة
ج. منطقة الفرشاة
د. المقبض
هـ. مفتاح ذو 4 أوضاع
و. فتحات دخول الهواء

قسم الضمان والصيانة:

يتميز جهاز Revlon لديك بضمان ضد عيوب الاستخدام العادي لمدة اثنان أعوام من تاريخ الشراء الأصلي. إذا كان المنتج لا يعمل بشكل مُرضٍ بسبب عيوب في المواد أو الصنعة خلال فترة الضمان، فسيتم استبداله. يُرجى الإحتفاظ بالإيصال خاصتك أو أي إثبات آخر للشراء لتقديمه مع جميع المطالبات خلال فترة الضمان. يصبح الضمان باطلًا إذا لم يتم تقديم دليل الشراء. لا تحتاجين إلى أكثر من إعادة الجهاز إلى بائع التجزئة الذي تم شراؤه منه مع تقديم إيصال سارٍ للاستبدال دون رسوم.

لا يغطي هذا الضمان العيوب الناجمة عن سوء الاستخدام أو عدم اتباع التعليمات الواردة في هذا الدليل.

لمزيد من المعلومات حول أجهزة Revlon، يُرجى الاتصال بمركز الخدمة المعتمد أو الموزع المحلي لديك:

البحرين	هاتف: 111051 17 973+	فاكس: 564318 17 971+
الكويت	هاتف: 22 55 88 1 965+	فاكس: 01 21 573 2 965+
عُمان	هاتف: 93817 246 968+	فاكس: 93617 246 968+
قطر	هاتف: 4373644 4 974+	فاكس: 4373413 4 974+
السعودية	هاتف: 3 8692244 966+	فاكس: 8952639 3 966+
الإمارات	هاتف: 1230 269 9714+	فاكس: 1232 269 9714+

للاتصال بقسم دعم المنتجات، يُرجى زيارتنا عبر الموقع: **www.hot-europe.com/support**

QR code to be placed



REVLON®

ONE-STEP

مجفف الشعر والمصفف

RVDR5212ARB1


Helen of Troy


Start Date	09NOV20
Model#	**RVDR5212ARB1**
UK/E	UK/ARB
Agile AW#	AW015235
AW Issue#	No#: 1 Date 19NOV20
Languages	English, Arabic
File Name	rvdrib.RVDR5212ARB1.AW015235.INDD
Designer	Simon Finch
Factory	DECHANG
Bar Code#	n/a


Packaging Specifications

Dimensions	H185mm x W90mm
Material	70gsm Wood free paper
Finishes	Roll Concertina
Colours	Black & PMS Red 032

This proof is not intended for colour matching but for colour indication





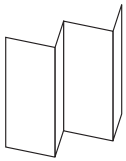

Proof Stages

10NOV20	1st proof for comments
11NOV20	Updated missing Arabic and changed Copyright to 2021.
16NOV20	Added AW# and approved to be released No#: 1 Date 16NOV20 but requires QR code adding
19NOV20	Sent for review
19NOV20	Corrected Type# and uploaded for production

Approvals

BM/MKT	19NOV20	Camille Bosson
BM/MKT	19NOV20	Evgeniia Kargina
MKT MNG	---	---
Design	19NOV20	Loc Pham
Eng. UK/E	---	---
Comp UK/E	---	---
Eng APO	---	---
Comp APO	---	---
Legal	---	---
Licensor	---	---

Helen of Troy - Kaz Europe Sàrl
Creative Department
Place Chauderon 18
1003 Lausanne
Switzerland