For Use with FREE & PAID Express Scribe
Installation and User Guide

The ECS-FPAE foot pedal works with the FREE & PAID versions of Express Scribe for Windows & for MAC.


1. Start Express Scribe
2. **If using Windows:** Select [Options] from the toolbar and click on [System-Wide Hot-Keys...]. In the window that appears select [Enable system-wide hot-keys].

   If using macOS: Select [Preferences] from the toolbar and click on [System-Wide Hot-Keys...]. In the window that appears, select [Enable system-wide hot-keys].
3. Check the below pictures to see if the correct hotkeys are set. If they do not match, select [Set defaults...] in the bottom right corner. If additional changes are necessary, highlight the command and select [Change...])


Once you make adjustments, you don't have to change them again.

Important Note: Please do not run foot pedal wizard. This pedal is plug and play. It emulates key strokes and it already pre-programmed.

Windows:

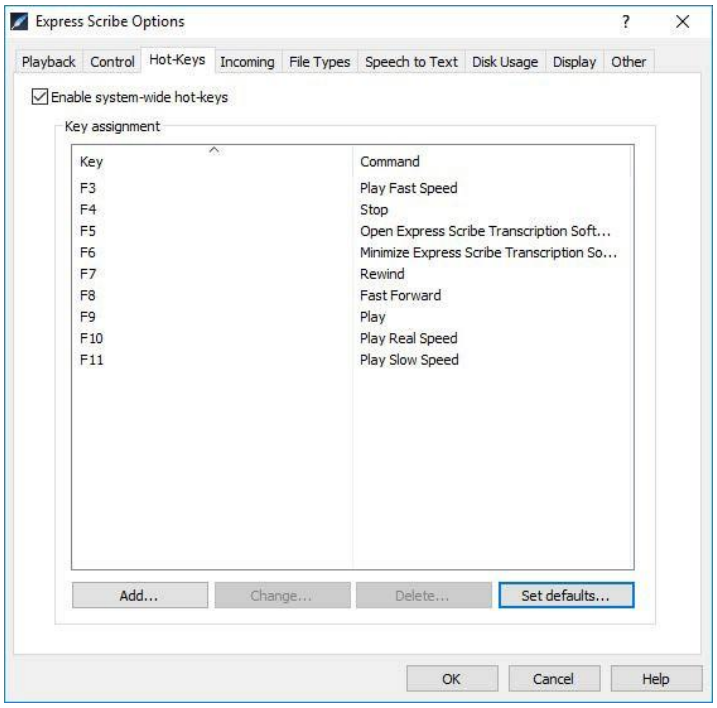

macOS:

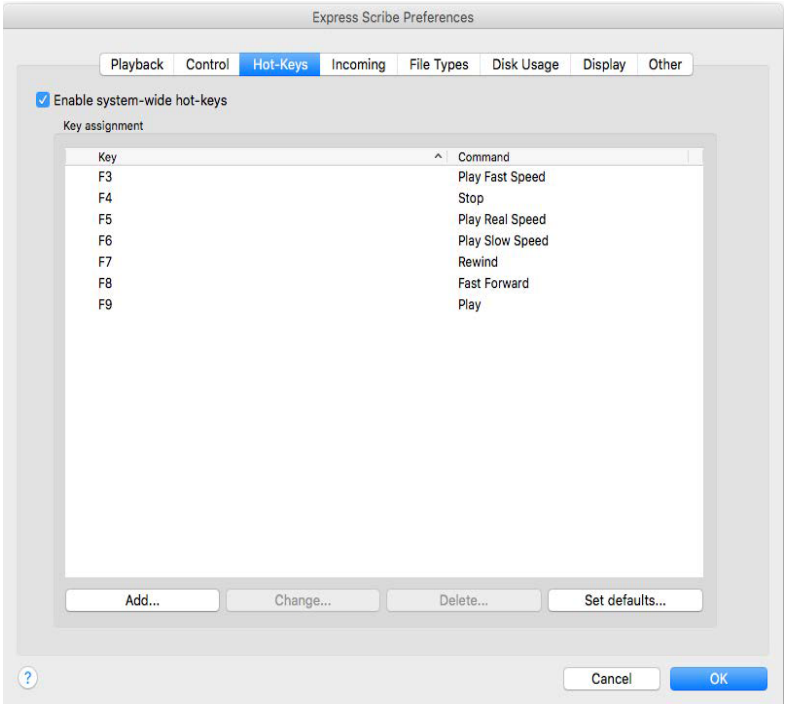

Troubleshooting: Foot pedal not functioning properly?

- Make sure the USB plug is properly plugged into the USB port on the computer.
- Verify that there are no system updates required, or restarts pending.
- If the pedal does not respond after a few minutes, attempt plugging the device into a different USB port on the computer.
- If the computer does not recognize the foot pedal, restart your system or reinstall the USB driver by unplugging and re-plugging in the USB foot pedal.
- If you are using a USB hub or USB extender, try plugging directly into a USB port on your computer
- If you are using a desktop, try plugging into a USB port on the back of your computer

If you are experiencing any problems, please contact us prior to returning the product.