
Laudlife®

USER MANUAL

ELECTRIC FOOD WARMER

MODEL： BW201

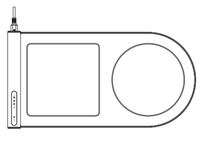

Please read this manual carefully before using the machine

IMPORTANT SAFEGUARDS

Please carefully read and follow these instructions below in order to avoid any injury or property loss. Failure to follow safety warnings or incorrect use may cause accidents.

1. Do not touch it or its plug with wet hands.
2. Do not touch it after its connecting main power socket to avoid any scald.
3. Do not immerse cord or parts in water or other liquid.
4. Do not place it close to flammable materials like curtains, gas, oil paper, alcohol etc.
5. Do not disassemble or repair it on your own to avoid the injury and any damage.
6. Do not allow childrent use it alone and keep it away from the place where infant or little children can touch to avoid shock or scald.
7. Do not use it on metal table or surface since it can heat the metal countertop.
8. Do not put airtight food like can, airtight container, etc directly on it to avoid thermal expansion.
9. Do not rinse it with water to prevent water from going inside.
10. Do not put heavy objects on it and scratch it by sharp objects.
11. Do not clean it with toluene, acid lation, kerosene, alcohol or chemical reagents to avoid discoloration.
12. If you want to extend the food warming time, please cover the food with a lid or aluminum foil.


DO's

1. Please use a power socket of >10A separately for it.
2. Please plug off the power socket immediately after its surface is cracked.
3. Please remove some dirt or oil in time to avoid damage or discoloration.
4. Please contact us if the power cord is damaged and don't buy it by yourself.
5. Before clean it, turn it off and unplug it first.

Note:

- Household use only.
- It may have some amount of odor when it is used for the first time.

Product Parts

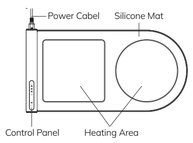

Functions


Temperature Modes
Three temperature modes to select

Temperature Mode Switch
Change temperature among three modes

Power Key
Turn it on or off

⚠ The surface of the product is hot when it is working, pay attention to anti-scald

Instructions



1. Connect the power supply, the machine will enter the standby state after the sound of beep, the indicator will be on constantly.



2. Touch the power button ⏻, the default is low-temperature M, the indicator is on constantly, and the machine starts heating automatically.



3.Touch the temperature switch button to change temperature circularly, it will automatically heat up after the temperature is selected. Press the power button ⏻ to turn off the machine after use.

Reminder

Every time you touch the button, the machine will "beep". Within 5 hours of work without operation, the machine will enter the standby mode, the indicator will be off and stop heating.

Technical Parameter

Voltage	120V, 60HZ	Power	100W
Temperature	Low/Mid/High	Product Size	463* 248*6mm

*** When the machine wouldn't work, please contact the dealer customer service, do not disassemble it yourself.**

FAQ

1. Can raw food be cooked on the Food Warmer?
• No, it is NOT a cooking appliance. It is designed to keep already-cooked food warm.
2. Can leftovers be reheated or defrosted on the Food Warmer?
• No, it is NOT designed to reheat food, only to warm already-cooked hot food.
3. Can I put plastic containers on the Food Warmer?
• No, you can only put heat-resistant containers, pots, and pans on the Food Warmer. Things like ceramic casserole dishes, metal cookware, and some glass containers are acceptable. Most Pyrex is ok to use on the Warmer but be sure to check that it's heat-resistant before using.
4. Can aluminum foil, plastic wrap, or plastic utensils be placed on the Food Warmer?
• No.
5. Can I use the Food Warmer on any surface?
• No, do not use it on metal tables or surfaces since it can heat the metal countertop.
6. Can the Food Warmer be kept warm all the time?
• NO, after selecting the temperature for food heating, If there is no button operation within 6 hours, it will automatically enter the standby state, and all LED lights will go out to stop heating.
7. How to keep food warm longer?
• If you want to extend the food warming time, please cover the food with a lid or aluminum foil.

Warranty

We offer a one-year limited warranty for the product. If you need any assistance, please make sure to have your Amazon Order ID ready when contacting us for service. Please write to us at support@laudlife.com.

The following are not covered under Laudlife's warranty:
1. Improper installation, delivery, or maintenance.
2. Misuse or abuse of the product, which results in failure.
3. Damage to the product due to accidents, fires, floods, or other acts of God.
4. Damage caused by the user attempting to repair or modify the product.
5. Damage caused by the use of an improper power supply or voltage.

Email: support@laudlife.com

Manufacturer: Guangdong Willing Technology Corporation
Address: Willing Industrial Park, Dongjiang Industrial Zone, Shuikou Subdistrict, Huizhou City, Guangdong, China, 516005

MADE IN CHINA