FOLD


FOLD


Parent User Guide

This guide contains important information. Please keep it for future reference.

91-003380-031 UK


LeapStart® 3D Features

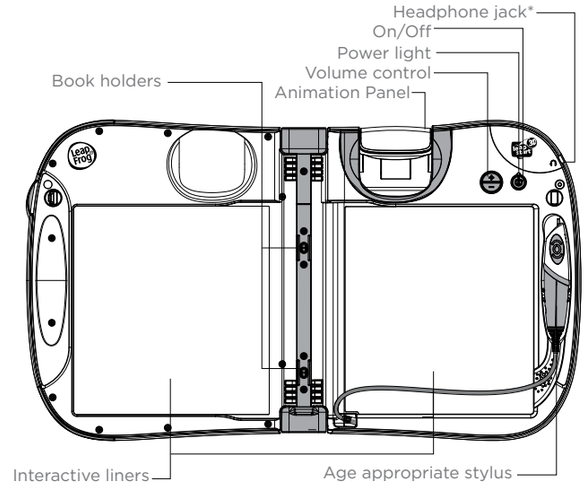

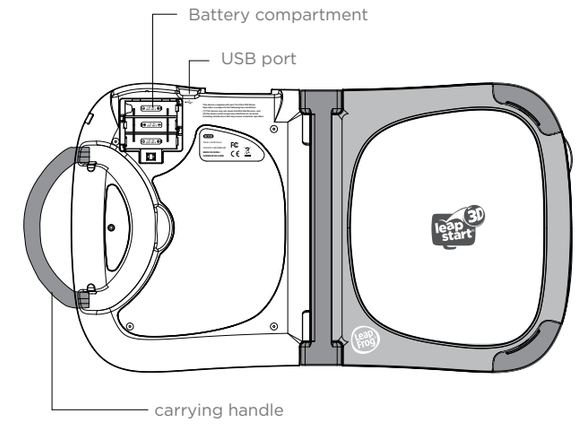


*Compatible with most headphones. Headphones not included

What's Included

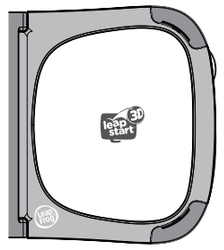

LeapStart® 3D Interactive Learning System

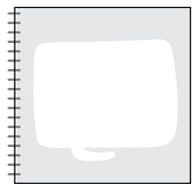

Activity Book Sampler



USB Cable



Quick Start Guide

FOLD

Get Started

1. **POWER UP/CONNECT** your LeapStart® 3D Interactive Learning System by adding 3 AA batteries. Connect it to your computer via the USB cable.
2. **SET UP** by installing LeapFrog® Connect at leapfrog.co.uk/connect.
3. **REGISTER** your device by creating a LeapFrog parent account.
4. **DOWNLOAD** companion audio and video for your included Sampler Book and Purchased LeapStart Books.
5. **PLAY & LEARN!** Your child is now ready to play with LeapStart® 3D.

Get Started with your Sampler Book

1. **DOWNLOAD** your updated Sampler Book audio and video by following the steps under "Get Started" in this guide.
2. **PRESS** the On/Off button to begin. The green power light will shine when the LeapStart® 3D device is on.
3. **SNAP** the Sampler Activity Book into the Book Holders in your LeapStart® 3D Interactive Learning System.
   Touch the tip of the stylus to any image or word.

You can also touch the tip of the stylus to any word or image on the Interactive Liner to play.

Download Companion Audio and Video for Purchased LeapStart Books

1. Turn on the LeapStart® 3D device, and touch a page.
2. If you have not already done so, follow the 'Get Started' instructions to install the LeapFrog Connect Application.
3. Follow the instructions in the LeapFrog Connect Application to set up your LeapStart® 3D system and download companion audio for each of your books. The power light will flash green when content is downloading.
4. Eject and disconnect the LeapStart® 3D device from your computer.
5. To begin playing, simply touch the tip of the LeapStart stylus to any image or word in your LeapStart activity book.
6. Only books with LeapStart® 3D logo feature animations.

Auto-Shut Down

The device will turn off automatically if it is closed for 5 seconds.

Instructions for Care and Use

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) to 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle with care. Do not use the product near a sink or other wet locations. Take care not to spill food or drinks. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning. Disconnect all cables before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Important Safety Instructions

⚠ **CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

⚠ **CAUTION:** To be used under the direct supervision of an adult

⚠ **CAUTION:** Using this device at loud volumes for long periods of time can permanently damage user's hearing. Please see user's manual for proper usage of this product when using ear buds or headphones.

⚠ **CAUTION:** All packing materials, including tape, plastic sheets, packaging locks and tags, are not part of this toy, and should be discarded for your child's safety.

⚠ **CAUTION:** When books are installed, product may be heavy for some children. Exercise care. **NOTICE:** Toy works best when used on level surfaces

⚠ **CAUTION:** Keep stylus tip away from eyes, nose, ears, and mouth. Not for children under 18 months.

⚠ **CAUTION:** Do not look directly into the stylus light. Not for children under 18 months.

⚠ **WARNING:** Adult supervision required. Not for children under 18 months.

⚠ **WARNING:** Not suitable for children under 18 months. Long cord. Strangulation hazard.

⚠ **WARNING:** The USB cable could be a strangulation hazard. Keep out of reach of children under 3 years of age. The USB cable should be used only by an adult when connecting to a computer and is to be removed by the adult prior to the use of the product by the child.

⚠ **PROTECT YOUR HEARING:** Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

⚠ **CAUTION:** To avoid choking, do not allow your child to eat or drink during play.


⚠ **CAUTION:** Adult supervision is required at all times, while children are playing with this product. Parents of children with injuries or other limitations should consult a doctor before use.

Note: Maximum output voltage ≤ 150mV.

Battery Information

Battery information. Requires 3 AA (called LR6 in some countries) alkaline batteries. Batteries not included.

Battery removal and installation instructions:

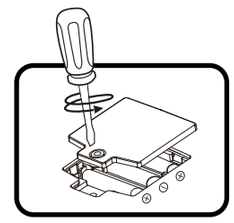

1. Open the battery door with a screwdriver, coin or other household tool.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

Battery safety. Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:
www.recycle-more.co.uk
www.recyclenow.com

Note: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

Environmental phenomena. The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Recycle. Find out how to recycle this product at leapfrog.co.uk/recycle

USB Cable: The USB cable provided with this product complies with EMC Directive 2014/30/EU limits. and other regulatory emission limits. If using other than the provided USB cable, please note that in order not to exceed EMC Directive 2014/30/EU limits and other regulatory emissions limits, a shielded cable must be used. Please remove headphone from headphone jack during USB connection.

CUSTOMER SUPPORT

U.S. ..... leapfrog.com/support
Canada ..... leapfrog.ca/support
U.K. ..... leapfrog.co.uk/support
Australia ..... leapfrog.com.au/support

WARRANTY INFORMATION

Limited warranty. Visit our website leapfrog.co.uk for full details of the warranty provided in your country.

TM & © 2018 LeapFrog Enterprises, Inc. All rights reserved.

LeapStart® 3D

For children ages 2-7 years.
Item number 6039

VTech Electronics Europe plc,
LeapFrog Division, Napier Court,
Abingdon Science Park,
Abingdon, Oxon, OX14 3YT, U.K.

Dear customer,
Please take a few moments to read our Privacy Policy to get full information regarding how your personal data is handled by LeapFrog.
This Privacy Policy is available at
https://www.leapfrog.com/en-gb/legal/privacy

CLASS 1
LED PRODUCT

TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
(JK) 91-003380-031