
Your Radio/Flashlight/Charger

<u>Buy these to be more prepared</u>: ***Three AAA batteries, phone-charging cable, charge plug.***

<u>Note</u>: ***All of the information*** *here—* ***and MORE****—is in the* **<u>User's Manual</u>** *included with your Radio/Flashlight*

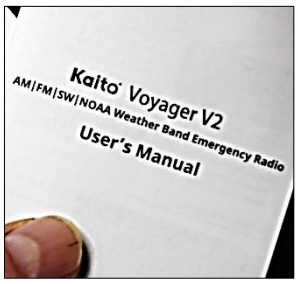

1) The rechargeable battery must be plugged in first. Open the back compartment, remove the battery pack, straighten out the wires, and align the plug. Insert by pushing in the edge of the plug with your fingernail. Press in to connect.




2) Back-up AAA batteries are *NOT INCLUDED*. Purchase three AAA batteries, but **<u>NEVER</u> STORE BATTERIES INSIDE THE RADIO!** Over time, AAA batteries will corrode and ruin this device.

When needed, AAA batteries should be inserted in the bottom compartment. Place batteries **on top** of the black ribbon, insert the flat end (-) against the spring, and push down on each one.



3) Test the flashlight

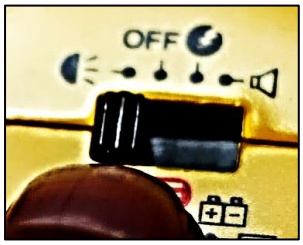

Slide the middle button forward for the flashlight, or slide back for flashing red light or siren sound.



4) The radio can draw power from the **rechargeable battery** (as in photo) or slide the button to the far right for using **AAA batteries.**





Choose **WB (Weather Band), SW (Short Wave), AM,** or **FM** radio stations. The antenna can only flip up vertically; DO NOT try to rotate antenna on its axis.

5) Store a PHONE CHARGING CABLE *(NOT INCLUDED)* with your radio! The only way to charge a phone with this device is by using the hand crank.

First, slide the Selection Switch as shown:



To connect the charge cable, lift the rubber cap and insert the USB connector as shown:




To charge your phone, lift out the crank handle, and turn the dynamo:



IMPORTANT NOTE: Some devices may not be able to be charged due to their voltage and current requirements.

6) Charging the re-chargeable battery can be done by hand-cranking the dynamo, using the solar panel, or by plugging into either a PC's USB port or into a wall outlet. First, slide the Selection Switch to the battery pack icon as shown:

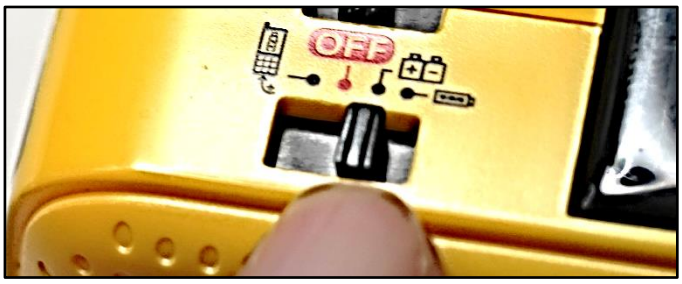

As you charge, the green light on the front of the radio (labeled "CHA") will light up.

7) The charge cord (included), when inserted into the mini-USB jack, can supply power to the rechargeable battery.



IMPORTANT NOTE: The white OUTLET PLUG in this photo is *NOT INCLUDED.* Do NOT charge more than 8 hours! This can damage the rechargeable battery.



Also: Turn <u>OFF</u> both switches when <u>not in use</u>!

8) To attach the wrist strap, use a safety pin or thin wire to push the string loop through the bottom hole. Then use the pin to pull the string though the top hole. Insert the strap end through the string loop.





These additional directions courtesy of M. HOEY Design, Ltd.