
90 90 90

Specifications

Power Supply	USB/Battery
Battery Type	18650 li-ion battery
Battery Capacity	600mAh
Eraser Size	5mm/2.3mm
Packing List	Electric Eraser x 1 Cleaning Brush x 1 Big Refill x 40 Small Refill x 100 USB cable x1

AFMAT®


User Manual

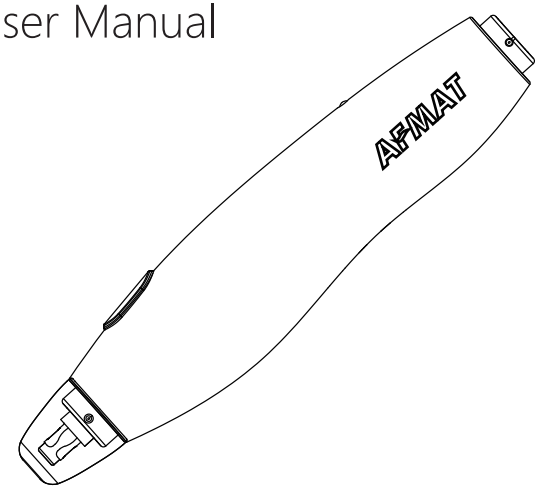


For any questions, please conact us through Amazon.

How to Charge

1. Charge the product when you receive the product, using the USB cable included.

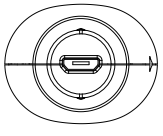


2. The signal light is blue when it is charging. When signal light goes out, the battery is fully charged.

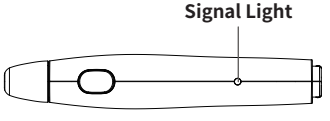


How to Use

1. Open the protection cover and store it at the end of the product.




2. Hold the button and move back and forth to erase targeted area. Touch the paper gently, or the erase will not work properly.

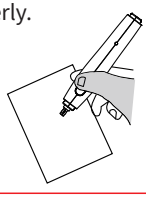


How to Replace the Eraser


1. Pull out the eraser holder when the exposed eraser is used up.

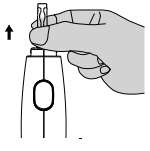

2. Pull out the eraser about 3mm.




3. Put the eraser holder back into the main body.

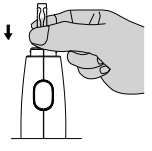

How to Use Small Eraser

1. Insert the thin eraser into the plastic holder.



2. Put the plastic holder into the main body.

