


Shark Cordless Vacuum IZ162HC User Guide

Contents [hide

1 Shark ROCKET PRO Cordless Vacuum Quick Start Guide
1.1 WHAT'S INSIDE AND ASSEMBLY
1.2 POWER SETTINGS
1.3 CHARGING
1.4 LI-ION BATTERY
1.5 VERSATILE CLEANING
1.6 EMPTYING THE DUST CUP
1.7 File Downloads
1.8 References
1.9 Related Manuals

Shark ROCKET PRO Cordless Vacuum Quick Start Guide

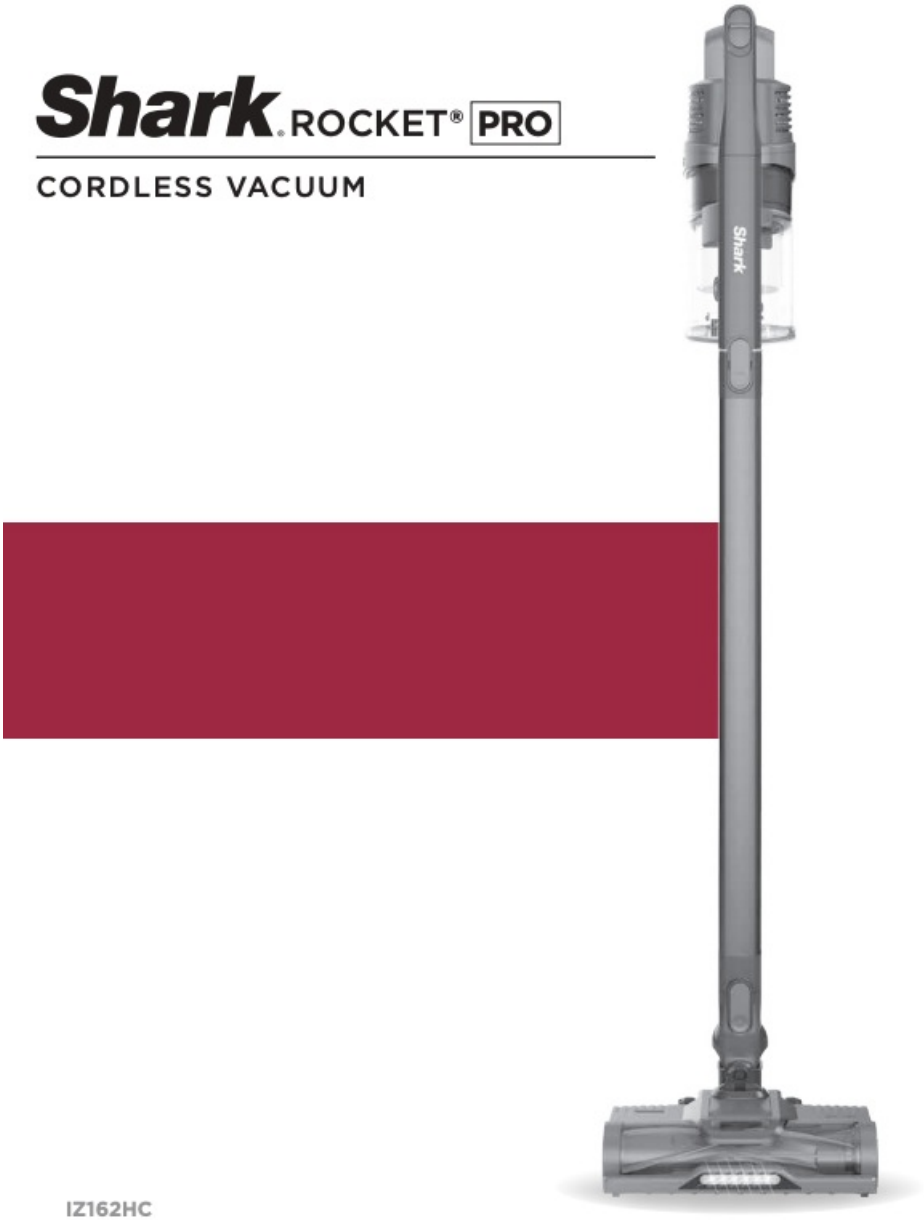


Use this Quick Start Guide to start using your new vacuum's great features.

For questions, visit us online at **sharkclean.com/support**

Register your vacuum at **registeryourshark.com**

WHAT'S INSIDE AND ASSEMBLY

- A Handheld Vacuum
- B Dirt Engage™ Floor Nozzle
- C Wand
- D Upholstery Tool
- E 8" Crevice Tool
- F Charger
- G Li-Ion Battery (Pre-Installed)
- H HEPA Post Motor Filter (Pre-Installed)

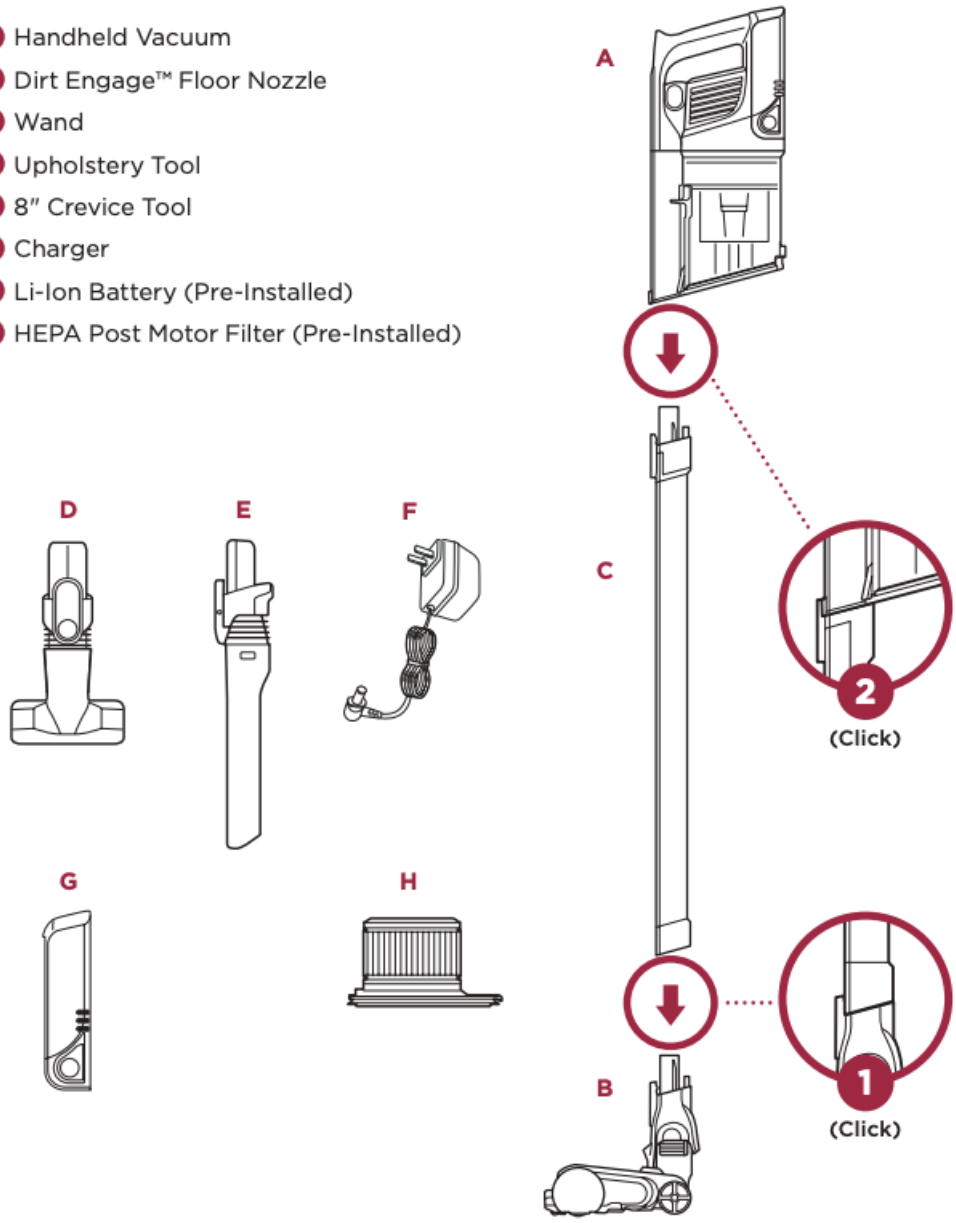


For complete maintenance instructions, see the enclosed Owner's Guide.

For additional parts and accessories, visit sharkaccessories.com.

For additional batteries and charging accessories, visit sharkclean.com/batteries.

POWER SETTINGS

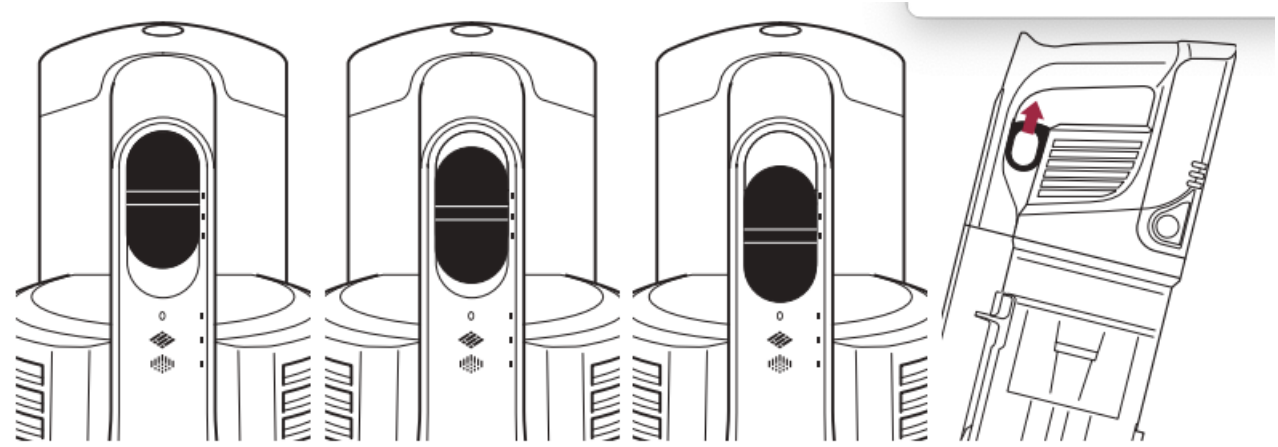


OFF	BARE FLOOR SETTING	CARPET SETTING	BOOST MODE
Slide switch to the top to turn off power. To begin vacuuming in **Standard Mode**, slide switch to the appropriate setting.	**Bare Floor/Area Rugs** The brushroll spins slowly to clean bare floors and small area rugs.	**Carpet** The brushroll spins faster to pick up debris below the surface of your carpets.	For an added boost in power, pull the **Trigger** on the handheld vacuum. Release it to return to standard power.

NOTE: *For deep cleaning per ASTM F 608 (embedded dirt in carpets) please select the Carpet setting and pull the trigger to go into Boost mode.*

NOTE: *Select Carpet setting for stuck-on dirt and debris.*

CHARGING

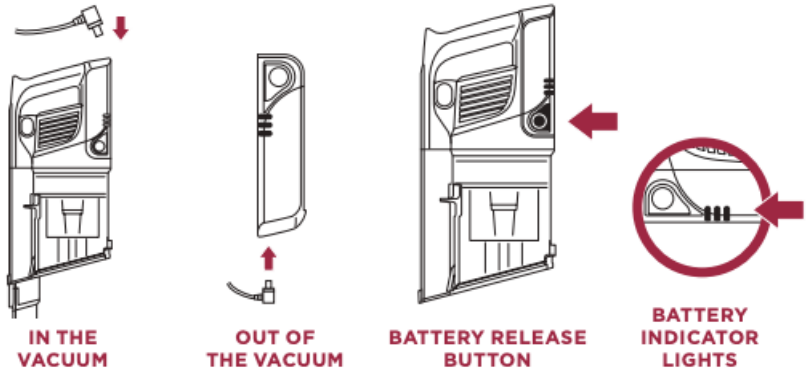

Easily Insert or Remove the Li-Ion Battery

To insert, slide the Li-Ion Battery into the slot in the back of the handheld vacuum. To remove, press and hold the **Battery Release Button** then slide out the Power Pack.

LI-ION BATTERY

In Use

Full Charge | Mid Charge | Low Charge | Nearly Empty | No Charge

Charging

Low Charge | Mid Charge | Nearly Full | Full Charge

NOTE: Full charge takes approximately 3 hours.


NOTE: The battery comes partially charged. Charge fully before first use.

Battery Run Time

MODE	MINUTES
Hand Vac	40
Bare Floor/ Standard Mode	25
Carpet Mode	22
Boost Mode (Hand Vac)	10

VERSATILE CLEANING

Slide the power button to the desired power setting. Place your foot on the floor nozzle and tilt the handheld vacuum back.

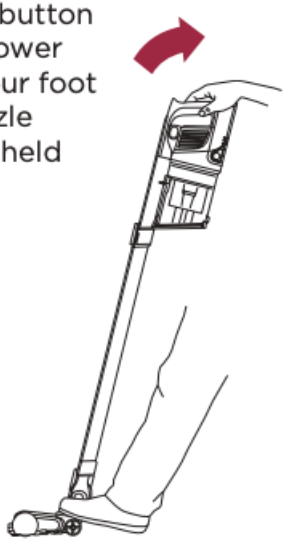


NOTE: Brushroll will only engage when the handle is tilted back.

To detach the wand for above-floor cleaning, stand the vacuum upright, then press the Nozzle Release button on the bottom of the wand and pull the wand up to disconnect it.



OR

To detach the handheld vacuum, press the Wand Release button and lift the handheld vacuum off the wand.

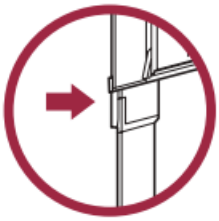


THEN


Attach a cleaning accessory, then choose the power setting.

EMPTYING THE DUST CUP

1. To empty the dust cup, first disconnect the handheld vacuum from the wand by pressing the Wand Release button and pulling up on the handheld vacuum.

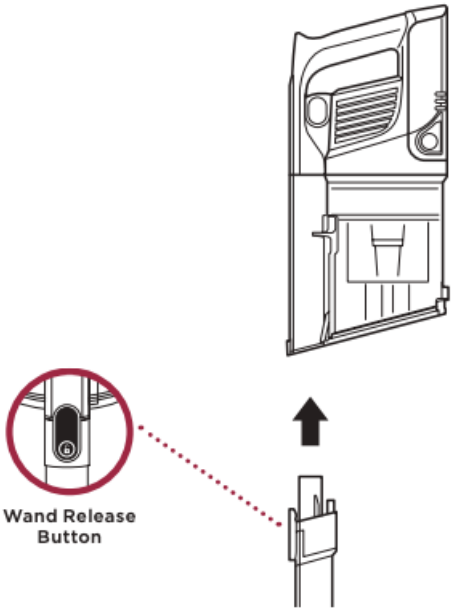

2. Position the dust cup over a trash bin and slide the CleanTouch™ Dirt Ejector forward.

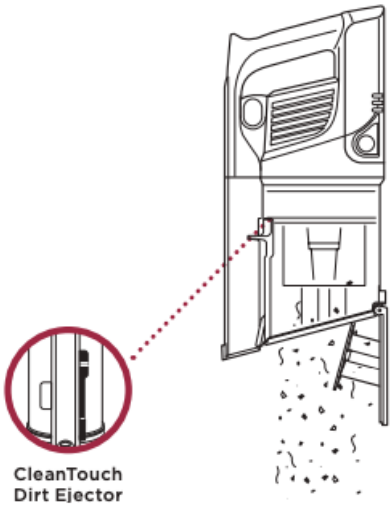

©2019 SharkNinja Operating LLC. SHARK and ROCKET are registered trademarks of SharkNinja Operating LLC. CLEANTOUCH and DIRT ENGAGE are trademarks of SharkNinja Operating LLC.

IZ162HC_QSG_E_MP_Mv1

File Downloads



Shark User Guide Cordless Vacuum, ROCKET PRO Vacuum, IZ162HC — **Download** [optimized] **Download**

References

- **My SharkNinja | Register a Product Shark Logo Ninja Logo Shark Logo**
- **Shark® Cleaning Customer Support | Product FAQs, Manuals, Tips, Videos & more Shark Logo Ninja Logo Shark Logo**
- **Shark® Replacement Parts & Accessories | Vacuum & Steam Mop Parts and Accessories Shark Logo Ninja Logo Shark Logo**
- **Shark® Replacement Parts & Accessories | Vacuum & Steam Mop Parts and Accessories Shark Logo Ninja Logo Shark Logo**
- **CleanTouch™ Trademark**
- **Shark® Trademark**

Related Manuals

1. **Shark Cordless 3-in-1 Wand Vacuum System User Guide** lease make sure to read the enclosed Shark® Owner's Guide...
2. **Shark Anti-Hair Wrap & DuoClean Cordless Vacuum User Guide** Shark Anti-Hair Wrap & DuoClean Cordless Vacuum User Guide REACH...
3. **Shark Wandvac WS630 Series Cordless Vacuum Cleaner User Manual** IMPORTANT SAFETY INSTRUCTIONS FOR HOUSEHOLD USE ONLY • PLEASE READ...
4. **Shark CH901C/CH951C UltraCyclone Pro Cordless Handheld Vacuum User Manual** FEATURES A Air-Intake Nozzle ...
5. **Shark Rocket IZ340 / IZ360 Cordless Vacuum Manual** Shark Rocket IZ340 / IZ360 Cordless Vacuum Manual – Optimized...
6. **Shark Wand Cordless Vacuum Owner's Manual** Spectrum Advanced Voice Modem User Guide IMPORTANT SAFETY

INSTRUCTIONS...