

User Manual of Product 1:

nutribullet Personal Blender for Shakes, Smoothies, Food Prep, and Frozen Blending, 24 Ounces, 600 Watt, Gray, (NBR-0601)

User Manual of Product 2:

NutriBullet 24 Ounce Tall Cup with Standard Lip Ring,
Clear/Gray

NUTRIBULLET®

QUICK START GUIDE

BUILD A SMOOTHIE



LIQUID TO THE MAX LINE

ADD ICE*

(Optional — only up to 25% of your total smoothie ingredients)

**For the most nutritious, frosty smoothies we recommend using frozen fruit and/or veggies.*

1-3 SERVINGS OF BOOSTS

1 SERVING OF HEALTHY FAT

1-2 SERVINGS OF FRUIT

LEAFY GREENS - 50%
(2 cups = 1 serving)

*Don't overfill your cup! Make sure your ingredients and liquid reach no higher than the MAX line. For best results, you must add liquid to your smoothie ingredients.

*The cyclonic action of your NutriBullet requires the use of liquids to make smoothies and other nutritious beverages. It is not intended to be used as an ice crusher or without liquids. To make a delicious cold smoothie, we suggest that you use frozen fruit and chilled liquids. Alternatively, you may add crushed ice, up to 25% of the total cup volume, with water or other liquid filled up to the MAX line. Do not crush ice or other hard items without liquid, as such prolonged use may dull or damage your blades. Always inspect your blades before each use.

The cyclonic action of the **NUTRIBULLET** system requires the use of liquids. **Add liquid to the MAX line** for any smoothie. Our favorites: water, coconut water & unsweetened almond milk.

FOR DELICIOUS RECIPES AND TIPS, GO TO NUTRILIVING.COM

HOW IT WORKS



BLEND MODE

1. Add Ingredients: Fill chilled or room temperature ingredients (20°C / 70°F or cooler) into an included vessel without exceeding the MAX line.

2. Attach Blade: Twist on the Extractor Blade and tighten by hand to make sure vessel is sealed.



3. Push & Twist: Push assembly down, pressing Activator Tabs onto the Activator Buttons. Gently rotate the vessel to lock the unit into place.

4. Blend: Extract for no longer than 1 minute. If more extraction is needed, wait 1 minute, then repeat the extraction process in 1 minute intervals, up to 3 times as needed.



5. Ready to Enjoy: Your perfectly blended cool treat awaits!



NUTRIBULLET®

QUICK REFERENCE SAFE BLENDING GUIDE

THESE SAFETY GUIDELINES ARE INTENDED FOR QUICK REFERENCE ONLY. CAREFULLY READ ALL INSTRUCTIONS IN YOUR USER MANUAL BEFORE OPERATING YOUR NUTRIBULLET®. SAVE THESE INSTRUCTIONS.



GENERAL SAFETY

Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children.

Always operate the **NutriBullet®** on a level surface, leaving unobstructed space beneath and around the Power Base to permit proper air circulation. Slots on the bottom of the Power Base are provided for ventilation to ensure reliable operation and to prevent motor over-heating.

Periodically inspect all **NutriBullet®** components for damage or wear that may impair proper function or present an electrical hazard. Assure that power cord and plug are undamaged. Discontinue use and replace Blending Containers if you detect cracking, crazing, cloudiness or damage to the plastic. Assure that the Blades rotate freely and that the gasket is seated and undamaged. Assure that Power Base switch actuators are unobstructed, clean, and depress easily. Follow maintenance in User Manual and never operate your **NutriBullet®** with damaged components. If your **NutriBullet®** malfunctions in any way, immediately discontinue use and **contact NutriBullet Customer Service at (855) 346-8874.**



HEAT AND PRESSURE SAFETY

WARNING: TO AVOID PERSONAL INJURY, NEVER BLEND HOT INGREDIENTS OR LIQUID IN ANY CLOSED-TOP BLENDING CONTAINER OR PITCHER!! Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).

WARNING: Never Continuously Operate for Longer Than Necessary to Create a Smoothie — generally less than one-minute. Blade friction from prolonged operation can heat ingredients and generate internal pressure in the sealed container. **If the Blending Container is warm to touch, allow to cool. Slowly unscrew the Blade Assembly from the Blending Container, pointed away from your face and body, to release any residual pressure.** Pressure can cause the blended contents to erupt from the Container, resulting in possible personal injury or property damage.

WARNING: Never Blend Carbonated Liquids or Effervescing Ingredients (e.g., baking soda, baking powder, yeast, etc.). Pressure from released gases can cause a sealed Blending Container to burst, resulting in possible injury or property damage.

Sugar in fruits and vegetables can ferment over time, releasing gases and causing pressure to build up in a sealed Blending Container. If you will not consume your smoothie immediately, remove the Blade, cover the Container with a lid or plastic wrap, and refrigerate. **Never store any blended mixture in a sealed Blending Container either unrefrigerated or for any prolonged period of time; contents will spoil and ferment.**



BLADE SAFETY

BLADES ARE SHARP! HANDLE CAREFULLY. Use care when handling any Blade. To avoid laceration injury, do not handle or touch any Blade edge.

To Prevent Leakage and the Possible Separation of Components During Operation, properly align and securely attach (hand tighten) the Blade to a Blending Container, and check for leakage before placing it on the Power Base and operating your **NutriBullet®.**

Never Store any Blade in the Power Base unless attached to a Blending Container. An exposed blade can present a laceration hazard.



ELECTRICAL SAFETY

When using any electrical appliance, basic safety precautions should always be observed, including the following:

To avoid risk of electric shock, never immerse the Cord, Plug, or Power Base of blender in water or other electrical current conducting liquids. Discontinue use if the Cord, Plug, or Power Base is damaged.

Do not use this product **in locations with different electrical specifications or plug types. Do not operate** with any type of **plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage.**

Your NutriBullet® has a **US/Canadian** configured polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will correctly fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. For your safety, do not modify the plug or Motor Base in any way.

nutribullet.

NutriBullet | NutriBullet PRO



User guide.

Important safeguards.

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- **DO NOT USE OUTDOORS.**
- **ALWAYS UNPLUG THE NUTRIBULLET® WHEN NOT IN USE.**

HEAT & PRESSURE SAFETY

To avoid personal injury, never blend hot or carbonated ingredients in any sealed NutriBullet® cup!

WARNING!

Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).

Never continuously operate for longer than necessary to create your recipe — generally less than one minute.

Never blend carbonated liquids or effervescing ingredients (e.g., baking soda, baking powder, yeast, etc.). Pressure from released gases can cause a sealed NutriBullet® cup to burst, resulting in possible injury and/or property damage. Blade friction from prolonged operation

WARNING! can heat ingredients and generate internal pressure in the sealed container. This pressure can cause the cup and blade to separate or blended contents to erupt from the container, resulting in possible personal injury and/or property damage. If the sealed NutriBullet® cups are warm to the touch, power off your machine and allow the vessel to cool for fifteen minutes or more. Allow contents to settle before slowly releasing the cup from the motor base. With the NutriBullet® cup, pointed away from your face and body, slowly unscrew the extractor blade to gently release any residual pressure.

FRICTION FROM THE ROTATING EXTRACTOR BLADES WHEN BLENDING CAN CAUSE INGREDIENTS TO HEAT AND GENERATE INTERNAL PRESSURE IN THE SEALED CUP, IF PERMITTED TO RUN FOR LONGER THAN A MINUTE. IF THE CUP IS WARM TO TOUCH ALLOW IT TO COOL COMPLETELY BEFORE CAREFULLY OPENING, POINTED AWAY FROM YOUR BODY TO AVOID INJURY.

- After blending, allow the contents to settle and release any pressure that

may have built up during the extraction process by slowly unscrewing the container from the blade assembly. Have the container pointed away from you in case there is any built-up pressure.

- If you need to blend for longer than one minute, blend for 1-minute intervals. After the initial and each subsequent 1-minute blending cycle, allow the motor base to shut off completely and wait at least one minute before starting another cycle.
- Do not run for more than 3 consecutive 1-minute intervals to prevent the contents from overheating. Allow contents to settle for 2-3 minutes after the third extraction cycle to prevent overheating and buildup of pressure.
- **DO NOT ALLOW BLENDED MIXTURES TO SIT IN A SEALED CONTAINER FOR LONG PERIODS OF TIME!** Sugar in fruits and vegetables can ferment over time, releasing gases and causing pressure to build up in a sealed NutriBullet® cup. If you will not consume your smoothie immediately, remove the blade, cover the container with a lid or plastic wrap, and refrigerate. Never store any blended mixture

in a sealed NutriBullet® cup either unrefrigerated or for any prolonged period of time; contents will spoil and ferment.

EXTRACTOR BLADE SAFETY

Never store any extractor blade in the motor base unattached to a NutriBullet® cup. An exposed blade can present a laceration hazard.

WARNING: BLADES ARE SHARP! HANDLE CAREFULLY. Use care when handling any blade. To avoid laceration injury, do not handle or touch any blade edge.

AVOID CONTACT WITH MOVING PARTS! Keep hands and utensils out of and away from the extractor blade while blending food to reduce the risk of severe personal injury.

- To prevent leakage and the possible separation of components during operation, properly align and securely attach (hand tighten) the blade to a NutriBullet® cup, and check for leakage before placing it on the motor base and operating your NutriBullet®.
- Once you have stopped your NutriBullet®, wait until the motor comes to a complete stop and the unit powers

down completely before removing the cup/extractor blade from the motor base. Taking the container off the unit prior to complete power down can cause damage to the extractor blade coupling or motor gear.

NEVER BLEND WITHOUT LIQUID AS DOING SO MAY DAMAGE THE EXTRACTOR BLADE OR MOTOR.

- The cyclonic action® of your NutriBullet® requires the use of liquids to make smoothies and other nutritious beverages. The NutriBullet® is not intended to be used as an ice crusher or without liquids. Always add liquid to your smoothie.
- **DO NOT USE** the extractor blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the extractor blade.
- We recommend replacing your extractor blade every 6 months (depending on use) or as needed for optimal performance.
- Certain configurations may contain a milling blade. This blade can be used for milling herbs, spices, grains and seeds.

ELECTRICAL SAFETY

WARNING: Do not use this product in locations with different electrical specifications or

WARNING: plug types. Do not operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If damaged the appliance shall be replaced.

POLARIZED PLUG INFORMATION:

- Your NutriBullet® has a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will correctly fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. For your safety, do not modify the plug or motor base in any way. Doing so will increase risk of injury and void the product's warranty.
- The use of third-party attachments, including canning jars, is forbidden and may cause fire, electric shock, personal injury, or product damage and will void the warranty.
- **To avoid risk of electric shock, never immerse the cord, plug, or motor base of blender in water or other electrical current conducting liquids. Discontinue use if the cord, plug, or motor base is damaged.**
- Always **UNPLUG** the NutriBullet® when it is not in use or **BEFORE** assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the NutriBullet until all parts have stopped moving.
- Periodically inspect all NutriBullet® components for damage or wear that may impair proper function or present an electrical hazard. Assure that power cord and plug are undamaged. Discontinue use and replace NutriBullet® cup if you detect cracking, crazing, cloudiness or damage to the plastic. Assure that the blades rotate freely and that the gasket is seated and undamaged. Assure that motor base switch actuators are unobstructed, clean, and depress easily. Follow maintenance instructions in this user guide on pages 14-15. Never operate your NutriBullet® with damaged components. If your NutriBullet® malfunctions in any way, immediately discontinue use and contact **NutriBullet Customer Service at 1 (800) 523-5993.**
- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow cord to touch hot surfaces, including the stove.
- If the motor stops working,

unplug the motor base and let it cool for an hour before attempting to use it again. Your NutriBullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down sufficiently.

VENTILATION

WARNING: To prevent a fire hazard, the openings on the bottom of the motor base should be free of dust or lint and never obstructed as they are provided for ventilation to ensure reliable motor operation to prevent over heating. Never place your NutriBullet® on top of flammable materials such as newspapers, tablecloths, napkins, dishtowels, place mats or other similar type of materials.

- **CAUTION!** Always operate the NutriBullet® on a level surface, leaving unobstructed space beneath and around the motor base to permit proper air circulation. Slots on the bottom of the motor base are provided for ventilation to ensure reliable operation and to prevent motor overheating.

MICROWAVE & STOVE-TOP HEATING SAFETY

- **DO NOT BLEND HOT INGREDIENTS!** After blending

room temperature or cooler ingredients (21°C/70°F or less), transfer mixture to an unsealed, microwave-safe container or to a stove-top pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients, they may feel cool to the touch, but still be hot inside.

- Do not place any of the NutriBullet® parts in a microwave, oven or stove-top pot or immerse in boiling water as this may result in damage to the accessory.
- Avoid blending the following seeds and pits in the NutriBullet®, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry pits, plum pits, peach pits, and apricot pits. Fruit pits may also cause damage to the blade and cup.

MEDICAL SAFETY

- The information contained in this user guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

MEDICATION INTERACTIONS:

- If you are taking any medication, especially cholesterol lowering medication, blood thinners, blood pressure

drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the smoothie recipes contained in the Recipe Guide.

ADDITIONAL INSTRUCTIONS FOR PROPER USAGE

- **TO AVOID LEAKAGE, DO NOT OVERFILL THE CUP!** Make sure ingredients and liquid do not exceed the MAX line. The cyclonic action® of the NutriBullet® requires space to extract effectively and exceeding the MAX line can result in leakage and may create a dangerous pressurization which can cause the vessel and blade assembly to separate.
- Cup and extractor blades are specific to the exact model of NutriBullet®. Use of incompatible parts (parts from other models) may result in damage to your NutriBullet® or create safety hazards. When replacing cups or an extractor blade or ordering additional accessories from nutribullet.com, or by contacting Customer Service, please specify the model for parts that are compatible with your unit.
- Periodically inspect all NutriBullet® components for damage or wear that

may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged. Discontinue use and replace blending vessels if you detect cracking, cloudiness, or other damage to the vessel, tabs on the vessel or actuator tabs of the motor base. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the motor base is unobstructed and clean. Follow maintenance recommended in pages 14 and 15 and never operate your NutriBullet® with damaged components. If your NutriBullet® malfunctions in any way, immediately discontinue use and contact Customer Service at 1 (800) 523-5993. You may purchase new NutriBullet® cups, and extractor blades at nutribullet.com or by contacting Customer Service. **WE RECOMMEND REPLACING YOUR CUP EVERY SIX MONTHS.**

! Save these instructions!

If you have any comments, questions, or concerns, please go to nutribullet.com. Or call Customer Service at: **1 (800) 523-5993.**


Contents.



- 9 What's included**
- 10 Assembly guide**
- 11 NutriBullet® cup assembly & use**
- 13 Care & maintenance.**
 - 13 How to clean the NutriBullet®
 - 14 Replacement parts
- 15 NutriBullet®
one-year limited warranty**
- 18 Warranty registration**

Thank you for purchasing the NutriBullet®

What's included.

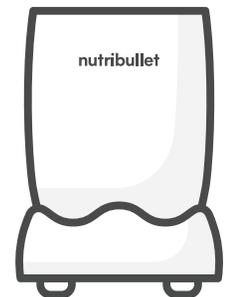

motor base



NutriBullet® cup




extractor blade



cup ring

Assembly guide.

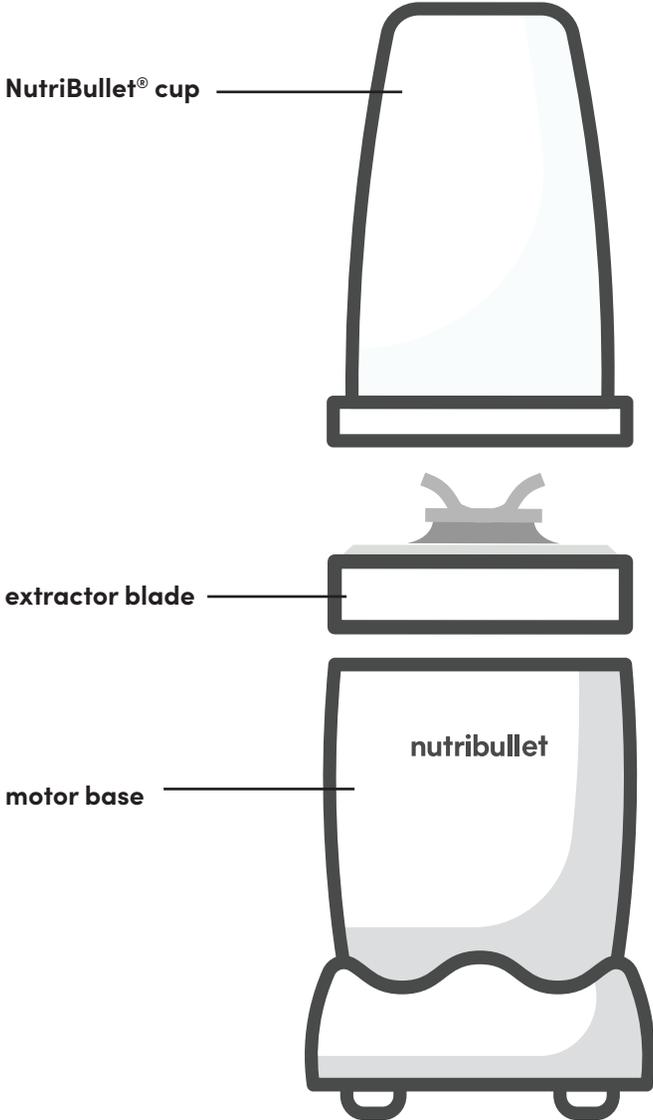

Product configurations may vary. To see our full list of Nutribullet® accessories please visit www.nutribullet.com.

NutriBullet® cup assembly & use.



PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NUTRIBULLET®:

- Make sure the base is plugged in for use.
- Handle the extractor blade assembly with care, as the blades are sharp.
- Never run the NutriBullet® while empty.
- NutriBullet® accessories are not intended to be used in the microwave as it may damage the accessories.
- **Never** leave the NutriBullet® unattended while in use.

Never blend hot ingredients when using any NutriBullet® cup.

WARNING! Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).

- 1 Review all warning and caution statements in the Important Safeguards section (pg. 2-7) before proceeding to Step 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table.



3

Add ingredients and liquid to the NutriBullet® cup.


NOTE: Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.



4

Place the extractor blade onto the cup and twist until it is tightly sealed.

5

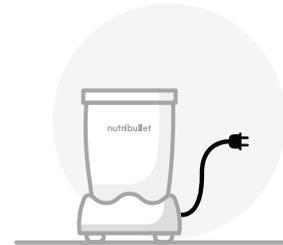

Plug the power cord into an electrical outlet.

6



Turn the cup upside down and place it onto the motor base, gently push and twist.

7



Unlock the assembly by gently pushing and untwisting the cup counterclockwise.

NOTE: Blending should not require longer than one minute to yield smooth and creamy results.



CAUTION

Do not remove the extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

Care & maintenance.

Cleaning the NutriBullet® is easy, simply place any of the pieces (except for the motor base and extractor blade) on the **TOP RACK** of the dishwasher or hand wash with warm soapy water and rinse.

Here's how to clean the NutriBullet®:

STEP 1:

The most important thing – ALWAYS UNPLUG the motor base from the power supply outlet when it is left unattended, before assembling, disassembling, changing accessories or approaching parts that move in use or when cleaning. Do not attempt to handle the appliance until all parts have stopped moving!

STEP 2:

Remove the cup/extractor blade assembly from the motor base.

STEP 3:

Clean the individual components (motor base, extractor blades, NutriBullet® cups) as follows:

MOTOR BASE:

- For the most part, the motor base doesn't really get dirty, but if you neglect to twist the extractor blade on to the cup tightly, liquids can leak out and get into the base and stick to the activator buttons.
- To avoid risk of injury, **NEVER** use your hands or utensils to clean the white actuator Tabs while the NutriBullet® is plugged in.
- Do not remove the rubber or plastic liners inside the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the inside and outside of the motor base until clean.
- Pay particular attention to the white Actuator Tabs on the inside of the motor base to loosen any sticky debris from drips and spills. If necessary, you may use a small brush to scrub the area to ensure it is kept clean.

 **WARNING:** Never submerge the motor base in water.

EXTRACTOR BLADE:

- **DO NOT REMOVE THE GASKET** as this will permanently damage the extractor blade and cause leakage. If after washing as indicated above additional disinfecting is desired, you may rinse with a 10% vinegar/water solution or with lemon juice. If, over time, the gasket becomes loose or damaged, you may order a new extractor blade at NutriBullet.com or contact Customer Service.
- Dry the extractor blade completely. It is helpful to turn the blade on its side in your dish drainer to ensure **BOTH SIDES** of the extractor blade are completely dried.

NUTRIBULLET® CUPS & TO-GO LIDS:

- These items are all **TOP RACK** dishwasher safe. We recommend rinsing them and giving them a quick brush with a dish brush to remove any dried debris before washing them in the dishwasher. **NEVER** use the sanitize cycle to wash the Cups as this may warp the plastic.
- Regularly check the 3 tabs on the side of the Cup (cracking, crazing, breakage or rounding). If damaged,

replace immediately to prevent possible personal injury.

- **NEVER USE A CUP WITH A BROKEN, DAMAGED, OR MISSING TAB AS DOING SO MAY CAUSE THE CUP AND MOTOR BASE TO SEPARATE EXPOSING THE BLADE ASSEMBLY!**

STUBBORN CLEAN UP:

- If ingredients dry inside the NutriBullet® Cup, make your cleanup a snap by filling the cup about 2/3 full with room temperature (21°C/70°F or less) water and screw on the extractor blade. Place the cup/extractor blade assembly on the NutriBullet® motor base for about 20–30 seconds. This will loosen the stuck ingredients, and with a light scrub and rinse, you'll be all finished.

Replacement parts.

To order additional parts and accessories, please visit our website at nutribullet.com/shop/accessories or feel free to contact Customer Service: **1 (800) 523-5993.**

NutriBullet®

one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

NutriBullet's limited warranty obligations are confined to the terms set forth below:

NutriBullet, LLC ("NutriBullet") warrants this NutriBullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and this limited warranty is valid, at its option NutriBullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original

product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes NutriBullet's property. When a refund is given, your product becomes NutriBullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at 1 (800) 523-5993 or contact us via email from our website at nutribullet.com, simply click the contact us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our customer service department you will be asked for your name, address, telephone number and to provide proof of the original purchase (receipt)

containing a description of the product(s), purchase date, and the appropriate NutriBullet® serial number(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This NutriBullet® One-Year Limited Warranty applies only to NutriBullet products distributed by or for NutriBullet that can be identified by the "NutriBullet" trademark, trade name, logo and bar code. NutriBullet's One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by NutriBullet, LLC.

Normal wear and tear is not covered by this limited warranty. This limited warranty applies to consumer use only, and

is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. NutriBullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. NutriBullet® is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused

by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any NutriBullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION

OF THIS LIMITED WARRANTY.

No NutriBullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

Warranty registration.

Please visit nutribullet.com/warranty-registration or call **1.800.523.5993** to register your new NutriBullet. You will be asked to enter the **Serial Number*** of your product, along with the purchase date and place of purchase.

The registration will enable us to contact you in the unlikely event of product safety notification. By registering your product you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.



How to find serial number under the motor base.

nutribullet.

NutriBullet | NutriBullet PRO



1.800.523.5993 | nutribullet.com

NutriBullet, LLC | www.nutribullet.com | All rights reserved.
NutriBullet and the NutriBullet logo are trademarks of CapBran Holdings, LLC
registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving
to improve our products, therefore the specifications contained herein
are subject to change without notice.

200430_NBR & NB9 Series

Guide de l'utilisateur.

Précautions importantes.

LORS DE L'UTILISATION D'UN APPAREIL ÉLECTRIQUE, VOUS DEVEZ TOUJOURS RESPECTER LES CONSIGNES DE SÉCURITÉ ÉLÉMENTAIRES, NOTAMMENT :

Mise en garde! Pour éviter tout risque de blessure grave, lisez attentivement toutes les instructions avant d'utiliser votre NutriBullet®. Lorsque vous utilisez un appareil électrique, vous devez toujours respecter les consignes de sécurité élémentaires, notamment les renseignements importants suivants.

! CONSERVEZ CES INSTRUCTIONS! ● POUR USAGE DOMESTIQUE SEULEMENT

RENSEIGNEMENTS GÉNÉRAUX SUR LA SÉCURITÉ

- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou à proximité des enfants. Gardez le cordon hors de la portée des enfants.
- **NE LAISSEZ JAMAIS LE NUTRIBULLET® SANS SURVEILLANCE PENDANT QU'IL EST UTILISÉ.**
- **NE L'UTILISEZ PAS À L'EXTÉRIEUR.**
- **DÉBRANCHEZ TOUJOURS LE NUTRIBULLET® LORSQU'IL N'EST PAS UTILISÉ.**

SÉCURITÉ RELATIVE À LA CHALEUR ET LA PRESSION

Pour éviter toute blessure corporelle, ne mélangez jamais d'ingrédients chauds ou gazeux dans une tasse NutriBullet® scellée!

MISE EN GARDE!

Les ingrédients chauffés peuvent mettre les récipients scellés sous pression lorsqu'ils sont agités et expulser violemment le contenu chaud lors de l'ouverture.

Commencez toujours le processus de mélange avec des ingrédients et des liquides réfrigérés ou à température ambiante (21 °C/70 °F ou moins).

Ne faites jamais fonctionner l'appareil de façon continue plus longtemps que nécessaire pour créer votre recette - généralement moins d'une minute.

Ne mélangez jamais de liquides gazeux ou d'ingrédients effervescents (p. ex., bicarbonate de soude, poudre à pâte, levure, etc.). La pression des gaz libérés peut faire exploser une tasse NutriBullet® scellée, ce qui peut provoquer des blessures et/ou des dégâts matériels. Le frottement de la lame lors d'un fonctionnement prolongé peut

MISE EN GARDE!

chauffer les ingrédients et générer une pression interne dans le récipient scellé. Cette pression peut entraîner la séparation ou le mélange du contenu de la tasse et de la lame hors du conteneur, ce qui peut provoquer des blessures et/ou des dégâts matériels. Si les tasses NutriBullet® scellées sont chaudes au toucher, éteignez votre appareil et laissez le récipient refroidir pendant au moins quinze minutes. Laissez le contenu se déposer avant de dégager lentement la tasse de la base du moteur. En éloignant la tasse NutriBullet® de votre visage et de votre corps, dévissez lentement la lame d'extracteur pour libérer doucement toute pression résiduelle.

LA FRICTION DES LAMES D'EXTRACTEUR ROTATIVES LORS DU MÉLANGE PEUT FAIRE CHAUFFER LES INGRÉDIENTS ET GÉNÉRER UNE PRESSION INTERNE DANS LA TASSE SCÉLLÉE, SI ON LES LAISSE FONCTIONNER PENDANT PLUS D'UNE MINUTE. SI LA TASSE EST CHAUDE AU TOUCHER, LAISSEZ-LA REFROIDIR COMPLÈTEMENT AVANT DE L'OUVRIER SOIGNEUSEMENT, EN LA POINTANT À L'OPPOSÉ DE VOTRE CORPS POUR ÉVITER LES BLESSURES.

- Après le mélange, laissez le contenu se déposer et libérez toute la pression créée pendant le processus d'extraction en dévissant lentement le récipient

à l'opposé de votre corps au cas où il y aurait une pression accumulée.

- Si vous devez mélanger pendant plus d'une minute, mélangez à intervalles d'une minute. Après le cycle de mélange initial et chaque cycle de mélange d'une minute, laissez la base du moteur s'éteindre complètement et attendez au moins une minute avant de commencer un autre cycle.
- Ne laissez pas l'appareil fonctionner pendant plus de trois intervalles consécutifs d'une minute afin d'éviter toute surchauffe du contenu. Laissez le contenu se déposer pendant 2-3 minutes après le troisième cycle d'extraction afin d'éviter toute surchauffe et toute accumulation de pression.
- **NE LAISSEZ PAS LES MÉLANGES REPOSER DANS UN CONTENANT SCÉLLÉ PENDANT DE LONGUES PÉRIODES!** Le sucre contenu dans les fruits et les légumes peut fermenter avec le temps, libérant des gaz et provoquant une augmentation de la pression dans une tasse NutriBullet® scellée. Si vous ne consommez pas votre boisson fouettée immédiatement, retirez la lame, couvrez le récipient avec un couvercle ou une pellicule de plastique et réfrigérez. Ne stockez jamais un mélange dans une tasse NutriBullet® scellée non réfrigérée ou pendant une période prolongée, car le contenu se gâtera et fermentera.

SÉCURITÉ DE LA LAME D'EXTRACTEUR

Ne rangez jamais une lame d'extracteur dans la base du moteur, non fixée à une tasse NutriBullet®.

Une lame exposée peut présenter un risque de lacération.

LES LAMES SONT TRANCHANTES! MANIPULEZ AVEC SOIN.

Faites attention lorsque vous manipulez une lame. Pour éviter les blessures par lacération, ne manipulez ou ne touchez aucun bord de lame.

MISE EN GARDE! ÉVITEZ TOUT CONTACT AVEC DES PIÈCES EN MOUVEMENT!

Gardez les mains et les ustensiles à l'écart de la lame d'extracteur lors du mélange des aliments afin de réduire les risques de blessures graves.

- Pour éviter les fuites et la séparation éventuelle des composants pendant le fonctionnement, alignez correctement la lame et fixez-la (vissez à la main) à une tasse NutriBullet®. et vérifiez qu'elle ne fuit pas avant de la placer à la base du moteur et de faire fonctionner votre NutriBullet®.
- Une fois que vous avez éteint votre NutriBullet®, attendez que le moteur s'arrête complètement et que l'appareil s'éteigne complètement avant de retirer la tasse/lame d'extracteur de la base du moteur. Le retrait du récipient de l'appareil avant la mise hors tension complète peut endommager l'accouplement de la lame d'extracteur ou

l'engrenage du moteur.

NE MÉLANGEZ JAMAIS SANS LIQUIDE, CAR CELA POURRAIT ENDOMMAGER LA LAME D'EXTRACTEUR OU LE MOTEUR.

- L'action cyclonique® de votre NutriBullet® nécessite l'utilisation de liquides pour préparer des boissons fouettées et autres boissons nutritives. NutriBullet® n'est pas conçu pour être utilisé comme concasseur de glace ou sans liquide. Ajoutez toujours du liquide à votre boisson fouettée.
- **N'UTILISEZ PAS** la lame d'extracteur pour broyer des ingrédients secs tels que des grains, des céréales ou du café, car cela pourrait endommager le moteur et/ou la lame d'extracteur.
- Nous recommandons de remplacer la lame d'extracteur tous les six mois (selon l'utilisation) ou au besoin pour obtenir des performances optimales.
- Certaines configurations peuvent contenir une lame de broyage. Cette lame peut être utilisée pour mouliner des herbes, des épices, des grains et des graines.

SÉCURITÉ ÉLECTRIQUE

MISE EN GARDE! N'utilisez pas ce produit dans des emplacements avec des spécifications électriques ou des types de fiche différents. N'utilisez pas d'adaptateur secteur ou de convertisseur de tension, car ils pourraient provoquer un court-circuit, un incendie, une électrocution, des blessures corporelles ou des dommages au produit.

RENSEIGNEMENTS SUR LA FICHE POLARISÉE

- Votre NutriBullet® est doté d'une fiche polarisée (une branche est plus large que l'autre) pour réduire le risque d'électrocution. Cette fiche s'insérera correctement dans une prise polarisée dans un sens seulement. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si le problème persiste, contactez un électricien qualifié. Pour votre sécurité, ne modifiez en aucun cas la prise ou la base du moteur. Cela augmentera le risque de blessure et annulera la garantie du produit.
- L'utilisation d'accessoires de tiers, y compris les bocaux à conserves, sont interdits et peuvent provoquer un incendie, une électrocution, des blessures corporelles ou des dommages au produit, et annulent la garantie.
- **Pour éviter tout risque d'électrocution, ne plongez jamais le cordon, la fiche ou la base du moteur du mélangeur liquides conducteurs de courant électrique. Cessez l'utilisation si le cordon, la fiche ou la base du moteur est endommagé.**
- **DÉBRANCHEZ** toujours NutriBullet® lorsqu'il n'est pas utilisé ou AVANT de monter, de démonter, de changer des accessoires ou de le nettoyer. N'essayez pas de manipuler NutriBullet tant que toutes les pièces sont encore en mouvement.
- Inspectez périodiquement tous les composants du NutriBullet® pour vous assurer qu'ils ne sont pas endommagés ou usés et qu'ils risquent de compromettre leur fonctionnement ou de présenter un risque électrique. Assurez-vous que le cordon d'alimentation et la fiche ne sont pas endommagés. Cessez l'utilisation et remplacez la tasse NutriBullet® si vous détectez des craquelures, un aspect trouble ou des dommages au plastique. Assurez-vous que les lames tournent librement et que le joint est bien en place. Assurez-vous que les actionneurs de commutateur de base de moteur ne sont pas obstrués, sont propres et qu'il est facile d'appuyer dessus. Suivez les consignes d'entretien de ce manuel de l'utilisateur aux pages 14-15. Ne faites jamais fonctionner votre NutriBullet® avec des composants endommagés. En cas de mauvais fonctionnement de votre NutriBullet®, cessez immédiatement de l'utiliser et appelez **le service à la clientèle de NutriBullet au 1 800 523-5993.**
- Ne laissez pas le cordon pendre du bord de la table ou du comptoir. Ne tirez pas, ne tordez pas et n'endommagez pas le cordon d'alimentation. Ne laissez pas le cordon toucher des surfaces chaudes, y compris le poêle.
- Si le moteur cesse de fonctionner, débranchez la base du moteur et laissez-le refroidir pendant une heure avant de tenter de l'utiliser à nouveau. Votre NutriBullet® possède un disjoncteur thermique interne qui arrête le moteur lorsqu'il surchauffe. Le disjoncteur thermique se réinitialisera lorsque

l'unité est débranchée et que le disjoncteur thermique refroidit suffisamment.

VENTILATION

MISE EN GARDE! Pour éviter tout risque d'incendie, les ouvertures situées au bas de la base du moteur doivent être exemptes de poussière et de peluche, et ne doivent jamais être obstruées car elles servent à la ventilation afin de garantir un fonctionnement fiable du moteur pour éviter toute surchauffe. Ne placez jamais votre NutriBullet® sur des supports inflammables tels que des journaux, des nappes, des serviettes de table, des torchons, des napperons ou tout autre type de support similaire.

- **ATTENTION!** Utilisez toujours le NutriBullet® sur une surface plane en laissant un espace libre sous et autour de la base du moteur afin de permettre une circulation d'air adéquate. Les fentes situées au bas de la base du moteur permettent la ventilation afin d'assurer un fonctionnement fiable et d'éviter la surchauffe du moteur.

SÉCURITÉ DE CHAUFFAGE AU FOUR MICRO-ONDES ET SUR LA CUISINIÈRE

- **NE PAS MELANGER LES INGRÉDIENTS CHAUDS!** Après avoir mélangé les ingrédients à la température ambiante ou les ingrédients les plus froids (21 °C/70 °F ou moins), transférez le mélange dans un récipient non scellé convenant au four à micro-ondes ou dans un faitout à chauffer. Utilisez toujours un thermomètre pour vérifier

la température interne des ingrédients cuits. Ils peuvent sembler froids au toucher, mais restent chauds à l'intérieur.

- Ne placez aucune pièce NutriBullet® dans un four à micro-ondes, un four ou une poêle à frire, ni ne la plongez dans de l'eau bouillante, car vous risqueriez d'endommager l'accessoire.
- Évitez de mélanger les graines et noyaux suivants dans NutriBullet®, car ils contiennent un produit chimique connu pour libérer du cyanure dans le corps lors de l'ingestion: pépins de pomme, noyaux de cerise, noyaux de prunes, noyaux de pêche et noyaux d'abricots. Les noyaux de fruits peuvent également endommager la lame et la tasse.

SÉCURITÉ MÉDICALE

- Les renseignements contenus dans ce guide de l'utilisateur ne sont pas censés remplacer les conseils de votre médecin. Consultez toujours votre médecin concernant les problèmes de santé et de nutrition.

INTERACTIONS MÉDICAMENTEUSES :

- Si vous prenez des médicaments, en particulier des médicaments hypocholestérolémiants, des anticoagulants, des antihypertenseurs, des tranquillisants ou des antidépresseurs, veuillez consulter votre médecin avant d'essayer l'une des recettes de boissons fouettées contenues dans le Guide de Recettes.

INSTRUCTIONS SUPPLÉMENTAIRES POUR UNE UTILISATION APPROPRIÉE

- **POUR ÉVITER LES FUITES, NE PAS TROP REMPLIR LA TASSE!** Assurez-vous que les ingrédients et le liquide ne dépassent pas la limite maximale. L'action cyclonique® du NutriBullet® nécessite de l'espace pour extraire efficacement. Dépasser la ligne MAX peut entraîner des fuites et créer une dangereuse mise sous pression pouvant entraîner la séparation du récipient et de la lame.
- Les lames de coupe et d'extracteur sont spécifiques au modèle exact de NutriBullet®. L'utilisation de pièces incompatibles (pièces d'autres modèles) peut endommager votre NutriBullet® ou créer des risques pour la sécurité. Lorsque vous remplacez des tasses ou une lame d'extracteur ou commandez des accessoires supplémentaires sur nutribullet.com, ou auprès du service à la clientèle, veuillez spécifier le modèle des pièces compatibles avec votre appareil.
- Inspectez périodiquement tous les composants du NutriBullet® pour vous assurer qu'ils ne sont pas endommagés ou usés et qu'ils risquent de compromettre leur fonctionnement ou de présenter un risque électrique. Assurez-vous que le cordon d'alimentation et la fiche ne sont pas endommagés. Cessez d'utiliser et de remplacer les cuves de mélange si vous détectez des fissures, un aspect trouble ou d'autres dommages

à la cuve, aux languettes sur la cuve ou aux languettes d'actionneur de la base du moteur. Assurez-vous que les lames tournent librement et que la structure n'est pas endommagée. Assurez-vous que la base du moteur n'est pas obstruée et propre. Suivez les consignes d'entretien énoncées aux pages 14 et 15 et ne faites jamais fonctionner votre NutriBullet® avec des composants endommagés. En cas de mauvais fonctionnement de votre NutriBullet®, cessez immédiatement l'utilisation et appelez le service à la clientèle au 1 800 523-5993. Vous pouvez acheter de nouvelles tasses NutriBullet® et lames d'extracteur sur nutribullet.com ou auprès du service à la clientèle. **NOUS VOUS CONSEILLONS DE REMPLACER VOTRE TASSE TOUTS LES SIX MOIS.**

! Conservez ces instructions!

Si vous avez des commentaires, des questions ou des préoccupations, veuillez visiter nutribullet.com. Ou appelez le service à la clientèle au **1 800 523-5993**.

Table des matières.




- 29 Ce qui est inclus**
- 30 Guide de montage**
- 31 Assemblage et utilisation de la tasse NutriBullet®**
- 33 Entretien**
 - 33 Comment nettoyer le NutriBullet®
 - 34 Pièces de rechange
- 35 Garantie limitée d'un an NutriBullet®**
- 38 Enregistrement de la garantie**

Merci d'avoir acheté NutriBullet®

Ce qui est inclus.



base de moteur

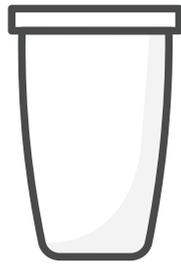

tasse
Nutribullet®




lame
d'extracteur



anneau de
tasse

La configuration du produit peut varier. Pour voir la liste complète des accessoires Nutribullet®, veuillez visiter www.nutribullet.com.

Guide de montage.

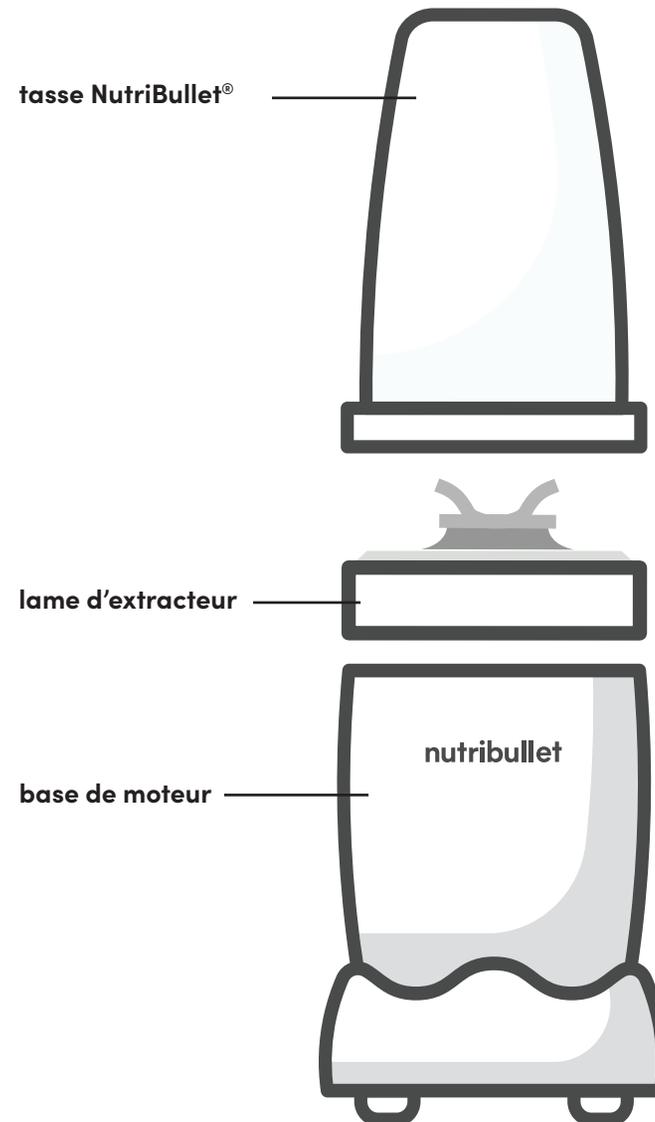

Assemblage et utilisation de la tasse NutriBullet®.



VEUILLEZ GARDER EN TÊTE CES PRÉCAUTIONS IMPORTANTES LORS DE L'UTILISATION DE NUTRIBULLET® :

- Assurez-vous que la base est branchée pour pouvoir être utilisée.
- Manipulez la lame d'extracteur avec précaution, car les lames sont tranchantes.
- N'utilisez jamais le NutriBullet® lorsqu'il est vide.
- Les accessoires NutriBullet® ne sont pas destinés à être utilisés au four à micro-ondes car ils pourraient être endommagés.
- Ne laissez jamais le NutriBullet® sans surveillance pendant son utilisation.

Ne mélangez jamais les ingrédients chauds lorsque vous utilisez une tasse NutriBullet®.

WARNING! Les ingrédients chauffés peuvent mettre les récipients scellés sous pression lorsqu'ils sont agités et expulser violemment le contenu chaud lors de l'ouverture. Commencez toujours le processus de mélange avec des ingrédients et des liquides réfrigérés ou à température ambiante (21 °C/70 °F ou moins). ingredients and liquids (21°C/70°F or cooler).


1 Passez en revue tous les avertissements et mises en garde de la rubrique Précautions importantes (p. 2-7) avant de passer à l'étape 2.

2 Placez la base du moteur sur une surface propre, sèche et plane telle qu'un




3 Ajoutez les ingrédients et le liquide dans la tasse NutriBullet®.

REMARQUE : Ne pas trop remplir! Pour éviter les fuites, n'ajoutez pas d'ingrédients au-delà de la ligne MAX.ingredients beyond the MAX line.

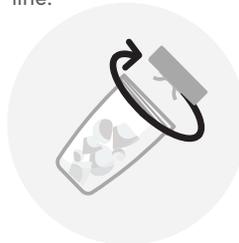

4 Placez la lame d'extracteur sur la tasse et tournez-la jusqu'à ce qu'elle soit bien scellée.

5

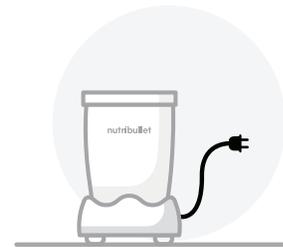

Branchez le cordon d'alimentation dans une prise électrique.

6



Retournez la tasse et placez-la sur la base du moteur, poussez doucement et tournez.

7



Déverrouillez l'assemblage en poussant et en dévissant doucement la tasse dans le sens antihoraire.

REMARQUE : Le mélange ne devrait pas prendre plus d'une minute pour donner des résultats lisses et crémeux.



ATTENTION

Ne retirez pas la lame d'extracteur de la tasse NutriBullet® avant que le mélange ne soit complètement terminé. N'utilisez pas la lame d'extracteur comme couvercle de rangement pour votre tasse. Certains aliments peuvent contenir des ingrédients actifs ou libérer des gaz qui se dilatent s'ils sont laissés dans un récipient scellé, ce qui entraîne une accumulation de pression excessive pouvant entraîner un risque de blessure. Lorsque vous stockez le contenu dans la tasse, utilisez une pellicule de plastique ou du papier d'aluminium pour sceller votre récipient. Pointez toujours le contenu à l'opposé de votre corps au moment de l'ouvrir.

Entretien

Il est facile de nettoyer le NutriBullet®. Il suffit de placer l'une des pièces (à l'exception de la base du moteur et de la lame d'extracteur) sur le panier supérieur du lave-vaisselle ou de la laver à la main avec de l'eau chaude savonneuse et de la rincer.

Voici comment nettoyer le NutriBullet® :

ÉTAPE 1 :

La chose la plus importante - TOUJOURS DÉBRANCHER le socle du moteur de la prise de courant lorsqu'il est laissé sans surveillance, avant d'assembler, de démonter, de changer des accessoires ou d'approcher des pièces qui bougent pendant l'utilisation ou lors du nettoyage. N'essayez pas de manipuler l'appareil avant que toutes les pièces ne soient plus en mouvement!

ÉTAPE 2 :

Retirez l'assemblage tasse/lame d'extracteur de la base du moteur.

ÉTAPE 3 :

Nettoyez les composants individuels (base du moteur, lames de l'extracteur, tasses NutriBullet®) comme suit :

BASE DU MOTEUR :

- En général, la base du moteur n'est pas vraiment sale, mais

si vous négligez de tourner la lame d'extracteur sur la tasse, des liquides risquent de fuir, de pénétrer dans la base et de coller aux boutons d'activation.

- Pour éviter tout risque de blessure, n'utilisez **JAMAIS** vos mains ou vos ustensiles pour nettoyer les languettes blanches de l'actionneur lorsque le NutriBullet® est branché.
- Ne retirez pas les revêtements en caoutchouc ou en plastique à l'intérieur de la base du moteur.
- Utilisez une éponge ou un chiffon imbibé d'eau tiède savonneuse pour nettoyer l'intérieur et l'extérieur de la base du moteur jusqu'à ce qu'ils soient propres.
- Portez une attention particulière aux onglets blancs de l'actionneur situés à l'intérieur de la base du moteur pour détacher les débris collants des gouttes et des éclaboussures. Si nécessaire, vous pouvez utiliser une petite brosse pour frotter la zone afin de la garder propre.

 **MISE EN GARDE :** Ne jamais plonger la base du moteur dans l'eau.

LAME D'EXTRACTEUR :

- **NE RETIREZ PAS LE JOINT** car cela endommagerait de manière permanente la lame d'extracteur et causerait des fuites. Si après le lavage comme indiqué ci-dessus, une désinfection supplémentaire est souhaitée, vous pouvez

la rincer avec une solution à 10% de vinaigre/d'eau ou avec du jus de citron. Si, au fil du temps, le joint se desserre ou est endommagé, vous pouvez commander une nouvelle lame d'extracteur sur NutriBullet.com ou contacter le service à la clientèle.

- Sécher complètement la lame d'extracteur. Il est utile de tourner la lame dans son égouttoir pour s'assurer que les deux côtés de la lame d'extracteur sont complètement secs.

TASSES ET COUVERCLES POUR EMPORTER NUTRIBULLET® :

- Tous ces articles vont sur le **PANIER SUPÉRIEUR** du lave-vaisselle. Nous recommandons de les rincer et de les brosser rapidement avec une brosse à vaisselle pour éliminer les débris secs avant de les laver au lave-vaisselle. N'utiliser **JAMAIS** le cycle de désinfection pour laver les tasses car cela pourrait déformer le plastique.
- Vérifiez régulièrement les trois languettes situées sur le côté de la tasse (fissures, craquelures, cassures ou arrondissement). S'il est endommagé, remplacez-le immédiatement pour éviter tout risque de blessure.
- **N'UTILISEZ JAMAIS UNE TASSE AVEC UNE LANGUETTE CASSÉE, ENDOMMAGÉE OU**

MANQUANTE, CAR CELA PEUT FAIRE EN SORTE QUE LA TASSE ET LA BASE DU MOTEUR SE SÉPARERONT, EXPOSANT AINSI LA LAME!

NETTOYAGE DE TACHES TENACES :

- Si les ingrédients sèchent à l'intérieur de la tasse NutriBullet®, effectuez le nettoyage en un clin d'œil en remplissant la tasse aux 2/3 avec de l'eau à la température ambiante (21 °C/70 °F ou moins) et en vissant la lame d'extracteur. Placez l'ensemble tasse/lame d'extracteur sur la base du moteur NutriBullet® pendant environ 20-30 secondes. Cela détachera les ingrédients coincés et, suite à un brossage et un rinçage légers, vous aurez terminé.

Pièces de rechange.

Pour commander des pièces et des accessoires supplémentaires, veuillez visiter notre site Web à l'adresse nutribullet.com/shop/accessories ou n'hésitez pas à appeler le service à la clientèle : **1 800 523-5993**.

Garantie limitée d'un an NutriBullet®.

GARANTIE LIMITÉE DE NUTRIBULLET®

Les obligations de garantie limitée de NutriBullet sont limitées aux conditions énoncées ci-dessous :forth below:

NutriBullet, LLC («NutriBullet») garantit ce NutriBullet® contre les défauts de matériaux et de fabrication pour une période d'un an à compter de la date d'achat d'origine. Cette garantie limitée n'est valable que dans le pays d'achat du produit et est fournie avec le produit sans frais supplémentaires. Toutefois, des frais d'expédition et de traitement seront exigés pour les retours, les remplacements et les remboursements.

Si un défaut existe et que cette garantie limitée est valide, NutriBullet® (1) réparera le produit sans frais, en utilisant des pièces de rechange neuves ou remises à neuf, (2) remplacera le produit avec un produit neuf ou qui a été fabriqué à partir de pièces usagées neuves ou utilisables et sont au moins équivalentes du point de vue fonctionnel au produit d'origine, ou (3) remboursera le prix d'achat du produit. Un produit de remplacement assume la

garantie restante du produit original. Un produit réparé bénéficie d'une garantie d'un an à compter de la date de réparation. Lorsqu'un produit ou une pièce est échangé, tout article de remplacement devient votre propriété et l'article remplacé devient la propriété de NutriBullet. Lorsqu'un remboursement est effectué, votre produit devient la propriété de NutriBullet.

OBTENTION DE SERVICE DE GARANTIE

Pour bénéficier du service de garantie limitée, appelez simplement notre service à la clientèle au 1 (800) 523-5993 ou contactez-nous par courriel à partir de notre site Web à nutribullet.com. Cliquez simplement sur le lien Nous joindre, et remplissez et envoyez le formulaire de contact client. Il nous fera plaisir de vous aider. Lorsque vous contactez notre service à la clientèle, on vous demandera votre

nom, votre adresse, votre numéro de téléphone, et de fournir une preuve de l'achat d'origine (reçu) contenant une description du ou des produit(s), la date d'achat et le numéro de série approprié de NutriBullet®. (s) Avant d'envoyer votre produit pour un service de garantie limitée, veillez à conserver une copie de tous les documents pertinents pour vos fichiers (reçu, etc.). Il est toujours recommandé d'acheter une assurance produit et des services de suivi lors de l'envoi de votre produit. N'oubliez pas que des frais d'expédition et de traitement seront encourus et ne sont pas couverts par la garantie limitée d'un an.

EXCLUSIONS ET LIMITATIONS

Cette garantie limitée d'un an NutriBullet® ne s'applique qu'aux produits NutriBullet distribués par ou pour NutriBullet qui peuvent être identifiés par la marque, le nom commercial, le logo et le code à barres « NutriBullet ». La garantie limitée d'un an de NutriBullet ne s'applique pas aux autres produits pouvant sembler authentiques, mais qui n'ont pas été distribués/vendus par NutriBullet, LLC.

L'usure normale n'est pas

couverte par cette garantie limitée. Cette garantie limitée est réservée à l'usage du consommateur et est annulée lorsque le produit est utilisé dans un cadre commercial ou institutionnel.

Cette garantie limitée s'applique uniquement à l'acheteur initial et n'est pas transférable. De plus, une preuve d'achat doit être fournie.

La réparation ou le remplacement du produit (ou, si la réparation ou le remplacement est impossible, le remboursement du prix d'achat) constitue le recours exclusif du consommateur au titre de cette garantie limitée. NutriBullet, LLC ne sera pas responsable des dommages accessoires ou indirects résultant de la violation de cette garantie limitée ou de toute garantie implicite sur ce produit.

Cette garantie limitée vous confère des droits légaux spécifiques. Vous pouvez également jouir d'autres droits qui varient d'un État à l'autre. NutriBullet® n'est pas responsable des dommages causés aux produits non couverts par cette garantie (p. ex., tasses, livre, guide de l'utilisateur).

Cette garantie limitée ne s'applique pas: (a) aux dommages causés par un accident, un usage abusif, une utilisation abusive ou une application incorrecte; (b) aux dommages causés par un mauvais entretien (y compris un service de réparation de pièces non autorisé); (c) à un produit ou une pièce qui a été modifié de quelque manière que ce soit; (d) si un numéro de série ou une marque déposée NutriBullet® a été supprimé ou altéré; et ou (e) si le produit a été utilisé avec un adaptateur/convertisseur.

CETTE GARANTIE LIMITÉE ET LES RECOURS VISÉS CI-DESSUS SONT EXCLUSIFS ET REMPLACENT TOUTES LES AUTRES GARANTIES, RECOURS ET CONDITIONS, QU'ELLES SOIENT ORALES OU ÉCRITES, EXPRESSES OU TACITES. NUTRIBULLET® DÉCLINE SPÉCIFIQUEMENT TOUTES LES GARANTIES IMPLICITES, Y COMPRIS, SANS S'Y LIMITER, LES GARANTIES DE VALEUR MARCHANDE ET D'ADÉQUATION À UN USAGE PARTICULIER. SI NUTRIBULLET NE PEUT PAS DÉCLARER DE FAÇON LA GARANTIE IMPLICITE EN VERTU DE CETTE GARANTIE LIMITÉE, TOUTES CES GARANTIES, Y COMPRIS LES GARANTIES DE VALEUR MARCHANDE ET D'ADÉQUATION À UN USAGE PARTICULIER, SONT LIMITÉES

DURÉE À LA DURÉE DE LA DURÉE DE CETTE GARANTIE LIMITÉE. Aucun revendeur, agent ou employé NutriBullet® n'est autorisé à modifier la présente garantie.

nutribullet ne peut être tenue responsable des dommages directs, spéciaux, accessoires ou consécutifs découlant de toute violation de garantie ou de condition, ni de toute autre théorie légale, y compris, mais sans s'y limiter, la perte de profits, la durée d'indisponibilité, la cote d'estime, les dommages à l'équipement et aux biens, et le remplacement de ceux-ci. nutribullet® n'affirme pas spécifiquement être en mesure de réparer tout produit en vertu de cette garantie limitée.

Certains états et provinces n'autorisant pas l'exclusion ou la limitation des dommages accessoires ou indirects, ni la limitation de la durée des garanties ou conditions implicites, il est possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à vous. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez également jouir d'autres droits qui varient selon l'état ou la province.

Enregistrement de la garantie.

Veuillez visiter nutribullet.com/warranty-registration ou appeler le 1 800 523-5993 pour enregistrer votre nouveau NutriBullet. Vous serez invité à entrer le numéro de série* de votre produit, ainsi que la date et le lieu d'achat.

L'enregistrement nous permettra de vous contacter dans l'éventualité improbable d'une notification de sécurité du produit. En enregistrant votre produit, vous reconnaissez avoir lu et compris les instructions d'utilisation et les mises en garde énoncées dans les instructions.



Comment trouver le numéro de série sous la base du moteur.

1.800.523.5993 | nutribullet.com

NutriBullet, LLC | www.nutribullet.com | Tous droits réservés.
NutriBullet et le logo NutriBullet sont des marques commerciales
de CapBran Holdings, LLC, enregistrées aux États-Unis et dans le monde entier.

Les illustrations peuvent différer du produit réel. Nous nous efforçons constamment
d'améliorer nos produits. Par conséquent, les spécifications contenues dans ce
document sont sujettes à modification sans préavis.

Série 200430_NBR et NB9