

Electric Mason Jar Sealer Instruction Manual

M23

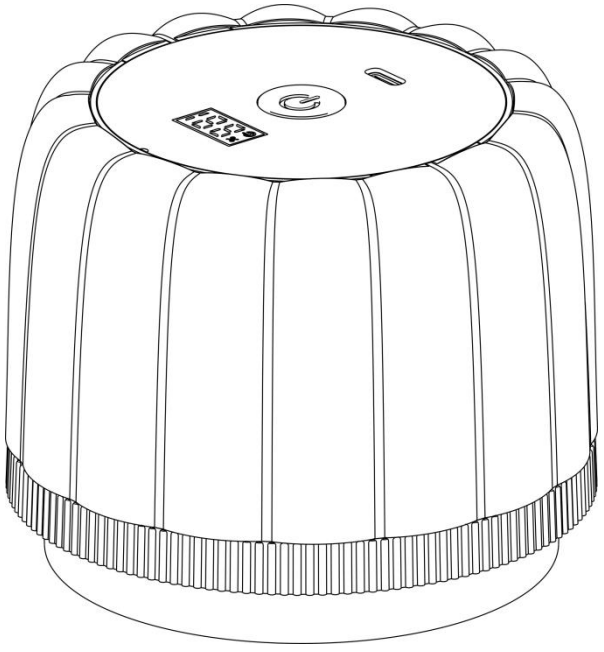

Parts and Functions

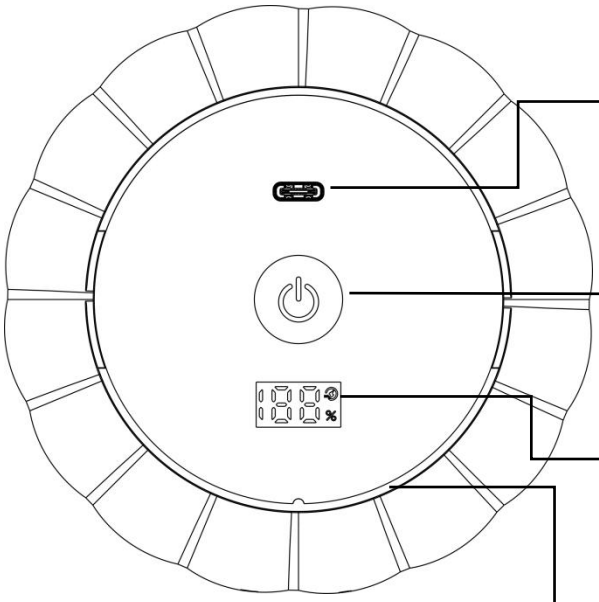


Type-c charging interface

Button:
Click to start or stop


LED digital display area, display content:
1. Work timing display
2. Power display
3. Charging display

Work/Charging indicator light bar：
1、The green light blinks when working
2、The red light blinks when charging
3、The green light on when fully charged

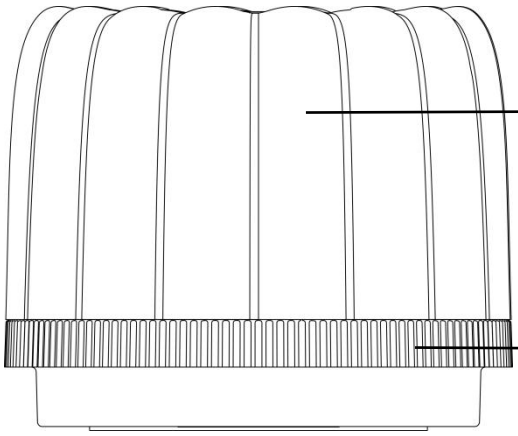


Main machine
(suitable for 3.39in wide mouth mason jar)

Regular mouth sealing converter
(suitable for 2.76in regular mouth mason jar/removable)

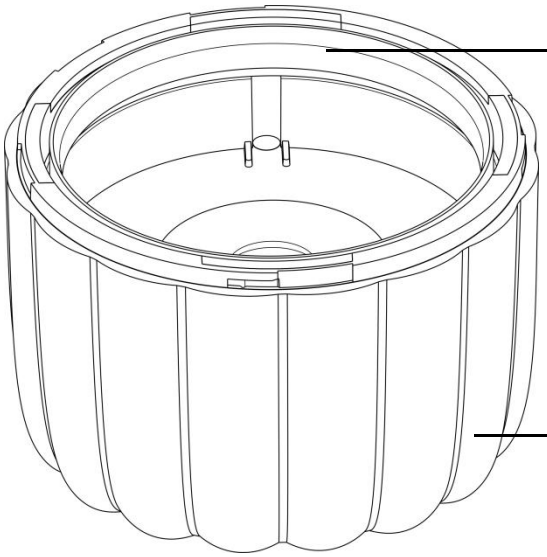

Wide mouth sealer sealing silicone ring
(When working, please check that the silicone ring is installed properly, and do not let the silicone ring break away from the host)

Wide mouth sealer

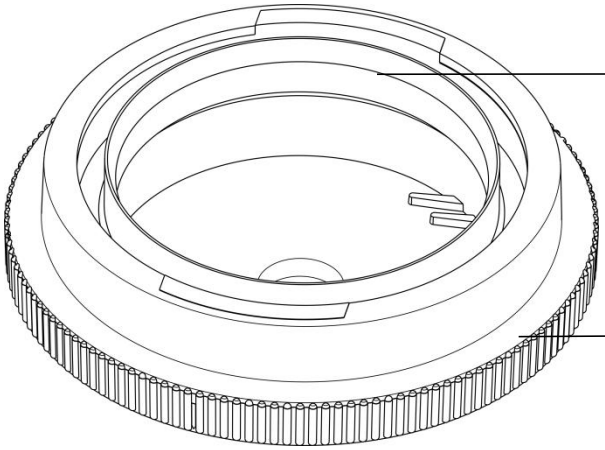


Regular mouth sealing converter silicone ring
(When working, please check that the silicone ring is installed properly, and do not let the silicone ring break away from the host)

Regular mouth sealing converter
(Remove it from the main unit when you need to use the wide mouth seal)

Instructions

Ⅰ. How to seal the Mason Jar

1.1. Put food into the Mason jar (do not fill it completely with food. It is recommended that the food does not exceed the bottom screw thread of the mouth of the Mason jar to achieve a better vacuum sealing effect)

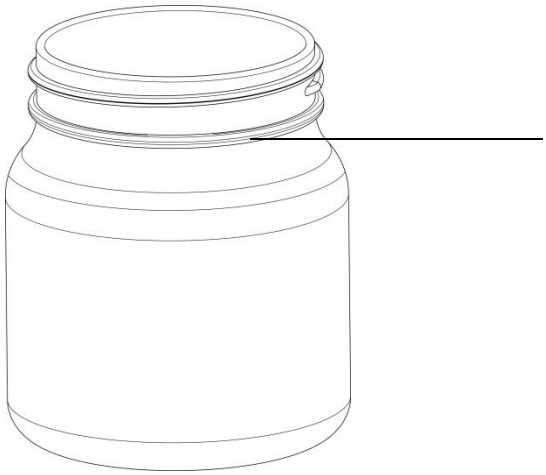


1.2. Wipe the bottle mouth and mason lid clean to make sure there is no dirt or liquid residue


1.3. Align the mason lid with the mouth of the Mason jar (see the picture below)



1.4. Align the electric mason jar sealer with the mouth of the jar and press down to make the lid and the inside of the mason jar sealing machine fit tightly (see the picture below)

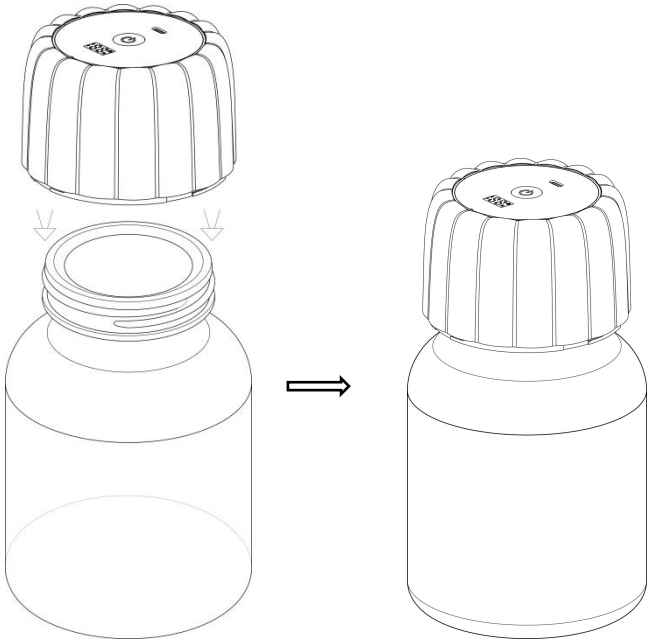


Wide mouth operation diagram

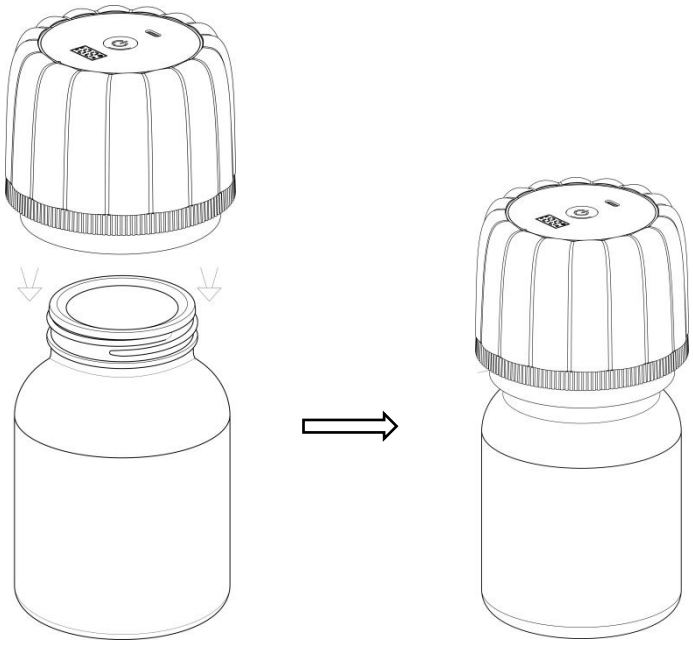

Regular mouth operation diagram

1.6. Press the vacuum button of the Mason jar to start the device. Of course, the device will automatically stop when it detects that the air in the jar has been extracted.

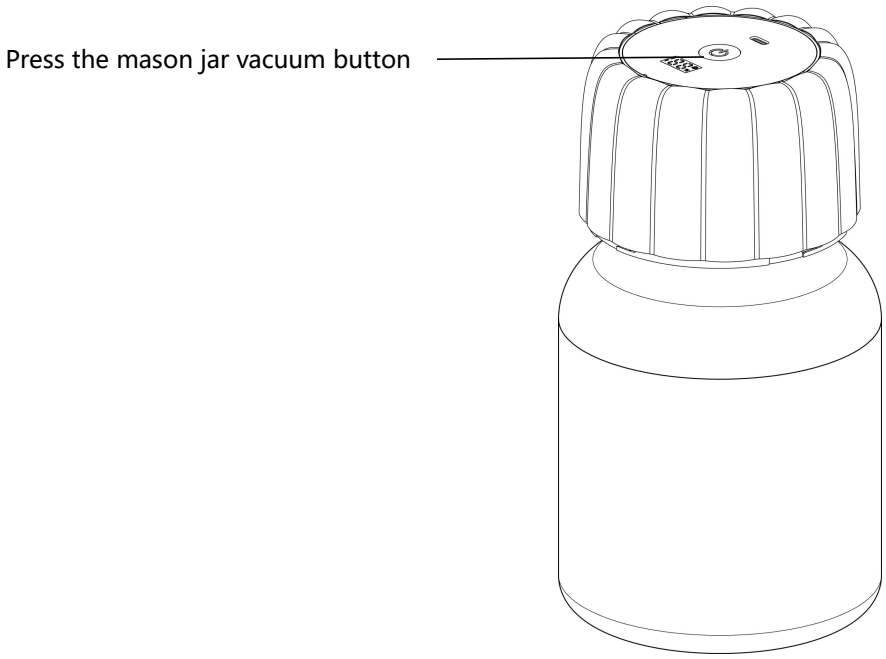

Warm reminder:


1. Since vacuum pressure will be generated between the electric mason jar sealer and the mouth of the jar , you need to press harder during the pressing process to confirm that the bottle cap and the inside of the sealer fit tightly.

2.When the power display is lower than 20%, please charge in time.

3. For vacuuming mason jars, the equipment will automatically stop after detecting that the air in the jar has been extracted. Of course, if you need to stop working midway, you can stop it manually by clicking the mason jar vacuum button.

Ⅱ.How to disassemble the regular port converter

To remove the "Regular mouth sealing converter" from the host, please rotate the "Regular mouth sealing converter" counterclockwise, after hearing a "click", (⌂) corresponds to (🔓), and then pull up the "Regular mouth sealing converter" (See below).

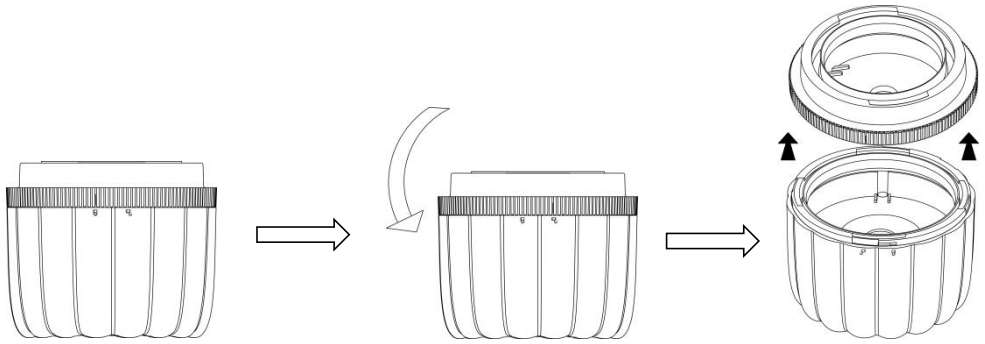

Ⅲ.Troubleshooting

Wide mouth/Regular mouth mason jars cannot be sealed	1. Check whether there are any particulate matter or liquid in the sealing area of the mason jar mouth and lid. If so, please wipe them clean.
	2. Check whether the sealing silicone ring in the sealing area is offset or damaged.
	3. Check whether the sealer is pressed to the bottom when using it. If you are not sure, please repeat the operation to ensure that the sealer is pressed to the bottom.
	4. If sealing liquid items, please keep the liquid items under the threads of the Mason jar to ensure a reliable sealing effect.

Ⅳ.Product Specifications

Product name	Electric Mason Jar Sealer Instruction Manual
Product material	ABS, silicone
Charging voltage	DC 5V
Recharging current	＜1A
Rated power	<5W
Charging time	<2 hours

Ⅴ.Precautions for Safe Use

1、Please fully charge it before use.

2、All accessories of this product are not allowed to be sterilized in a microwave oven to avoid damage by thermal deformation.

3、Do not put the host into water or other liquids, nor rinse it under water or other liquids; all parts are strictly prohibited from being cleaned at temperatures above 60°C.

4、Do not use steel wool, abrasive cleaners or corrosive liquids (such as gasoline, acetone, etc.) to clean the product.

5、Do not put any part of this product into the dishwasher.

6、This product is not waterproof.

7、Do not plug or unplug the charging cable with wet hands.