
CROSLEY
FURNITURE

24" Upholstered Saddle Seat Bar Stool

CF500224

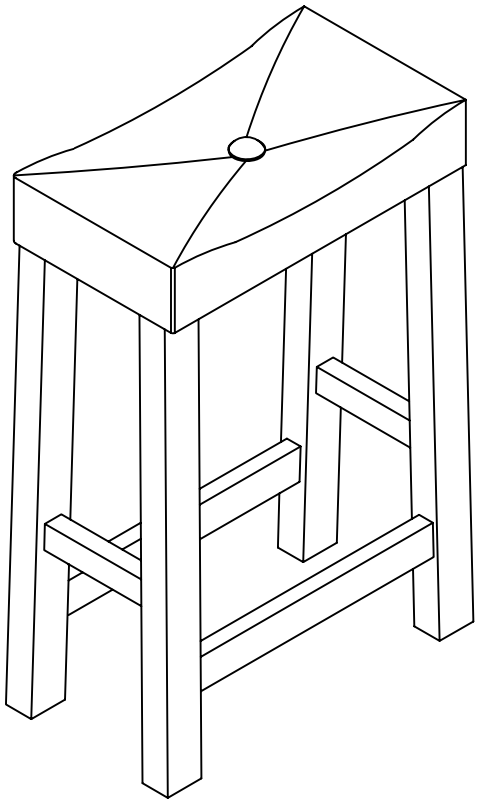


Congratulations! You have purchased a stylish piece of Crosley Furniture. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Should you experience any missing or damaged parts, **do not return to the store.** Please visit our website **www.Crosleyfurniture.com,** or contact us directly at 800-815-4796.



Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, hten buff with a dry soft clean cloth.

24" UPHOLSTERED SADDLE SEAT BAR STOOL



Assembly Instructions

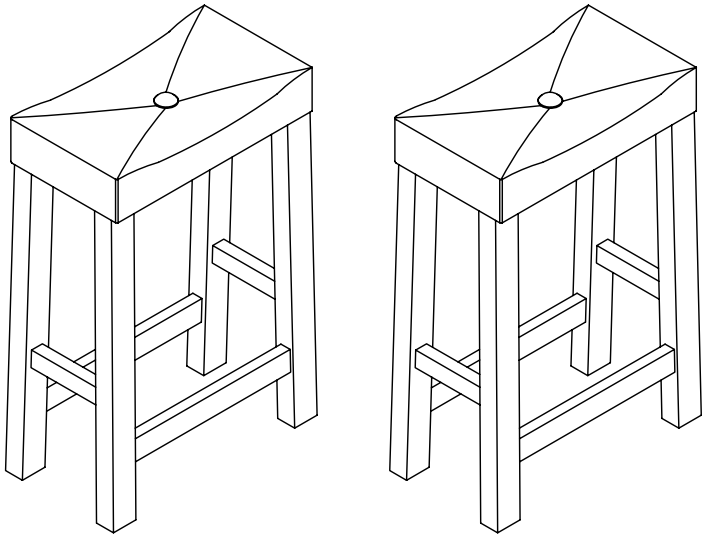

PART LIST:


Part #	Part Name	Drawing	QTY
1	Seat Cushion		2PCS
2	Leg		4PCS
3	Leg		4PCS
4	Short Side Stretcher		4PCS
5	Long Front / Rear Stretcher		4PCS

HARDWARE LIST:


Part #	Part Name	Drawing	QTY
A	Flat Washer (Φ18*1.5mm)		8PCS
B	Spring Washer (Φ10*2mm)		8PCS
C	Bolt (Φ1/4"*45mm)		8PCS
D	Wood Screw (Φ4*37mm)		16PCS
E	Allen Wrench (56*21*4mm)		1PC
F	Glue		1PC

Step 1. CHAIR LEGS ASSEMBLY

1A. Add a small amount of glue inside the large holes.

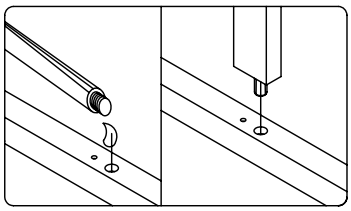


1B. Insert Short Side Stretcher (4) with wood dowel aligned on the upper hole on the side of leg.
1C. Align another leg (2) to the stretcher.
1D. Insert Wood Screws (D) into predrilled holes at both ends of the stretcher.
1E. Tighten Wood Screws (D) with Phillips Head screwdriver (not supplied).
1F. Repeat same step for the other side of legs.

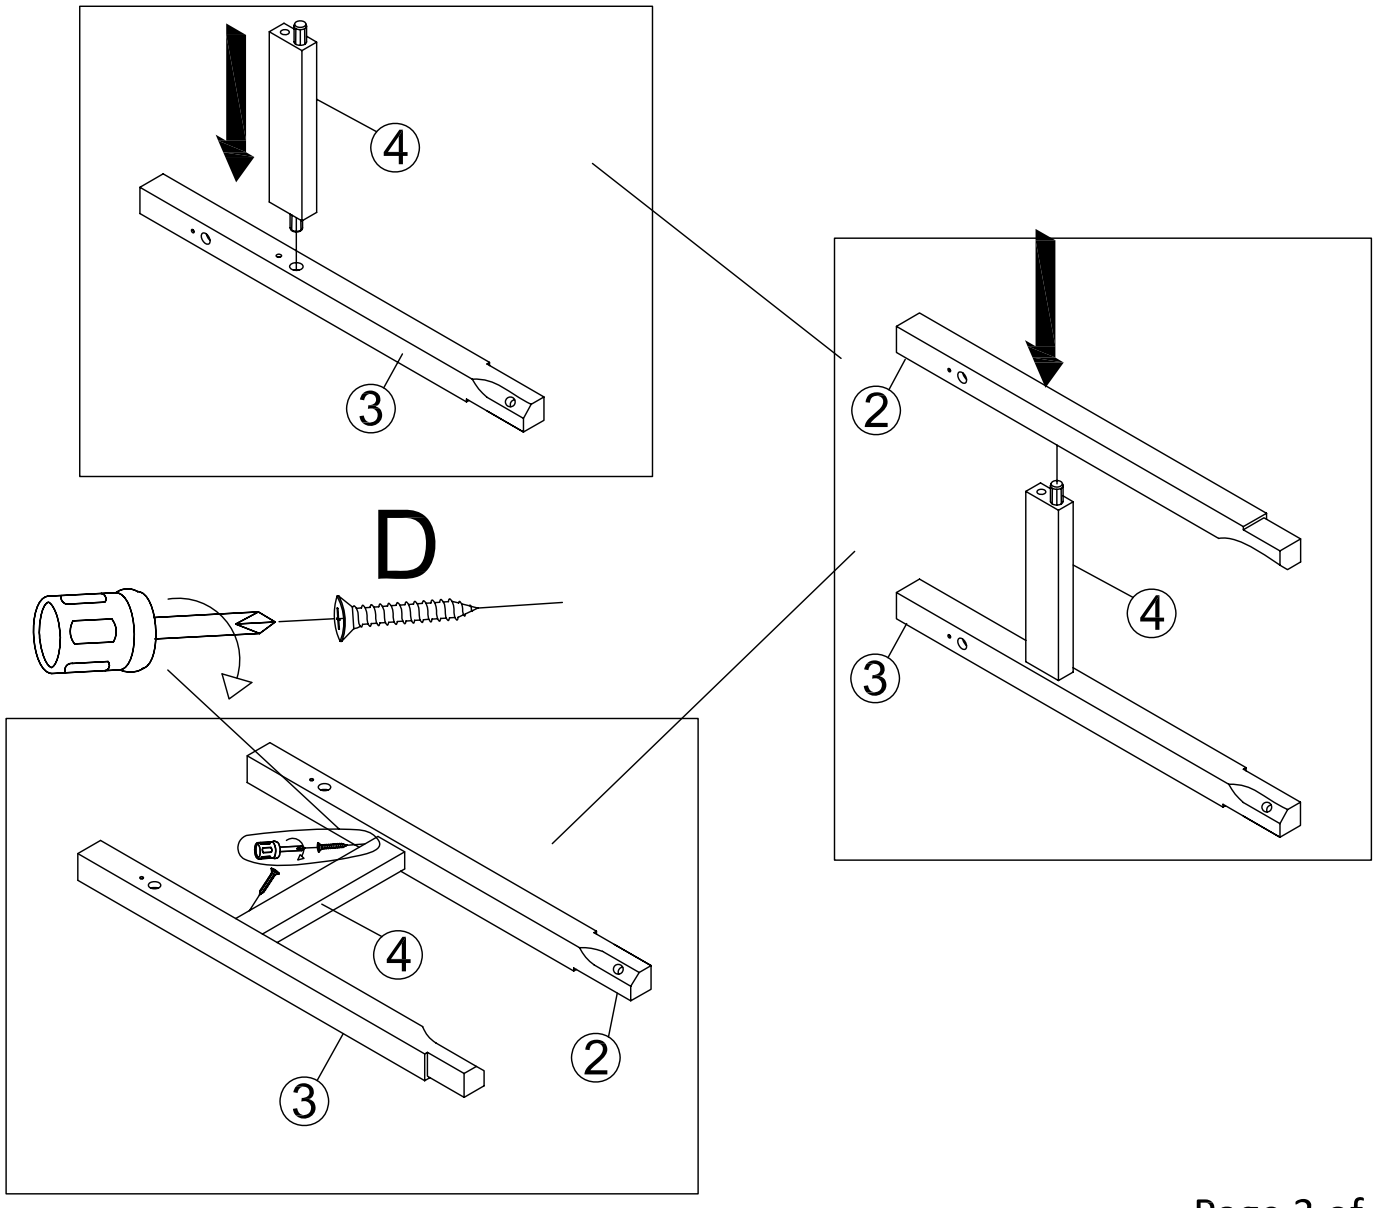


Step 2. FRONT STRETCHER ASSEMBLY


2A. Add a small amount of glue inside the large holes.

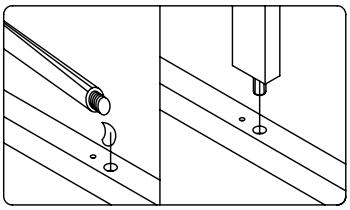


2B. Insert Long Front/Rear Stretchers (5) with wood dowels aligned with the lower holes into one of the completed sides.

2C. Attach remaining side to the other end of the Long Front/Rear Stretchers (5) with wood dowels aligned with the lower holes.

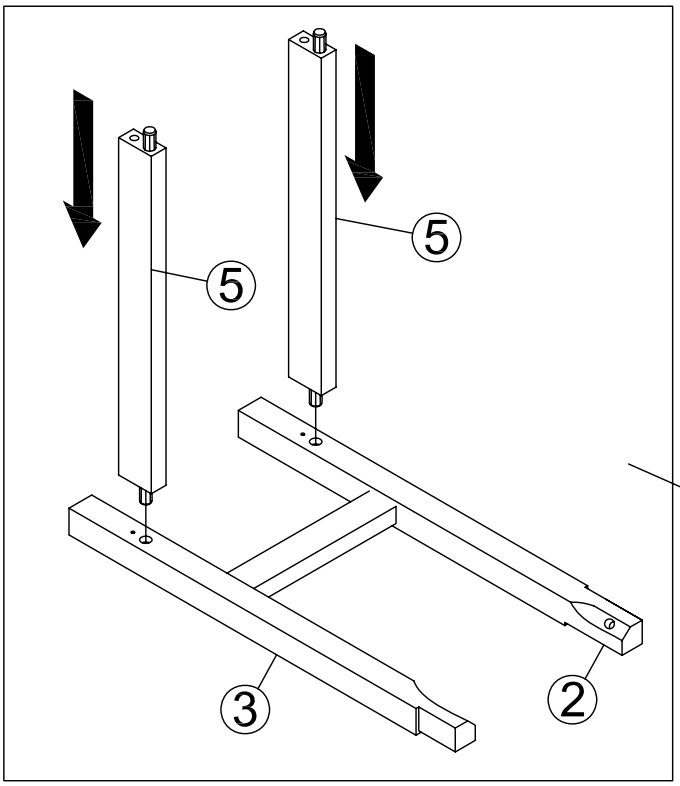


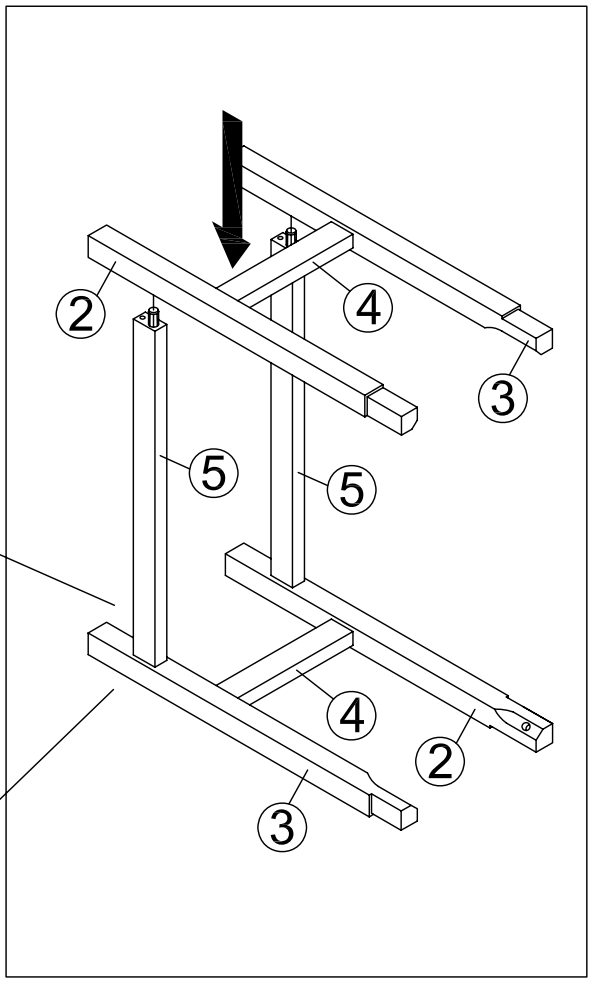


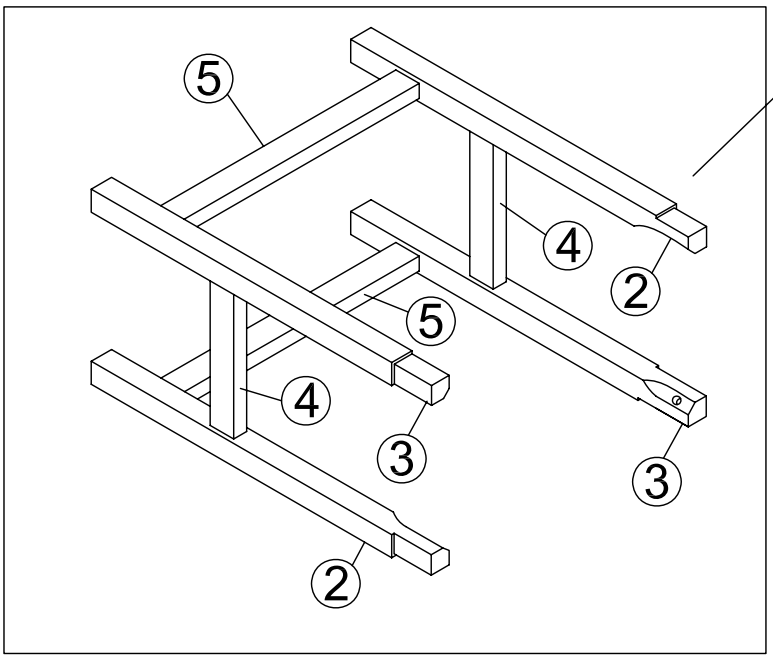



Step 3. CUSHION SEAT ASSEMBLY

3A. Place seat cushion (1) upside down on a clean cloth.
3B. Slowly insert legs into the bottom frame of seat cushion.
3C. Insert Bolt (C) with Spring Washer (B) and Flat Washer (A) through seat frame into legs.
3D. Turn bolts clockwise with Allen Wrench (E) until tight.
3E. Insert Wood Screws (D) into both ends of Long Front/Rear Stretchers and tighten with Phillips Head screwdriver (not supplied).

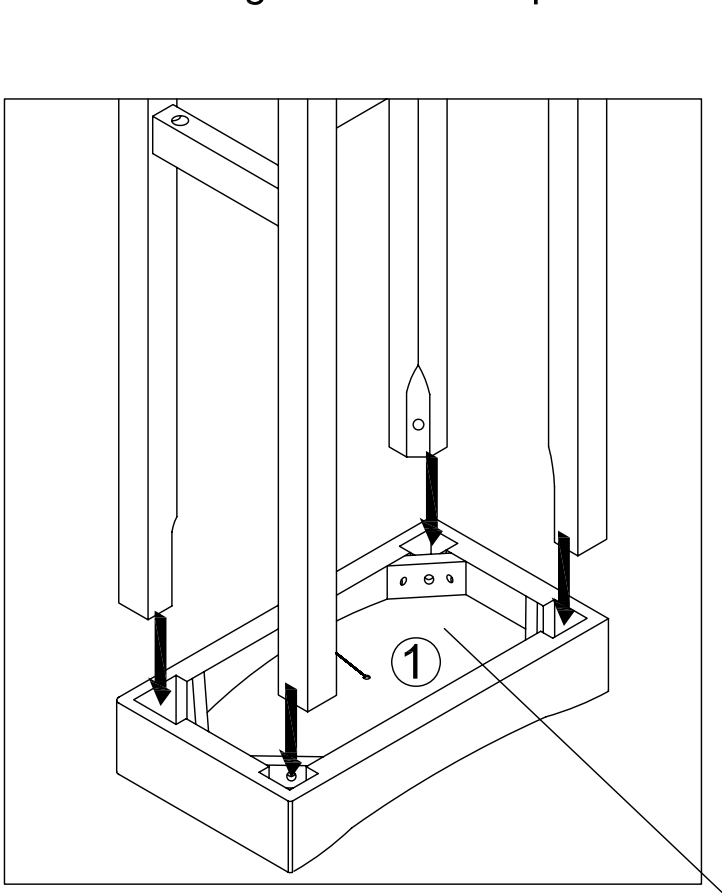

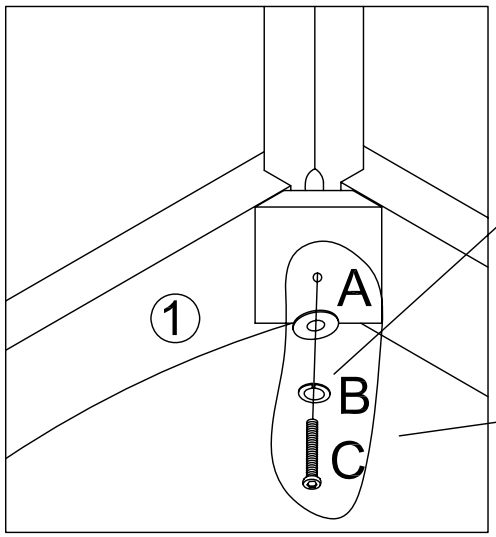

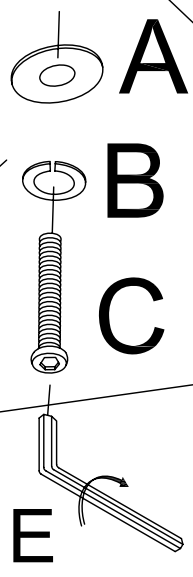

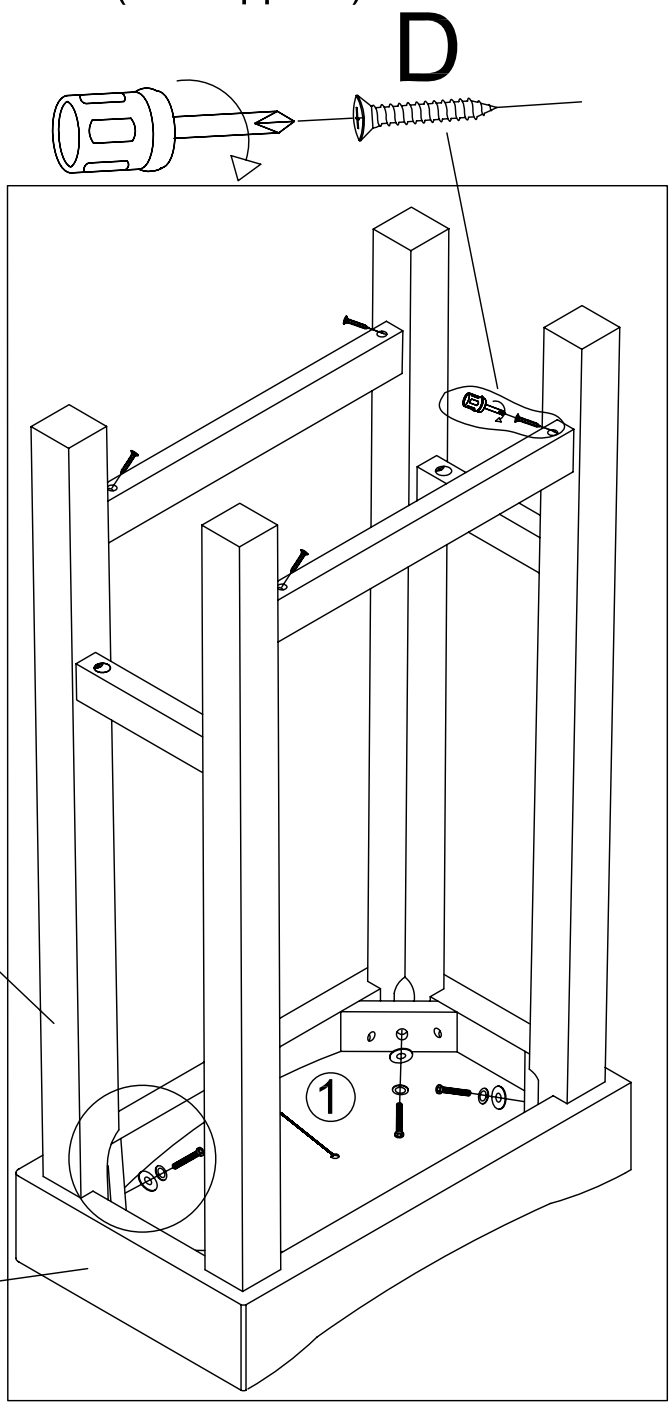

Repeat steps 1-3 to assemble remaining stool.



Limited Manufacturers Warranty


Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.
Should you experience any missing or damaged parts, do not return to the store. Please visit our website **www.Crosleyfurniture.com,** or contact us at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.
In accordance with the "Moss-Magnuson Warranty Act" of july 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.

CROSLEY
FURNITURE

Kitchen Cart Cabinet

CF3005







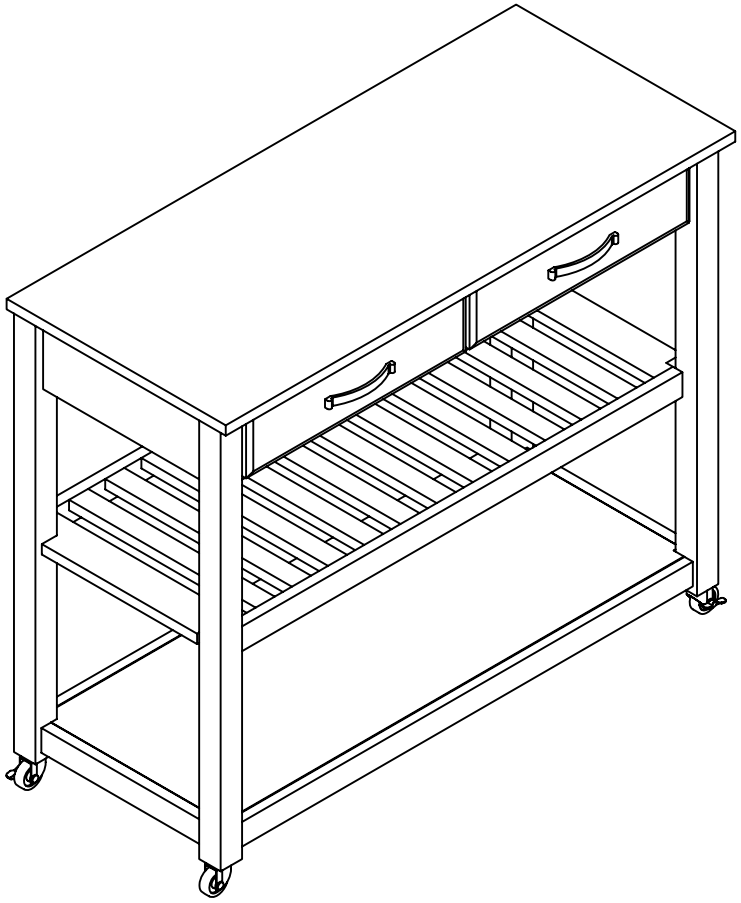


Congratulations! You have purchased a stylish piece of Crosley Furniture. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.



Should you experience any missing or damaged parts, **do not return to the store.** Please visit our website **www.Crosleyfurniture.com,** or contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, hten buff with a dry soft clean cloth.

Parts List

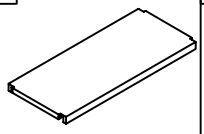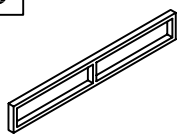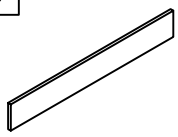
1 	2 	3 	4 	5 	6 
Top panel 1 PC	Left side frame 1 PC	Right side frame 1 PC	Bottom panel 1 PC	Front frame 1 PC	Back panel 1 PC
7 	8 	9 	10 	11 	12 
Partition panel 1 PC	Drawer front panel 2 PC	Drawer left side panel 2 PCS	Drawer right side panel 2 PC	Drawer bottom panel 2 PCS	Drawer back panel 2 PCS
13 					
Adjustable shelf 1 PCS					

Hardware List


A 	B 	C 	D 	E 
Cam lock 11 PC	Cam bolt 11 PC	Wood Dowel 10 PC	Drawer pull 2 PC	Short Round head bolt 4 PC
F 	G 	H 	I 	J 
Allen Bolt 8 PC	Allen wrench 1 PCS	Screw 16 PC	Shelf holder 4 PC	Long Round head bolt 2 PC
K 	L 	M 		
Towel bar 1 PC	Castor With Brake 2 PC	Castor Without Brake 2 PC		


Tools Needed:Allen Wrench(Part#G)(included)
Phillips Head Screw Driver(Not included)


Step 1. Insert Cam Bolts (B) into pre-drilled holes of parts (1, 2, 3, 5 & 6) using a Phillips head screwdriver. DO NOT OVERTIGHTEN.

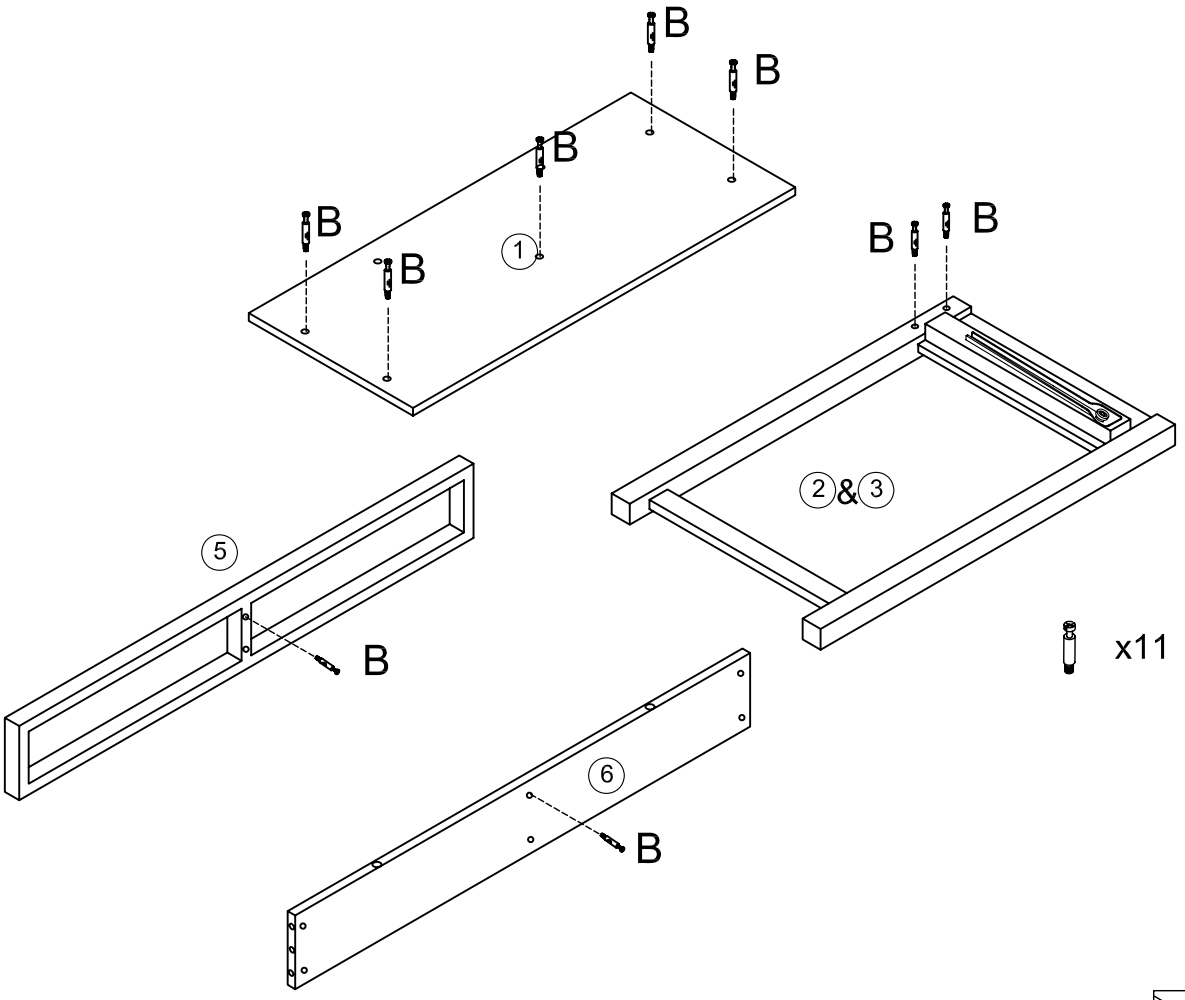

Step 2. Lay Back Panel (6) on a flat surface with Cam Bolt (Part B) facing up. Attach Right Side Frame (3) to Back Panel (6) using Cam Locks (A) & Wood Dowels as shown. Now attach Right Side Frame (3) to Bottom Panel (4) using Allen Bolts (F) as shown. Repeat the previous steps for Left Side Frame (2).

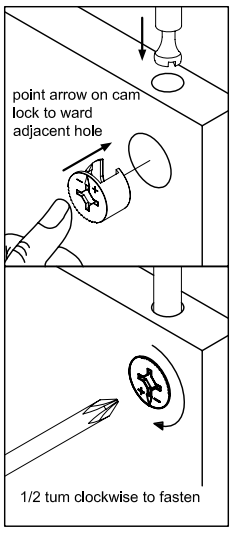


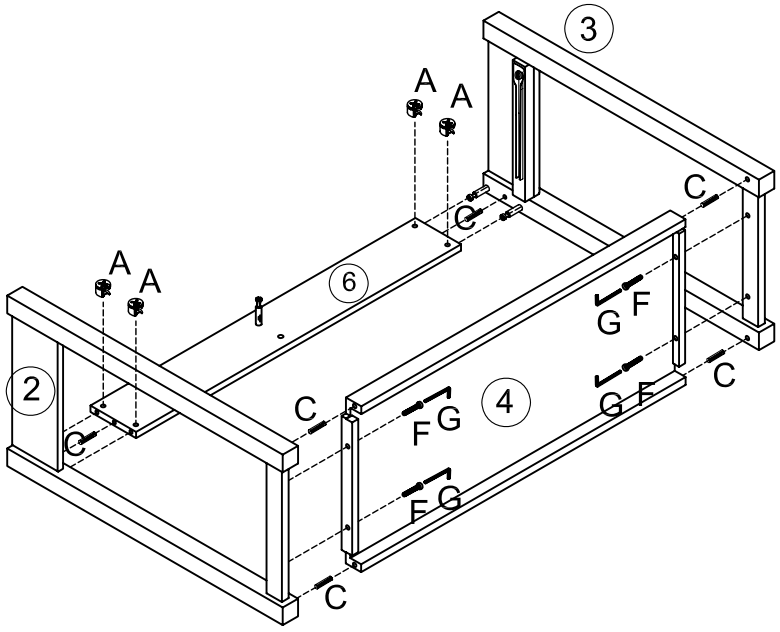


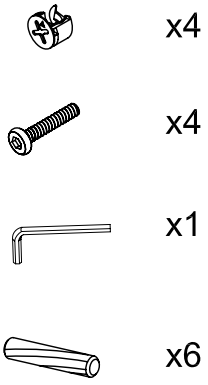


Step 3.

Attach Partition Panel (7) to Back Panel (6) using Cam Lock (A) & Wood Dowel (C) as shown. Note - Be sure the wheels on the drawer glide are facing the front of the cabinet. Now attach Front Frame (5) to Partition Panel (&) using Cam Lock (A) & Wood Dowel (C) as shown. Attach Caster with brake (L) & Caster (M) to Right & Left Side Frames (2 & 3) by rotating clockwise.

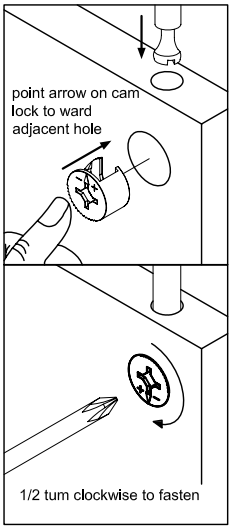


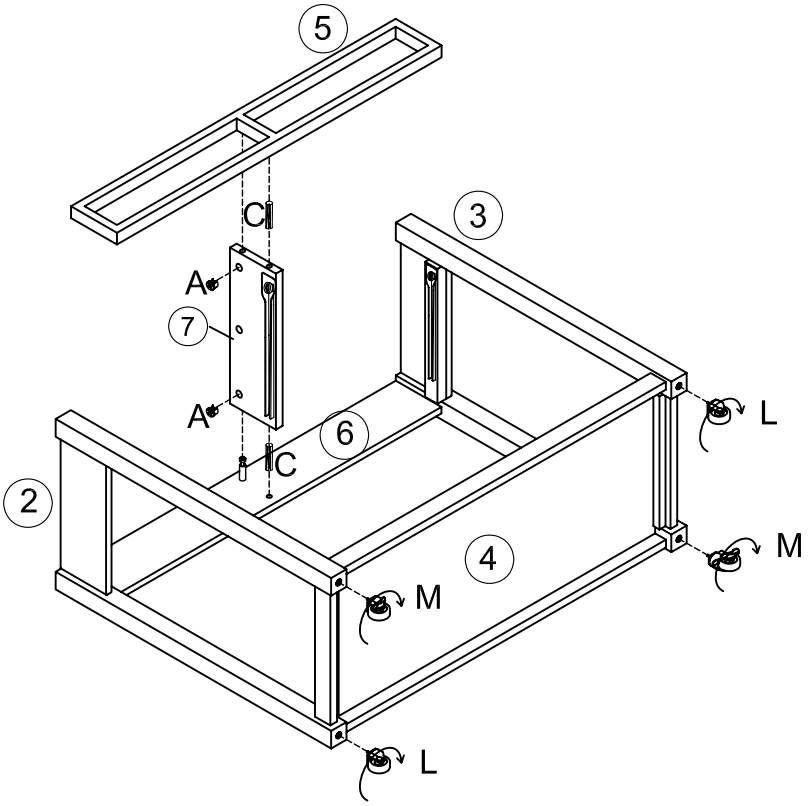





Step 4.


Attach Front Frame (5) to Right & Left Side Frames (2 & 3) using Allen Bolts (F) as shown. Attach Towel Bar (K) to Right Side Frame (3) using Long Round Head Bolts (J) as shown. Now attach Top (1) using Cam Locks (A) & Wood Dowels (C) as shown.

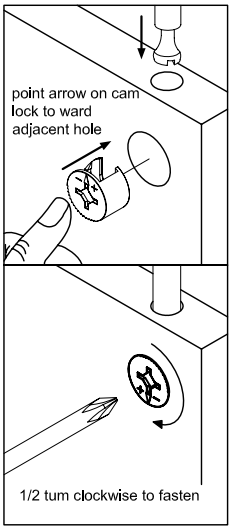

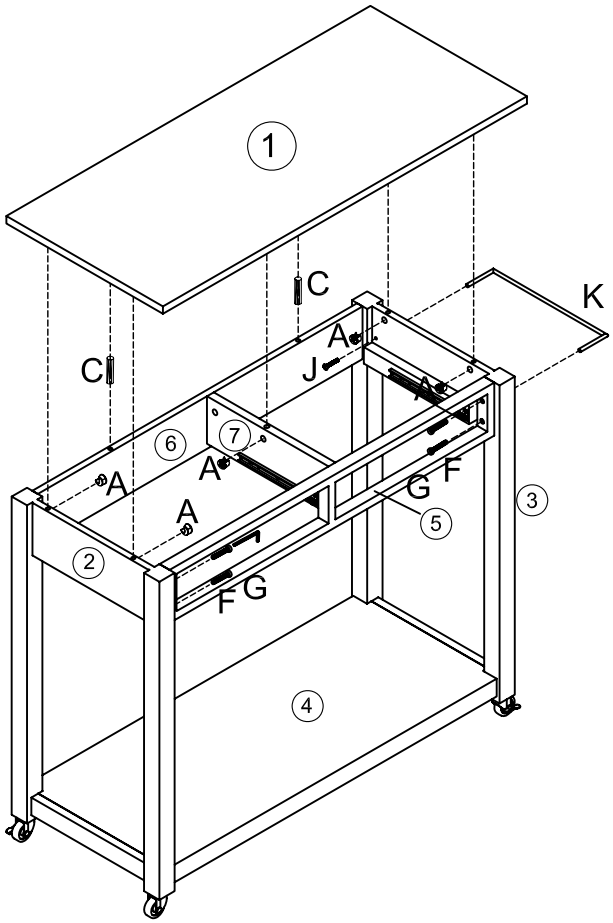


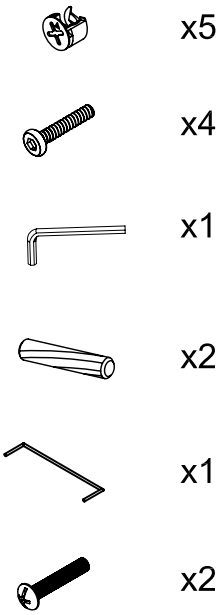


Step 5. Assemble drawers by attaching Drawer Front (8) to Left & Right Side Panels (9 & 10) using Screws (H). NOTE: BE SURE THAT THE WHEELS ON DRAWER GLIDES ARE AT THE OPPOSITE SIDE OF THE DRAWER FRONT. Insert Bottom Panel (11) into the grooves of Side Panels (9 & 10). Attach Back Panel (12) to Side Panels (9 & 10) using Screws (5) as shown. Attach Drawer Pull (D) to Drawer Front (8) using Short Round Head Bolt (E) as shown.

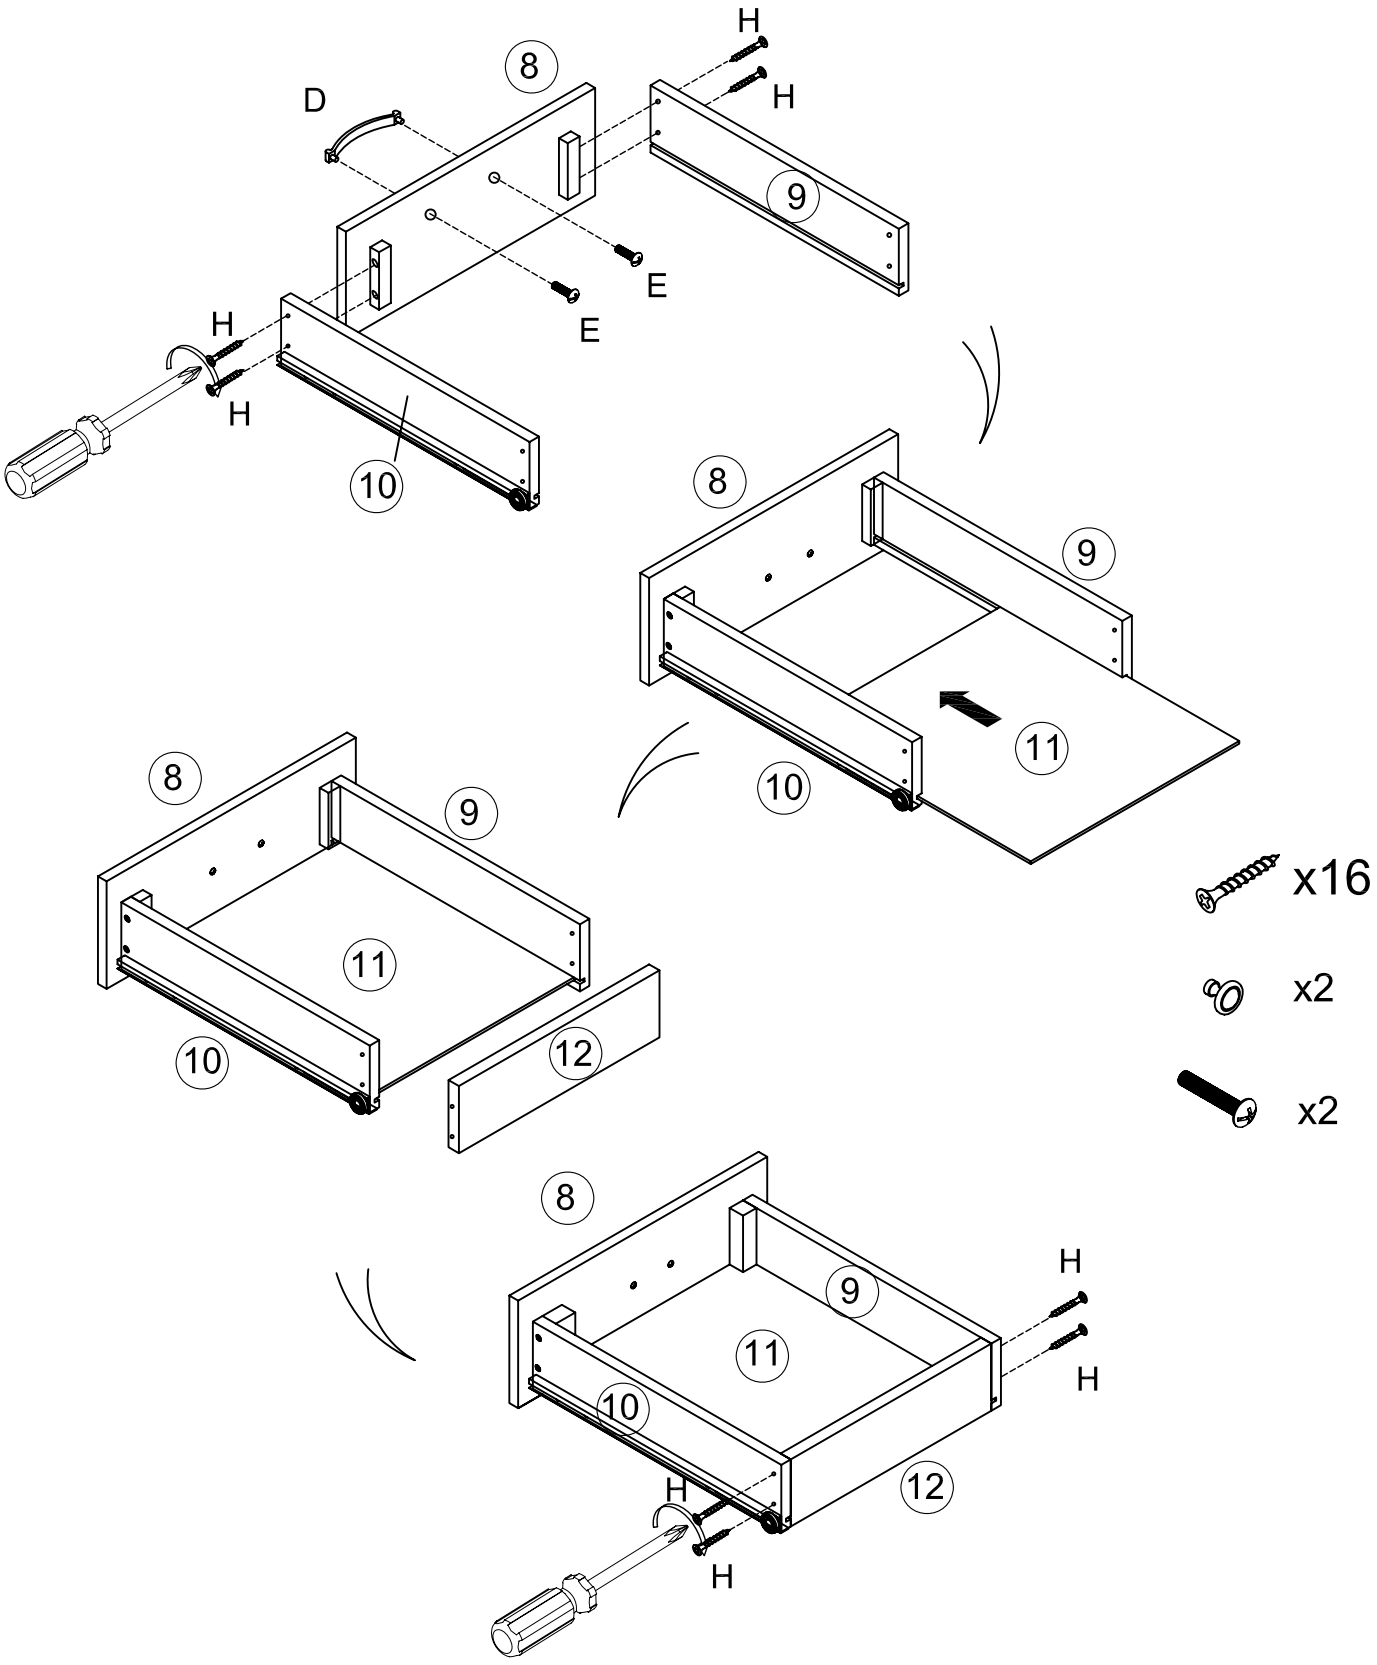

Step 6. Insert the assembled drawers into the cabinet.

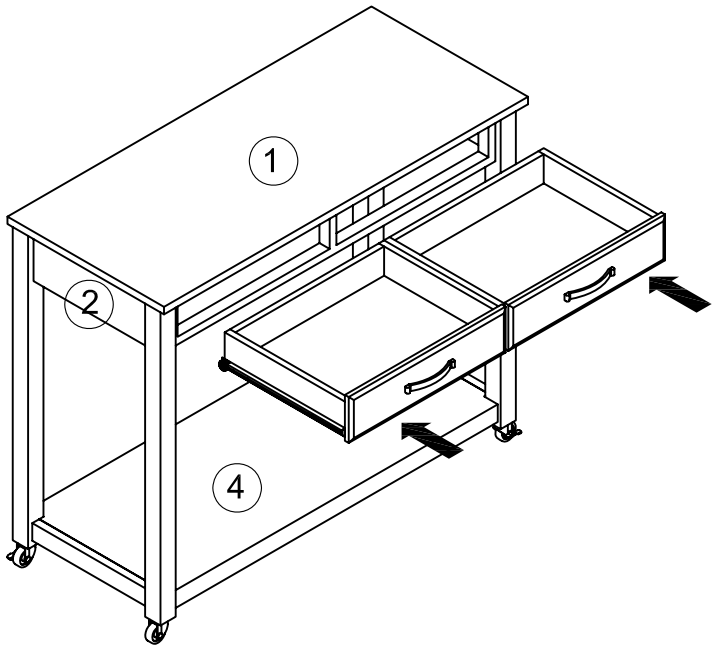

Step 7. Insert the Shelf Holders (I) into the desired location and add Adjustable Shelf (13). Note - If you intend to use the lower portion of the island for stool storage, do not add adjustable shelf (13).Congratulations! You are finished.

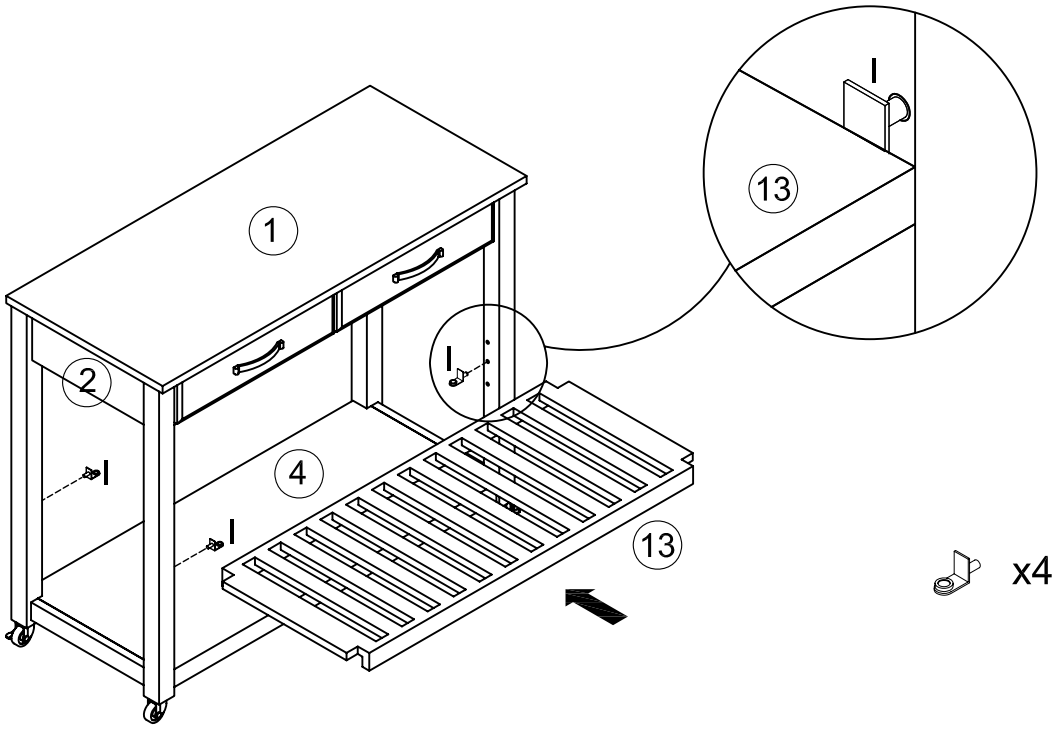



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please visit our website **www.Crosleyfurniture.com,** or contact us at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.
In accordance with the "Moss-Magnuson Warranty Act" of july 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.