
OPERATION MANUAL



A. Features:

- 12 Digits LCD Display , Display Hour ,Minute , Second , Mouth , Day and Week
- Chime hourly and Daily Alarm
- 12/24H format selectable , Auto Calendar
- 1/100 second Chronograph with split functions
- LED backlight

B. Operational Manual:

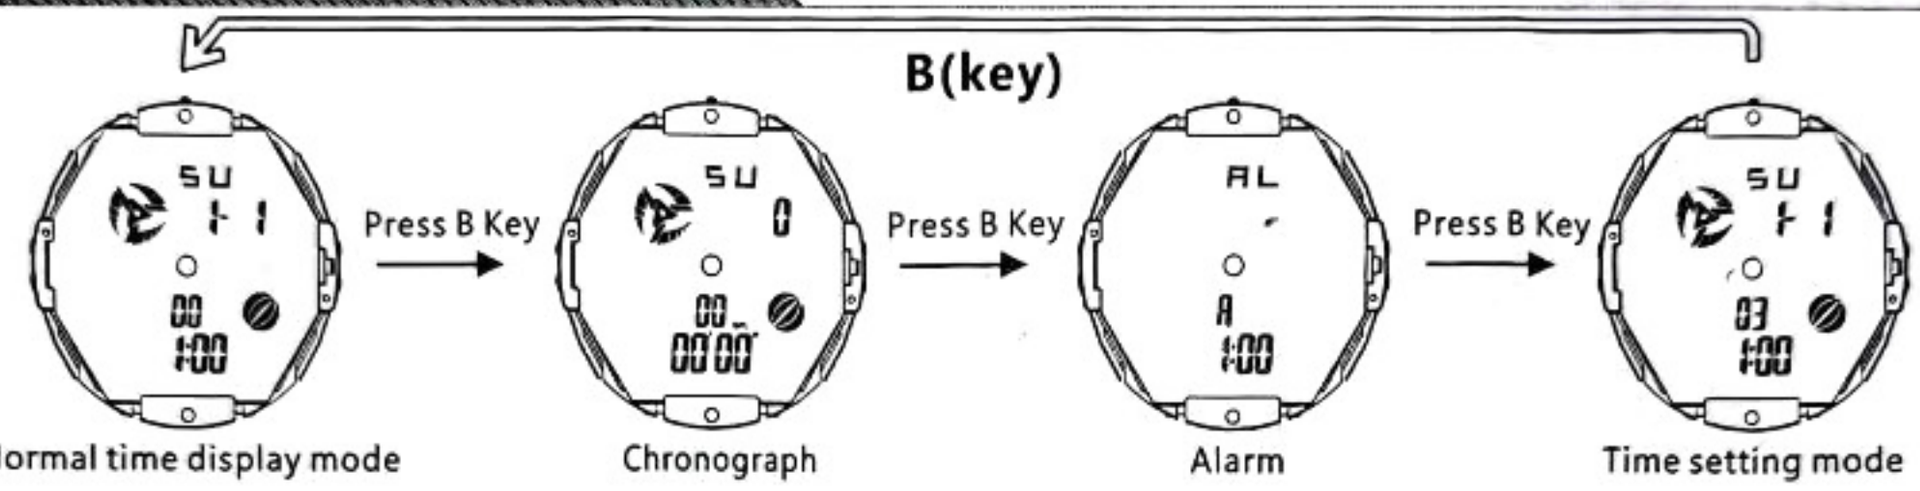

- Press B key convert mode:
  At any state,press A key LED backlight for 3s.

Chronograph functions:

- In normal display mode: press B key onece,enter Chronograph mode
- Press D key to Start running ;When running, If press D key again will stop running, If press C key,will stop display running,but run at back. Press D key again , will running again. Press C key to zero

Alarm Seting:

- in normal display Mode, press B key twice enter into Alarm Mode
- Press C key the Hours will flash, Press D key to adjust the correct hour for your Alarm.
- Press C key the Minutes will flash. Press D key to adjust the correct minutes.
- Press B key to exit.

Alarm & Chime ON/OFF:

- In normal mode press B key twice enter into alarm mode , press D key to ON/OFF the "ALM"/"CHM" function, Press B key to exit.

Time & Date Setting:

- In Time setting mode, when "Second" digits flashing, press D button to reset the seconds to 00; press the C button and the "Minute" digits flashing, press C button again the flashing digits switch in order of "Hour", "Day", "Month", "Day of Week" to adjust, and when the digits is flashing, press D button to adjust.
- When setting "Hour", if the current time format is "12-Hour", there is a "PM" display in the left of Hour digits (when it's afternoon). Jump to 24-Hour format after switch over all the 12 hours in the afternoon.
- Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1..
- Press B key to exit.