YITAHOME


ASSEMBLY INSTRUCTIONS

GDGMF-V1

BFTLPT-1010

YITA HOME

Pure & Easy

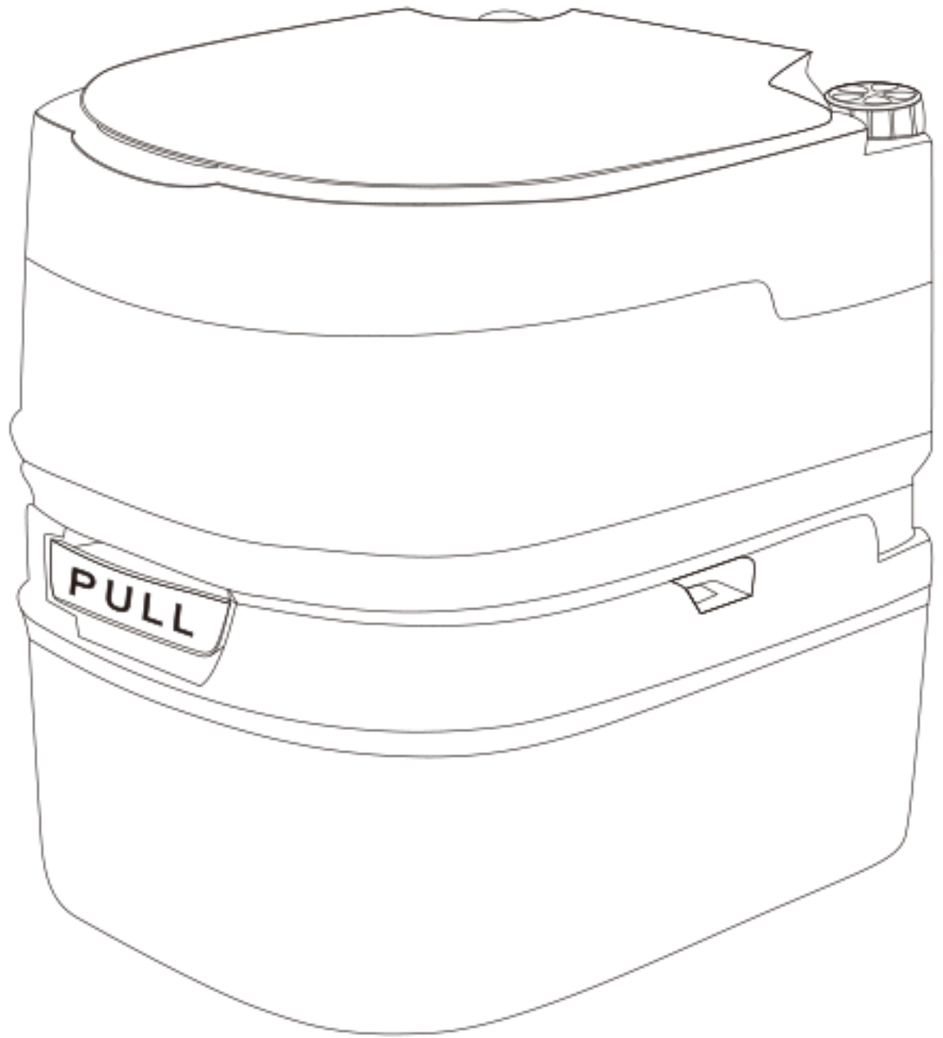


PORTABLE TOILET

CONTACT US:
If you have any questions about the installation of YITAHOME® products, just contact us at +1(888)717-8084 from Mon-Fri 8:00 AM-16:30 PM PST / Sat. 8:00 AM-12:00 PM PST or E-mail us at: after-sale.cs@hotmail.com

Alternative method to contact us(amazon.com orders only)
1.Log into your amazon account
2.Go to "Your Orders" and find the purchase
3.Click on "Contact Seller"

Product Structure

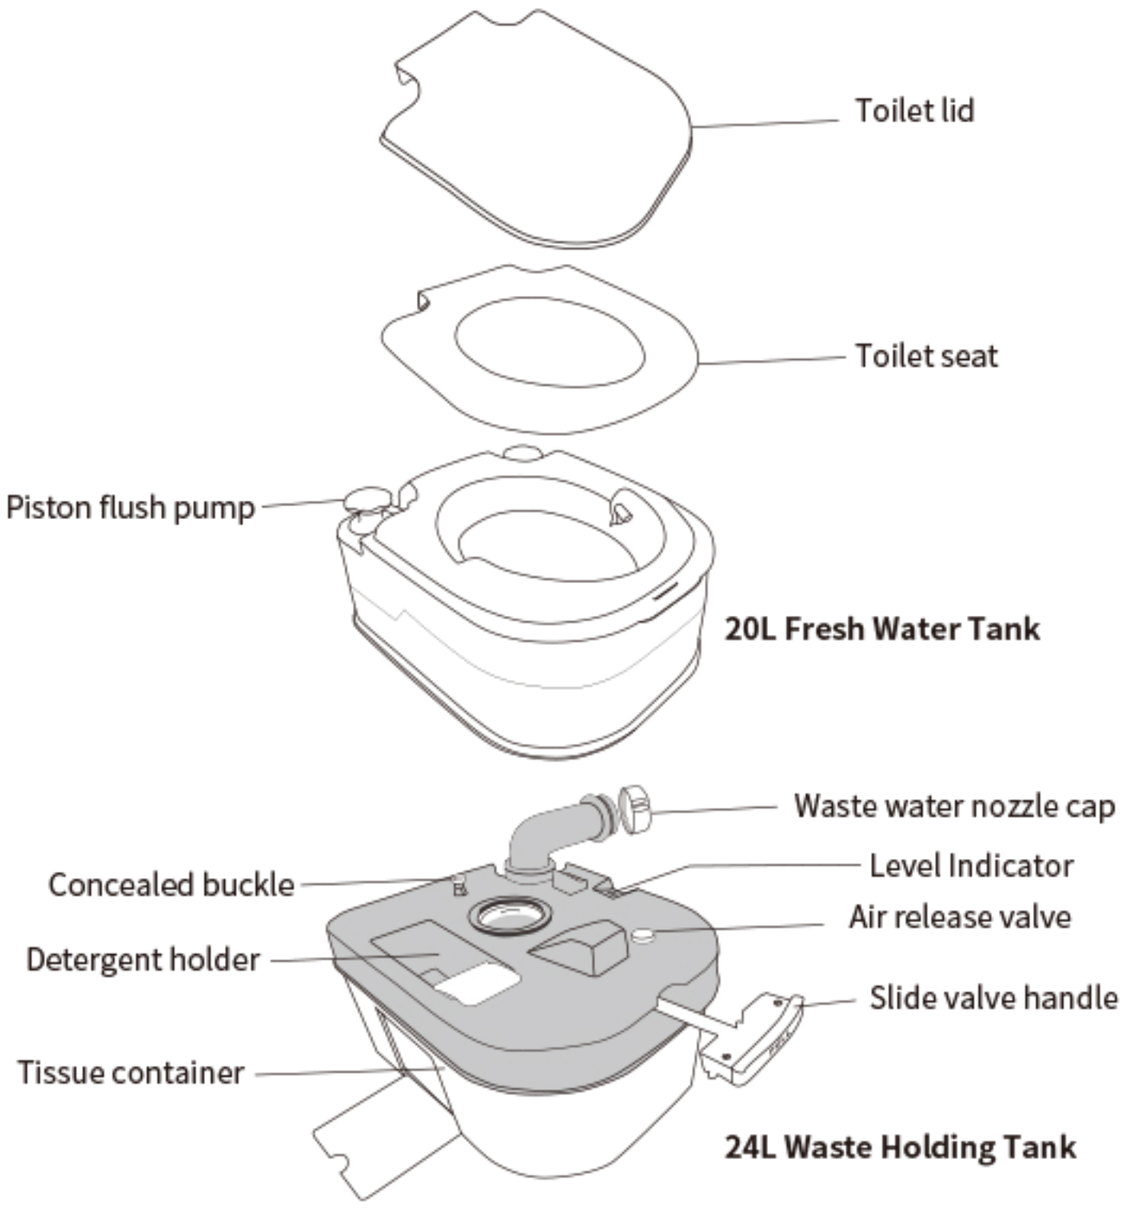


YITAHOME ASSEMBLY INSTRUCTIONS


Caution:

- Place on a flat surface.
- Ensure all latches are locked.
- Ensure the waste holding tank is assembled correctly and the cap is screwed on correctly.
- Weight bearing limit is no more than 200 kg.
- Do not lean on the seat cover during operation.
- Ensure water supply pressure is no more than 0.4Mpa.
- Do not use water with a temperature higher than 40 degrees.


How to use

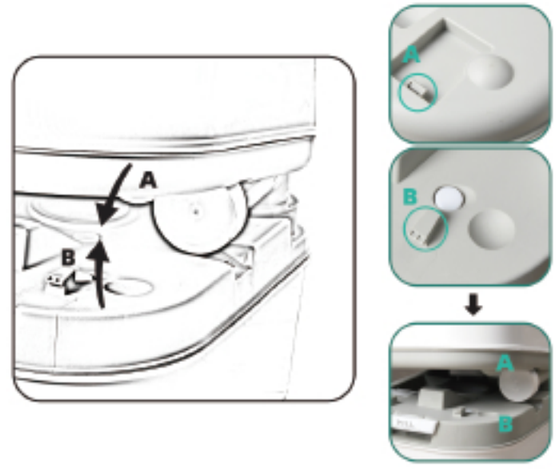


Step 1. The A & B should be alignedand fastened to ensure theupper and lower tank are firmly connected.

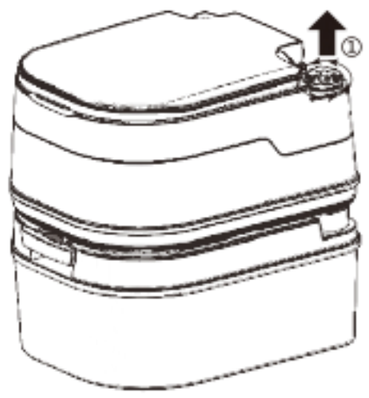


Step 2. Open the fresh water cap ① and fill it with fresh water then tighten the cap up

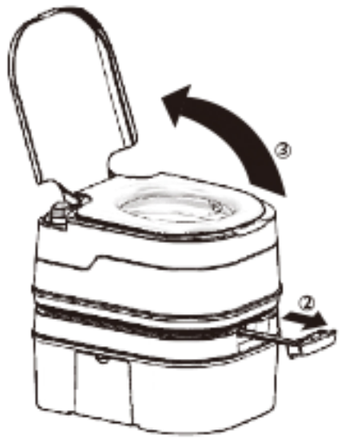

Step 3.Pull out the slide valve ② and open seat cover ③ before use.

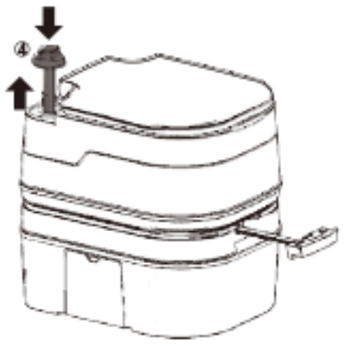

Step 4.Press the flush pump ④ one or more times to rinse the bowl After using

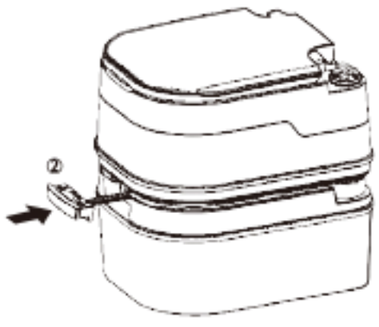


Step 5.Push the slide valve ② in to close it for next use.

How to clean




Step 1. Keep the slide valve ① and seat cover closed.

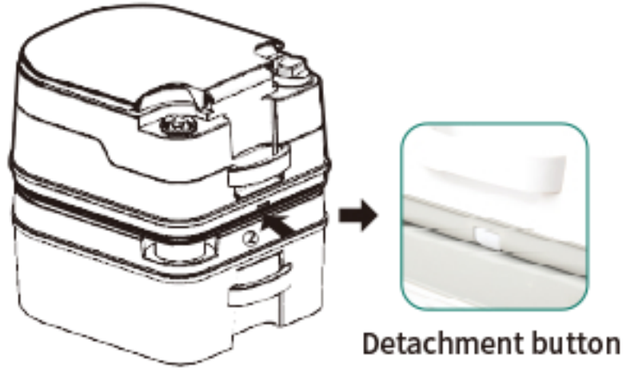


Step 2. Press the detachment button ② to separate the freshwater holding tank from the waste holding tank.


YITAHOME ASSEMBLY INSTRUCTIONS

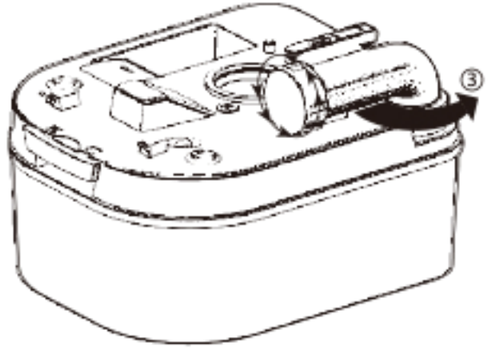

Step 3. Rotate the waste water spout ③, then unscrew the cap to pour waste into the permanent toilet facility.

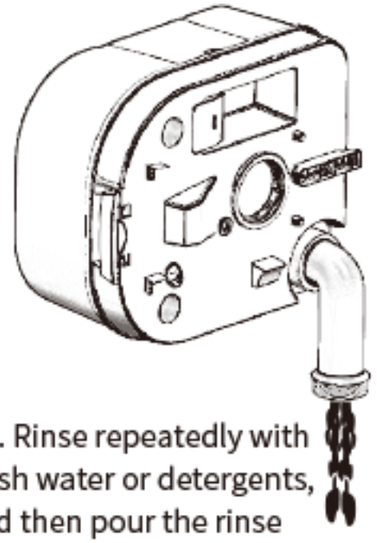

Step 4. Rinse repeatedly with fresh water or detergents, and then pour the rinse water into the permanent toilet facility.

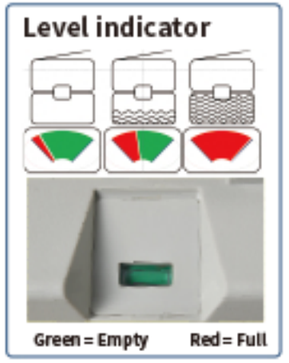







Maintenance and Storage

1. Clean the tanks regularly in order to achieve long term storage.
2. Lubricate the slide valve periodically with lubricants(Vaseline recommended).
3. Release the waste holding tank cap for long term storage.
4. Avoid strong sunlight and high temperatures.