Printed in China
© 2020 Sunbeam Products, Inc. Product of: Sunbeam Products Inc.
2381 NW Executive Center Dr. Boca Raton, FL, 33431.

www.oster.com
1-800-334-0759

1 Year Limited Warranty.
Due to continuing product development, product inside may look slightly different.

FPSTCN2000_20EM1
GCDS-OST-JC

P.N. 199235 Rev B

ELECTRIC CAN OPENER

User Guide:
FPSTCN2000



Safety

How to use

Care & Cleaning

Warranty

www.oster.com

FPSTCN2000_20EM1.indd 24-1 12/4/20 10:19

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
3. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
4. Turn any controls to OFF, then unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
7. For appliances with markings on plug blade: This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
8. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not use appliance for other than intended use. Misuse can cause injuries. Always use appliance on a dry, stable, level surface.

12. Do not open pressurized (aerosol-type) cans.
13. Do not open cans of flammable liquids such as lighter fluids.
14. Carefully route the power supply cord to avoid damage from the knife blades while sharpening.
15. Do not operate this appliance in the presence of explosive or flammable fumes.
16. Use caution when sharpening knives. Always maintain hands away from knife blade.
17. For models with retractable cords: Always hold plug while retracting the cord.
18. For models with removable can opener levers: Blade is sharp, handle with care when removing or installing parts, when cleaning, and especially around children. Do not allow children access to the lever.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

North American models with polarized plugs:




POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

Thank you for purchasing the OSTER® Can Opener. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements. To learn more about Oster® products, please visit us at www.oster.com or call us at 1-800-334-0759.

FPSTCN2000_20EM1.indd 2-3 12/4/20 10:19

LEARNING ABOUT YOUR OSTER® CAN OPENER

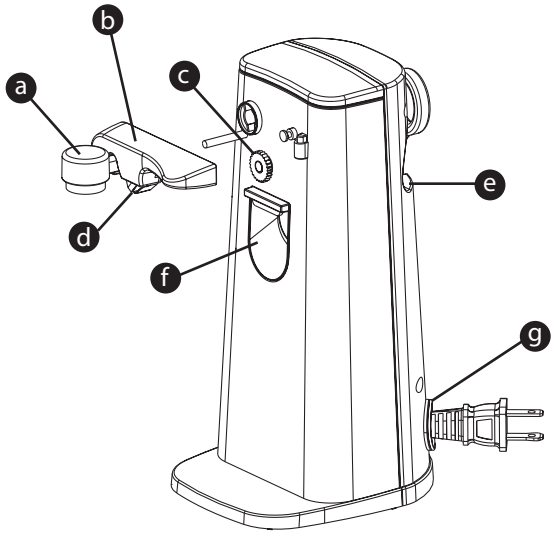



- a Magnetic Lid Lifter
- b Can Opener Lever
- c Drive Wheel
- d Cutting Blade
- e Knife Sharpening Slot
- f Bottle Opener
- g Retractable Cord Storage

HOW TO:

Opening cans

1. Plug electrical cord into 120 volt, 60 Hz AC outlet.
2. Pull up on the magnetic lid lifter until it locks in the up position, then gently lift the can opener lever to the upright position as shown in Figure 1.
3. Place the can so that the lower edge of the can lip rests on top of the drive wheel. Be certain that the cutting blade is on the inside of the can lip as shown in Figure 2.
4. Push can opener lever down firmly and hold until the can lid is automatically pierced and the cutting action begins as shown in Figure 3. **NOTE:** It is not necessary to hold the can opener lever down during the cutting cycle.
5. When the can is fully open, the cutting action will automatically stop. The can will remain in position until the lever is raised.
6. To release, grasp the can firmly in one hand and raise the lever using the other hand. The magnetic lid lifter will retain the lid as shown in Figure 4.

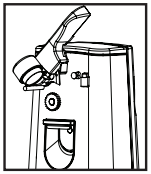
Figure 1

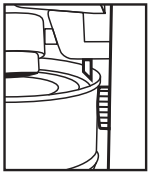
Figure 2

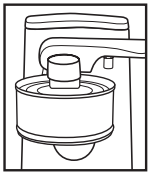

Figure 3


Figure 4

FPSTCN2000_20EM1.indd 4-5 12/4/20 10:19

Helpful Hints For Using Your Can Opener

- This can opener should not be used to open cans designed to be opened by another method, such as a pull tab, peel-off, foil seal, or rolling key. This can opener will not open rimless cans or cans with angled corners.
- Occasionally, badly dented cans will cause the can opener to stall. If this happens, grasp the dented can and guide it through the cutting action manually until the damaged areas are passed.
- To open a can that has become jammed, raise the can opener lever and release the can. Begin the cutting action again in a new place on the can lip.

Sharpening Knives

Do not attempt to sharpen hollow ground blades or those with serrated edges. Always use safe practices when using or sharpening knives, maintain hands away from knife blade.

1 Be sure knife is clean and free of grease.

2 Place heel of knife into the guide slot located on the back of the can opener.

3 Lightly draw the handle side of the knife towards you, applying a slight downward pressure.

4 Repeat this procedure four to five times to put a sharp edge on the knife.

Opening Bottles

1 The bottle opener at the front of the unit will only remove metal bottle caps. Do not use it for screw-off caps, punch in tabs, or on cans with pull rings.

2 To open a bottle, grasp it and position the cap under the metal "hook" in the bottle opener located on the front of the unit below the lever.

3 Hold the can opener with the other hand and pull down on the bottle to pop the cap off.

CAUTION: Be sure the "hook" is not under the bottle neck or the glass may break.

Retractable Cord Feature

This can opener has a unique retractable cord storage feature which allows for easily storing your cord neatly out of sight. Do not use product if cord or plug is damaged.

CAUTION: When retracting the cord, always hold the plug with one hand to avoid possible injury.

1 Select the amount of cord desired before plugging into an electrical outlet. Do not use excessive force.

Hold the can opener with one hand and use the other hand to grab the cord plug (failure to hold plug may cause plug to fly).

2 To retract the cord, press the retraction button located on the back of the unit.

3 The cord reel is compact for multi-layer winding of the cord. In case cord is not fully rewound, carefully pull out the cord and steer cord evenly on the reel.

4 In case the cord is not pulled out easily, pull cord firmly.

CAUTION: Do not allow children to use retractable cord feature as the cord may cause injury.

FPSTCN2000_20EM1.indd 6-7 12/4/20 10:19

CARE & CLEANING

Cleaning Your Electric Can Opener

CAUTION: UNPLUG THE CAN OPENER WHEN NOT IN USE AND BEFORE ANY CLEANING

CAUTION: Never immerse the can opener, cord, or plug in water or other liquids.

CAUTION: Blade is sharp, handle with care when removing or installing parts, when cleaning, and especially around children. Do not allow children access to the lever.

- To insure proper sanitation, all removable parts on the can opener should be detached and cleaned thoroughly in warm, soapy water at regular intervals. Rinse and dry thoroughly.
- To clean motor housing, wipe clean using a damp cloth.
- Wipe off drive wheel with a damp cloth.

NOTE: DO NOT place any parts of this unit in the dishwasher.

Removable blade assembly

Blade assembly can be easily removed for cleaning and replaced when done.

1 To detach the can opener lever from the unit
   a. Gently lift the can opener lever to the upright position
   b. Hold the can opener with one hand while gently pulling the can opener lever away from the front of the unit with the other.

2 To re-attach the can opener lever back on the unit
   a. Hold the can opener lever in the vertical position.
   b. Insert shaft into the key hole near the drive wheel and push the lever in all the way.
   c. Rotate the can opener lever clockwise until it is horizontal.

NOTE: If lever is properly engaged, it cannot be removed from the can opener when in horizontal position.

HINT: Cutting mechanism may collect food or paper from can labels and should be washed frequently.

Maintenance

The motor and internal gears of your can opener unit are permanently lubricated at the factory for lifetime service and require no further attention. The cutting blade is made of hardened steel and will last for years under normal use. Do not attempt to sharpen.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

FPSTCN2000_20EM1.indd 8-9 12/4/20 10:19

1 Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Newell Brands Canada ULC, (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including but not limited to: incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.
If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada
If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Newell Brands Canada ULC, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

FPSTCN2000_20EM1.indd 10-11 12/4/20 10:19