
PROVIDE YOU A GLOBAL VISION

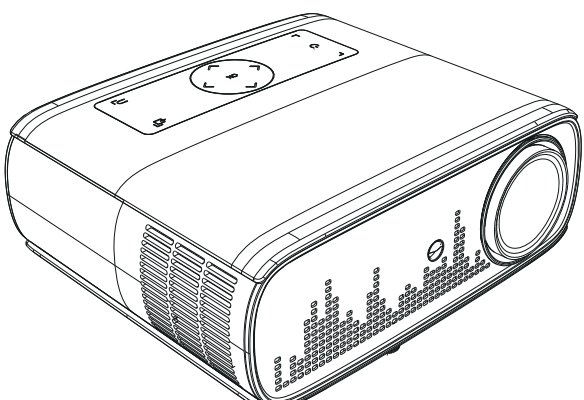


Model:JQ818C

User Manual

WARNINGS


1. Do not look directly into the projector light.
2. Don't touch the projecting lens.
3. Mains adapter is used as a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
4. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
5. Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
6. Use of this unit near fluorescent lighting may cause interference regarding the use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
7. Shock hazard - Do Not Open.
8. Caution and marking information is located at the rear or bottom of the apparatus.
9. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
10. Objects filled with liquids, such as vases, shall not be placed on the apparatus.

PRODUCT OVERVIEW

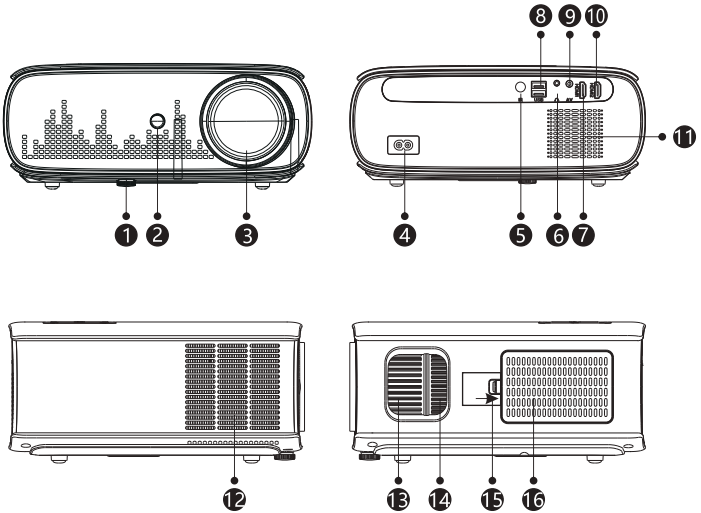


❶ Level-Stand Adjustment
❷ IR Receiver
❸ Focus Lens
❹ Power Switch
❺ IR for Remote Control
❻ 3.5mm Port for Audio Output
❼ HDMI 1 Port
❽ USB 1 Port & USB 2 Port
❾ AV Port
❿ HDMI 2 Port
⓫ Speaker
⓬ Cooling Window
⓭ Lens Focusing
⓮ Keystone Correction
⓯ Detachable Dust Screen Switch
⓰ Detachable Dust Screen

PRODUCT OVERVIEW

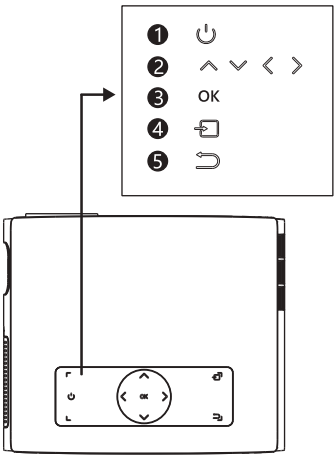


1. Power
2. Arrow Keys
3. OK
4. Input Source Key
5. Return

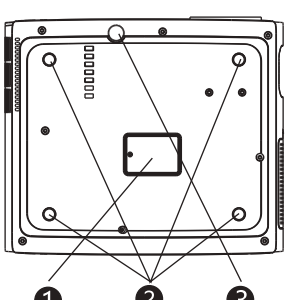

①Bottom Label
②Ceiling Mount Hole of Projector
(can be used by removing the footpad,the ceiling mount hole size is M5)
③Height Adjustment Machine Feet

REMOTE CONTROL

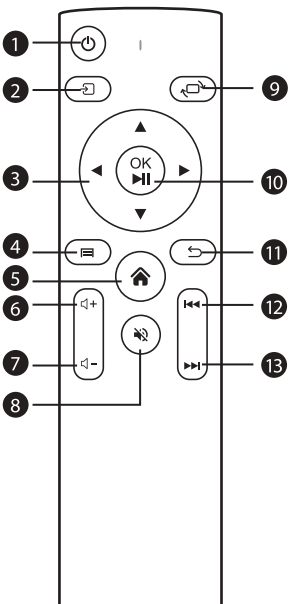

1. Power Source
2. Input Source Key
3. Move Left / Move Right / Move Up / Move Down
4. Menu
5. Home Page
6. Volume Up
7. Volume Down
8. Mute
9. Picture Flip
10. Confirm Key(Play and Pause)
11. Return
12. Previous
13. Next

Note:

Before using the remote control, put two AAA batteries into the back cover of the remote control.

PRODUCT SPECIFICATIONS

Display Technology	5" LCD Screen
Native Resolution	1920*1080P
Flip	360°
Projection mode	Desktop Front Projection / Desktop Rear Projection/ Ceiling Mounted Front Projection/ Ceiling Mounted Rear Projection
Projection Lens	6 Slices Glass Lens
Aspect Ratio	16:9/4:3
Lamp	LED, 100000 Hours
Power Supply	AC100V-240V~50/60Hz
Net Weight	2.2kg

MULTIMEDIA SUPPORTED FILES

①Audio FormatC	MP3/AAC/FLAC/OGG/MAV/WMA /M4A
②Image Format	BMP/JPGIJPEG/PNG
③Video Format	3GP/AVI/FLVI/MKV/MP4/MPG/WMV /RMVB/RM/TRP/VOB/DIVX/TP/TS/ DAT


STARTING PROJECTOR

1. Power on/Power off

5 seconds after power-on, then press the power key on the projector panel or the remote controller to turn on the device.

Press the power key on the projector control panel or the remote control to turn off the device.


When the machine is turned off, unplug the power line in time to save energy.

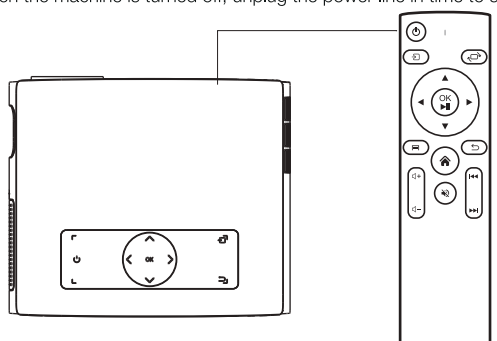


2. Focus and Keystone Correction

Focus (P1): Let the projector be perpendicular to the wall, adjust the Focusing ring to make the picture clear.

Keystone Correction(P2): In different angel you put the projector, the projection will Deformation like a trapezoid, use the keystone correction to make it correctly.

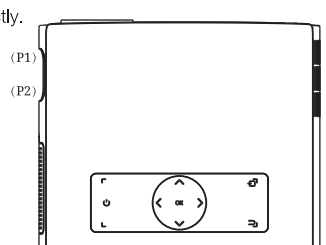


CONNECTING

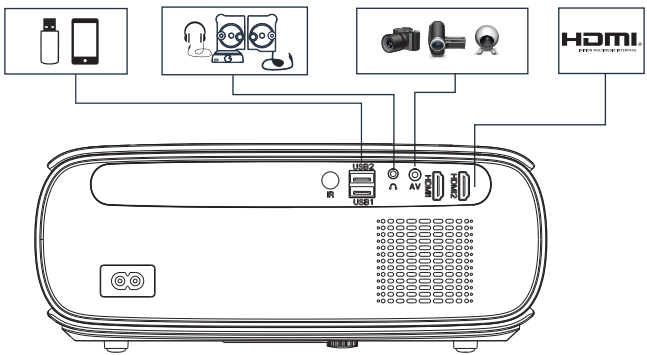

1. Select Signal Source

Press "⏎" of the projector or ⏎ of the remote control, enter the signal source menu. Use the arrow keys "▲ ▼ ◀ ▶" and the "OK" to select the signal source.

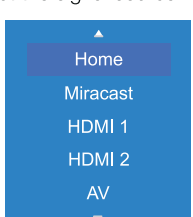

CONNECTING

2.Wired Projection

Connect an iPhone

①Select "Miracast" in the signal source menu of the projector.

②Plug iPhone original USB charging cable into the USB1 port of this projector.

③Please select "Trust this device" when the iPhone asks "Trust" or "Don't trust"

NOTE: Android devices cannot be connected by a wire, only by wireless.



CONNECTING

3.Wireless Projection

Connect an iPhone

Ⅰ. For iPhone

(1) Screen Mirroring Connection--Requires Cellular Data Traffic Transfer

①Select "Miracast" in the signal source menu of the projector.

②Search "Dualcast-*** in "Wi-Fi" on "Settings" of the phone, enter the password 12345678.

③Slide the iPhone interface from the up bottom to enter the control center, then click "Screen Mirroring", finish the screen sharing.

(2) Router IP Connection--Wifi Transfer

①Long press "OK" on the remote control or on the projector, select your home wireless network, enter the password to connect.

②The name of your home wireless network will appear in the upper right comer of the projection screen after the projector is connected to the home wireless network successfully. If not, please check your password.

③Open the wifi in the phone "settings", select the same home wireless network, then enter the password to connect.

④Slide the iPhone interface from the up bottom to enter the control center, then click "Screen Mirroring", finish the screen sharing.



CONNECTING


3.Wireless Projection

Ⅱ.For Android

①Select "Miracast" in the signal source menu of the projector.

②Slide the phone interface from the up bottom to enter the control center, then click on "Wireless Projection" /"Multi-screen" /"Screen sharing", (Different mobile phone models use different expressions.), then select the “Dualcast-***, finish the screen sharing.

PS: If you want to use home wifi, connect the phone to your home wifi.

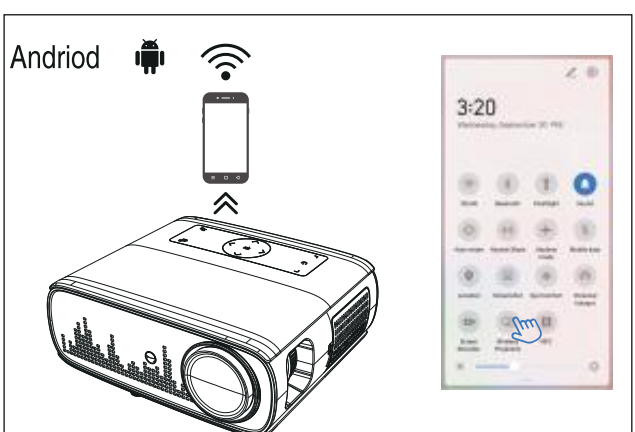


CONNECTING

3.Wireless Projection

Ⅲ. For Windows10
①Select "Miracast" in the signal source menu of the projector.
②Press "Windows key" + "P"of the laptop, select “Connect to wireless display”, then click "Dualcast-***", begin the screen sharing.

PS: ①If you want to use home wifi, connect the computer to your home wifi.
②Only Win10 can wireless connect to the projector, if your computer system is not Win10, please upgrade.

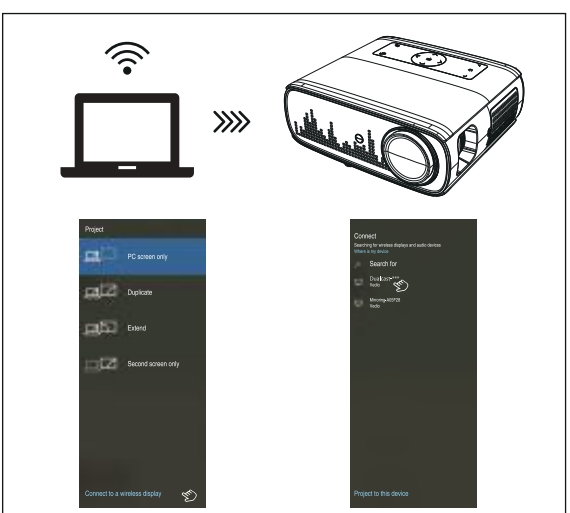

CONNECTING

4.Connecting to HDMI Devices

The projector can connect to devices with HDMI output function. Compatible with Laptop, DVD players, Blu-ray players, Chromecast, TV Stick, and etc. (HDMI cable is included).

Add:Different brand laptop output keys are as follows:

Lenovo	Fn+F3
Dell	Fn+F8
HP	Fn+F4
ThinkPad	Fn+F7
Asus	Fn+F8
Acer	Fn+F5
Samsung	Fn+F4
Sony	Fn+F7

Fujitsu	Fn+F10
Haier	Fn+F3
NEC	Fn+F3
Panasonic	Fn+F3
Sharp	Fn+F5
Hitachi	Fn+F7
TOSHIBA	Fn+F5

The user of windows 7 or over windows 7. Simply press the +P, select “Duplicate” to connect. If the operation above is invalid, Please update the computer graphics driver.

CONNECTING

5. Connect the USB drive

①Plug a USB drive to "USB" of the projector, when "USB" in the upper right corner of the projector, connect successfully.

②To play a video, picture, music or text stored in a USB drive, select "Movie"/ "Photo"/ "Music"/"Text" on the main menu, and press the "OK".

Note:

The chip of this projector is not compatible with files stored in a USB stick or SD card in PPT format. （If you want to play PPT, please store the PPT document on your laptop or DVD player, then connect this projector to them.）

6. Connect AV video devices

① Use the 3 in 1video cable （Included in the package）to connect with AV.

② Choose the media signal channel: "AV".

7. Connect 3.5mm audio devices6

Support 3.5mm earphones and other cable sound devices.

PROJECTOR SETTING

PICTURE MENU:

*When "Picture Mode" is "User", the Contrast /Brightness /Color /Tint /Sharpness can be adjusted.

PICTURE MENU	MODE
Picture Mode	Standard/Dynamic/Mild/User
Contrast	0-100
Brightness	0-100
Color	0-100
Tint	0-100
Sharpness	0-100
Focus	0
Color Temperature	Medium/Cool/Warm
Noise Reduction	Middle/Off/Low/High

PROJECTOR SETTING

SOUND MENU:

*When "Sound Mode" is "User", the Treble /Bass can be adjusted.

SOUND MENU	MODE
Sound Mode	Standard/Movie/Music/Sport/User
Treble	0-100
Bass	0-100

PROJECTOR SETTING

OPTION MENU:

*Aspect Ratio: Set the length to width ratio "4:3"/"16:9" by Set Button""in the remote control, when playing the video or picture.

OPTION MENU	MODE
OSD Language	English, French, Italian, Spanish, etc.
Aspect Ratio	16:9
Projection Mode	Desktop Front/Desktop Rear/ Celling Front/Celling Rear
Bluetooth	ENTER

USING BLUETOOTH PLAYBACK

Pairing to Bluetooth Wireless Speakers or Sound Bar

NOTE: Bluetooth is OFF by default when the projector powers ON. Bluetooth can be turned ON or OFF from the OPTIONS Menu.

1.Enable Bluetooth on the receiver (external speakers, soundbar, etc.) to which you wish to connect. Devices such as smartphones, tablets, or comput -ers are not Bluetooth receivers and will not connect to the projector. To elimi -nate confusion, you should disable Bluetooth on all receivers to which you do not wish to connect.

2.Power on the projector and make sure the projector's Bluetooth is on and in pairing mode (see the note above). Press the menu key from the remote>>> select OPTION>>>select BlueTooth>>>press the navigation >/< to turn on the bluetooth>>>Select the bluetooth on, press the Okey from the remote, when the Scan shows on the screen, press the OK key again>>>When the screen shows 'Searching, pl...' >>>the bluetooth devices name will be shown on the screen, select it and press the OK key to connect it.





3. When successfully paired, it will show ' Bluetooth Connected' on the menu. Exit the menu, the sound will come out from the bluetooth speaker.

4. It can connect the last bluetooth speaker automatically when the unit is powered on again.

NOTE: It needs power on the last connected bluetooth speaker first, then turned on the projector. if it can't connect the last devices automatically, please repeat step 2~3.

TROUBLESHOOTING

1. Why is the display of the projector available but without audio?

* The Projector or the connected device (PC, DVD, etc.) is muted.
* Due to Dolby's copyright issues, the current regular projectors selling on Amazon do not support Dolby sound, So there will be no sound when you play Dolby sound videos, (Amazon fire stick, Netflix, Blue-ray movies and so on) In this case, please kindly turn off the Dolby sound on your device or apps.
(Settings > Display & Sounds > Audio > Dolby Digital Output > and then turn Dolby Digital (OFF))
* The audio format is not supported by the projector.
* VGA connection can only transmit analog signal of video not audio. An external speaker is required when the device is connected via VGA cable.
* Encryption applied to the videos or media player which holds the video. Try more videos to define this possibility.

2. Why is the audio of the projector available but without display?

* The video format is not supported by the projector.
* Encryption applied to the videos or media player which holds the video.
* If the lamp of the projector is off with only audio playing, the lamp is defective. Please contact customer service for a replacement.
* Try another HDMI cable if you select the HDMI input source.

3. Why does the projection screen show no signal?

* Make sure all cables are plugged correctly and firmly
* Make sure you select the right input source. For example, if you insert a USB drive, please select USB in the interface of Input Source.

4. How can I do if the image is blurry or out of shape?

* Adjust the focus and keystone ring by moving it leftward/rightward till it shows the best images.
* Place the projector on a flat surface horizontally or vertically. An inclination of any angle may result in blurry displays or uneven colors.
* Darker environment suggested achieving the best projecting performance.
* Projecting wall or screen is clean white if possible.

5. How can I do if the image is upside down?

* Enter Menu-Picture-Projection Direction to flip the projection image accordingly.

6. How can I do if the projection screen is not square or allied horizontally?

* Make sure the projector is placed on a flat surface with projector light in the middle of the screen.
* Make sure the projector screen is placed horizontally.

7. How can I do if there is color distortion?

* Make sure the video source has a fine resolution.
* Adjust the colors: enter Menu-Picture-Color Temperature, then select different modes and adjust the value accordingly.
* Reset the projector to manufacturer setting: enter Menu-Option Restore Factory Default to reset.

8. How can I do if the remote is unresponsive?

* Make sure the batteries are installed correctly and the power is enough.
* The remote works with the projector through the IR receiver. The remote works only when the IR receiver is within the direct reaction distance and will be unresponsive if the IR receiver is blocked or covered.

9. How should I do if there are small dots on display?

* It may be caused during installing or shipping, please contact customer service to get the video about how to clean it.

10. Why do some lag/ jerky appear when playing video or play games?

* Due to the technical bottleneck of the current 1080p projectors, most of the 1080p projectors on the market cannot smoothly play 1080p/60fps videos. Hope you could understanding.
Please change the 1080p/60fps to 1080p/30fps.

TOP SERVICE:

Any questions about this item, please

1-888-965-5888

service@groviewtec.com

