warmlite
heating the heart of the home

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

LAVENHAM 1800W LOG EFFECT FIRE STOVE
WL46031



2 YEAR WARRANTY

www.warmlite.co

WHAT'S IN THE BOX

Instruction Manual

Log Effect Stove Fire

1. Flame effect
2. On/Off/heat selection switches
3. Thermostat control dial
4. Flame effect dimmer
5. Air outlet



The images are for illustration purposes only and might not be a true indication of the actual product.

TECHNICAL DATA

Description:	LAVENHAM 1800W LOG EFFECT FIRE STOVE
Model:	WL46031
Rated Voltage:	220-240V
Frequency:	50Hz
Power Consumption:	900-1800W
Lighting:	Bulb


DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom

WIRING SAFETY FOR UK USE ONLY

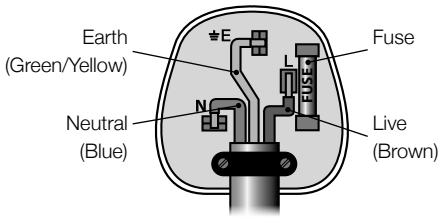

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH]

Plug Fitting Details (Where Applicable).
The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.
If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance MUST be earthed!

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- The intended use for this unit is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.
- WARNING! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury and material damage.
- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Always ensure that the appliance is placed on a firm level surface. Ensure that the appliance is not positioned close to curtains, furniture or any combustible materials as this could create a fire hazard. The appliance must not be located immediately below a mains socket outlet.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.

- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- DO NOT use this product for anything other than its intended use.
- DO NOT leave the appliance unattended while it is operating.
- This appliance is for household use only.
- DO NOT use the appliance outdoors.
- DO NOT use the appliance near water.
- Always place wires in a regular and orderly manner to prevent the appliance from becoming a trip hazard or the plug from accidentally being pulled out.
- The appliance must not be located immediately below a socket outlet.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- In order to avoid overheating, do not cover the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children between the ages of 3 and 8 years old should only switch the appliance on or off when it has been placed and installed in its intended, normal operating position and when they have been given adequate supervision or instruction concerning safe use of the appliance and understand the hazards involved. Children between the ages of 3 and 8 years old should not plug in, regulate, clean or perform user maintenance on the appliance.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- CAUTION! Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- When not in use, please unplug the portable appliance from the mains socket.
- Always unplug the appliance and allow it to cool before moving it from one location to another.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT attempt to dismantle or repair any part of the appliance. This should only be done by a qualified service agent.
- DO NOT install the appliance in washhouses or other places with water and moist.
- DO NOT turn the appliance on or off by inserting or pulling out the plug.
- DO NOT place things on the appliance.
- DO NOT put anything into the air inlet and outlet.
- DO NOT use insecticide spray or other flammable matters in the vicinity of the appliance.
- DO NOT splash oil or water into the appliance.

- DO NOT clean the appliance with water. Wipe it with a semi-wet soft cloth.
- DO NOT wipe the appliance with chemical solvents such as benzene, gasoline or alcohol. Use neutral detergents only.
- Only install the appliance in flat and dry places. Keep the appliance 50cm away from surrounding objects.
- The appliance should be placed away from gasoline, cooking stoves or other combustibles and heat sources.
- Use the appliance in a well-ventilated area.
- CAUTION! DO NOT operate the appliance with wet hands.
- DO NOT tip the appliance over as this may cause damage to the appliance and create a fire hazard.
- CAUTION! No wall fixings are provided with this fireplace suite. Take care to ensure the suite is set on a flat and stable surface and placed against a wall to prevent it from falling over or being dislodged.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.



HANDLING

Before continuing any further with the installation of this fire please read the following:

- Two people should be sufficient to lift the fire.
- When lifting always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper body / top heavy bending. Always bend from the knees rather than the waist. Do not lean forward or sideways whilst handling the fire.
- Always grip with the palm of your hand. Do not use the tips of fingers for support.
- Always keep the product as close to the body as possible to prevent unnecessary and undue strain on the body.
- Use gloves to provide additional grip.
- Always use assistance if required.

BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Keep the front of the appliance through which the heat is radiated at least one meter away from furniture, curtains and other flammable objects at all times.
3. Ensure there is a grounded socket nearby (back of the appliance).
4. Never use an extension lead. The main cable must remain at the back of the appliance and must not be in contact with any hot elements.
5. Your appliance is now ready for normal use.
6. Dispose of the packaging in a responsible manner

CONTROL PANEL:

Power/Flame switch – Switches both Flame effect and Power ON/OFF

900W Heat Selection – Press "-" for 900W

1800W Heat Selection – Press "-" and "=" at the same time for 1800W heating. The higher heating selection cannot be activated without first activating the 900W setting.

Thermostat control dial – Adjust to maintain room temperature

Flame Effect Dimmer – Rotate this dial to dim or brighten the flame effect as required.

NOTE: The flame effect can be operated with or without heat.

USING YOUR APPLIANCE:

1. Plug the heater into the mains socket and switch the socket on.
2. The heater switches are located at the front of the unit, inside the door and directly above the exhaust vents.
3. Switch the fire on by pushing the Power/Flame switch to the ON position, represented by the symbol 'I'. The flame effect will automatically come on to indicate the heater is in operation.
4. Once the unit is on, flick the heat selection switches to the ON position to choose between two settings: 900W or 1800W.
5. Push switch 'I' to the ON position to select the Low heat setting (900W).
6. Push switch 'II' to the ON position to select the High heat setting (1800W).

NOTE: The higher heating selection cannot be activated without first activating the lower setting.

7. Once the desired heat setting has been selected, rotate the thermostat dial clockwise or counter-clockwise to increase or decrease the desired room temperature setting.
8. The flame effect can also be turned on independently from the heat settings. To turn the flame effect on without activating the heat settings, flick the Power/Flame switch to the ON position, but leave both heat switches and the thermostat dial turned to the OFF position, represented by the symbol 'O'. The realistic flame effect will now operate normally, but the unit will not give off any heat.
9. The flame effect can also be made brighter or dimmer, using the rotary flame dimmer dial on the unit's control panel. Turn this dial clockwise to make the flame effect brighter, or counter-clockwise to dim it.
10. To turn the unit off altogether, push all the switches to the OFF position. Heat will stop emitting from the vents and the flame effect will go out to indicate the unit has been turned off.

Safety Cut-Out:

- This appliance is fitted with a safety cut-off which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset when this cut-out activates.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Once this time has elapsed, reconnect the supply to the mains and switch on the appliance.

CHECK THAT YOU HAVE NOTED ALL THE FOLLOWING INSTRUCTIONS:

Do:

- Always install the fire in accordance with this guide. If in doubt obtain expert advice.
- Always make sure the electrical socket is accessible and located adjacent to, but not above or behind the fire.
- Always disconnect the fire from the electrical supply before carrying out cleaning or maintenance.
- Always ensure the product is placed in an area that is free from dust, grease or liquids.

Don't:

- Never leave children unsupervised in a room where the fire is ON and unguarded.
- Never obstruct or cover the fan outlet or force items into the fire openings.
- Never install or use the fire anywhere where water is in use, i.e. bathrooms, kitchens, shower rooms, swimming pools etc.
- Never use aerosols or steam cleaners on or around the fire.
- Never route the mains supply cable under carpet etc.
- Never install the fire close to curtains or combustible materials.
- Never use the fire to dry clothes etc.
- Never sit or stand on the fire.
- Never cut the off the plug and hard wire into a fixed fused spur.

NOTE: Any new wiring required, must be in accordance with local and national codes and other applicable regulations in order to reduce the risk of fire, electric shock, or other injuries.

NOTE: When the fire is turned on for the first time or when it has not been used for some time, it may release a slight, harmless odour. This odour is a normal occurrence caused by the initial heating of the internal heating elements or dust, and will disappear with use.

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.

TROUBLE SHOOTING

Symptom	Corrective action
The heater will not turn on.	Make sure the appliance is plugged into the mains and that it is switched on. If plugged in, make sure the Power/Flame switch is turned to the On position. Check that the safety cut-off feature has not been activated.
No fire effect light	Check with the manufacturer or a qualified service person for repair.

CLEANING AND CARE

WARNING! Always disconnect from the mains supply before cleaning the wall fire.

CAUTION! Allow the product to completely cool before handling or cleaning it.

- Before cleaning always switch off the fire and remove the plug from the electrical socket.
- Ensure that the unit is cool enough to work on.
- To remove the dust, wipe the appliance with a dry cloth.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. After cleaning, dry the unit with a soft cloth.

CAUTION! DO NOT let liquid enter the heater. This may cause damage or deterioration to the heater's surface.

WARNING! DO NOT immerse the heater in water or any other liquid.

- Never use abrasives or detergents.
- If the heater shows any signs of wear or damage disconnect immediately from the mains supply, and do NOT use it – have it checked by a suitably qualified person.
- This product uses a standard bulb for its flame effect. The appliance uses an electronically controlled system to create the effect, therefore no parts need to be replaced. There are no user-serviceable parts on this appliance. Under no circumstances should the appliance be serviced be anyone other than a qualified electrician.

Model Identifier(s): WL46031					
Item	Symbol	Valve	Unit	Item	Unit
Heat Output				Type of heat input for electric storage, local space heaters only (select one)	
Nominal heat output	Pnom	1,8	kW	Manual heat charge with integrated thermostat	No
Minimum heat output (indicative)	Pmin	0.9	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	Pmax, c	1.8	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				Fan assisted heat output	No
At nominal heat output	elmax	1,767	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	elmin	0,899	kW	Single stage heat output and no room temperature control	No
In standby mode	elSB	N/A	kW	Two or more manual stages, no room temperature control	No
				With mechanic thermostat room temperature control	Yes
				With electronic room temperature control	No
				Electronic room temperature control plus day timer	No
				Electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				Room temperature control with presence detection	No
				Room temperature control with open window detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
Contact Details:	Imported by RK Wholesale LTD., Berryhill Road, Stoke-on-Trent ST4 2NL				

Thank You!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase.
If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase.
Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:
The product must be returned to the retailer with proof of purchase or a receipt.
The product must be installed and used in accordance with the instructions contained in this instruction guide.
It must be used only for domestic purposes.
It does not cover wear and tear, damage, misuse or consumable parts.
RKW has limited liability for incidental or consequential loss or damage.
This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.warmlite.co and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.
Extended warranty is only valid with proof of purchase or receipt.
Your warranty becomes void should you decide to use non Warmlite spare parts.
Spare parts can be purchased from www.warmlite.co

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6056

2 YEAR WARRANTY

warmlite
heating the heart of the home

0720.V1