
六位手表使用说明书 第四版

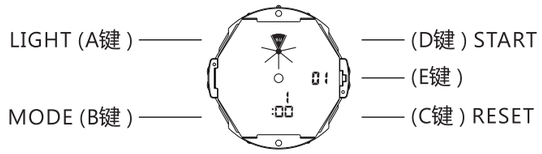


A.功能简介：

- ◆ 6位计时功能，显示时、分、秒、日、月、星期。
- ◆ 响闹及整点报点
- ◆ 贪睡功能
- ◆ 12/24时制选择
- ◆ 1/100秒秒表
- ◆ 背光

按键作用功能：

- ◆ A键为背光功能
- ◆ B键为转换3种模式功能
- ◆ C键为模式下转换，秒表清零功能
- ◆ D键为转换小时分钟月日模式，加数功能

B.产品界面简介

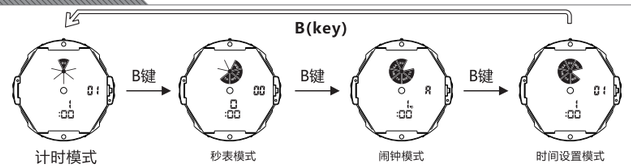

- ◆ 任意模式下按A键背光三秒，按B键可顺序转换如上功能模式，把E键的表把拉出来，顺时针或反方向转动就可以设置走针时间，设置完后把表把推回去。

秒表及分段计时能：

- ◆ 在秒表模式下，按一次D键开始执行跑秒，再按一次D键跑秒停止，在跑秒停止时按C键是跑秒归零。
- ◆ 在秒表模式下，按D键开始计时，按C键进入分段计时状态，开始中途测量。之后按C键开始计时，即记录第一位选手完成时间，再按D键中途测量完毕，记录第二位选手的完成时间，最后按C键清除记录。

闹钟及整点报时关闭与开启：


- ◆ 在时钟模式下，同时按C键和D键，可以开启或关闭闹钟。在时钟模式下，按住C键不放，再按 B键，B键 可反复按，这时开启或关闭整点报时。观察星期显示，整点报时开启；星期不显，整点报时关闭。
- ◆ 闹钟设定：时钟模式下，按两次B键进入闹钟设置模式，“时” 闪动，按D键进行调整，再按C键“分”闪动，按D键进行调整，调整完成。按B键退出设置。

时间设置功能：

- ◆ 在时钟设置模式下，“秒”闪动，按D键调整“秒”归零；按C键“分”闪动，再按C键依次进入“时”、“日”、“月”、“星期”的调整，在对应元素闪动时，按D键进行调整。
- ◆ 在设置“时”时，假如当时制式是12小时，下午时，则小时左边的位置出现PM显示，在调整时间时，将下午的12个小时调完就变成24小时制。
- ◆ 在设置“秒”时，若秒数值于30至59之间，在秒数值回到00的同时，分数值亦会加1；若秒数值是于00至29之间，分数值则保持不变。

注意事项：在游泳或洗车时，可以使用本表，但不能在水中操作按钮。


OPERATION MANUAL

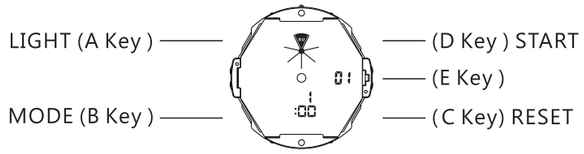

A. Features:

- ◆ 6 digits timekeeping, which display Hour, Minute, Second, Day, Month, Day of Week.
- ◆ Alarm and Hourly Time Signal
- ◆ Snooze function
- ◆ 12/24-Hour Format
- ◆ 1/100 Seconds Stopwatch
- ◆ Backlight

B. Operational Manual:

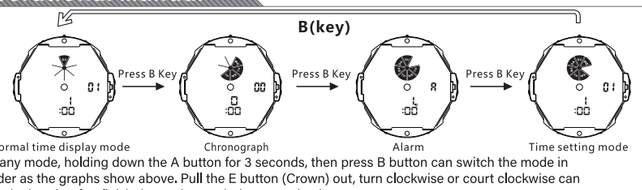

- ◆ In any mode, holding down the A button for 3 seconds, then press B button can switch the mode in order as the graphs show above. Pull the E button (Crown) out, turn clockwise or court clockwise can set the hands, after finish the setting push the crown back.

Chronograph functions:

- ◆ In the stopwatch mode, press the D button once to perform an elapsed time operation, and press the D button again to stop the elapsed time, when the elapsed time is stopping press the C button is reset the count.
- ◆ In the stopwatch mode, press the D button to start an elapsed time operation, press the C button to start a split time and timekeeping. Then press the C button again to make the split release, display time for first runner. Press the D button to finish the measurement. Display time for the second runner. At last, press the C button to clear the history and reset. .

Alarm Clock & Hour of ON/OFF:

- ◆ In the timekeeping mode, press the C button and the D button simultaneously to turn on/off the alarm. In the timekeeping mode, hold down the C button simultaneously, and then press the B button, the button B can be pressed repeatedly, can set on/off the hourly time signal. If the day of the week shows on, the hourly time signal is turned on; if it does not shows, the signal is turned off.
- ◆ Alarm setting: In the timekeeping mode, press the B button twice to enter the alarm setting mode, the "Hour" digits flashing, press the D button to set the hour, and then press the C button again, the "Minute" digits flashing, press the D button to set the minute, after setting, press the B button to finish.

Time & Date Setting:

- ◆ In Time setting mode, when “Second” digits flashing, press D button to reset the seconds to 00; press the C button and the “Minute” digits flashing, press C button again the flashing digits switch in order of “Hour”, “Day”, “Month”, “Day of Week” to adjust, and when the digits is flashing, press D button to adjust.
- ◆ When setting “Hour”, if the current time format is “12-Hour”, there is a “PM” display in the left of Hour digits (when it’s afternoon). Jump to 24-Hour format after switch over all the 12 hours in the afternoon.
- ◆ Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1..

This watch can be used in swim or during car washing, but do not operate the button in the water