SPORT»BRELLA®
RECLINER CHAIR

INSTRUCTION MANUAL

INCLUDES:
› Sport-Brella Recliner Chair
› Sport-Brella Umbrella
› Carry Bag

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Thank you for choosing Sport-Brella Recliner Chair. If there is anything else we can do to help you, don't hesitate to send us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

BEFORE YOU BEGIN:

› Make sure you place the chair on an even surface.
› The area around the chair should be clear when opening the umbrella.

⚠WARNING:

› 250 lb is max weight.
› Do not adjust while you or anyone else are in the chair.
› Do not tip backward in the Recliner Chair. Keep all four legs on the ground.
› To avoid being pinched, keep fingers out of the adjustment joint.
› Be sure to keep fingers clear of joint cradle at all times.

facebook.com/sportbrella

SPORT-BRELLA®
RECLINER CHAIR

INCLUDES:
› Sport-Brella Recliner Chair
› Sport-Brella Umbrella
› Carry Bag



FEATURES ON YOUR SPORT-BRELLA RECLINER CHAIR

The Sport-Brella Recliner Chair has an extra wide seat, can hold up to 250 lbs and has many user-friendly features.



INSULATED COMPARTMENT HOLDS UP TO FOUR DRINKS



BOTTLE OPENER
(attached to pocket zipper)



ZIPPER POCKET FOR PERSONAL ITEMS



CUP HOLDER

NOTE: Empty cooler after each use. Cup holder is intended for cold beverages only.



1-YEAR LIMITED WARRANTY – SPORT-BRELLA® RECLINER CHAIR

Register your product at Sport-Brella.com to ensure warranty coverage, get new product information and special deals from Sport-Brella®.

Questions? Email: CustomerService@Sport-Brella.com or call toll free:
877-225-7275

Made in China. ©2015 Pro Performance Sports, LLC. All rights reserved.
U.S. Patent # 7,793,674, 7,918,236 and D623,844.
Other U.S. and foreign patent applications are pending.

Manufactured and distributed by SKLZ/Pro Performance Sports: 2081 Faraday Avenue, Carlsbad, CA 92008 U.S.A. SKLZ, and Sport-Brella® are registered trademark of Pro Performance Sports, LLC., its subsidiaries and affiliates. Product features, appearance, and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.

V3

SPORT-BRELLA RECLINER CHAIR
ASSEMBLY



OPEN THE CHAIR AND UMBRELLA

1. Pull the chair out of the bag and open it fully.

2. The umbrella will be attached to the side of the chair. To open, press and hold the button at the base hinge of the umbrella. Rotate the umbrella 180 degrees. Release the button and click the umbrella into place.

NOTE: If umbrella is not attached, simply slide it into the black plastic holder on either side of the chair, button facing outward.

3. Once in place, detach the ties around the umbrella, push the umbrella up and open. Your Sport-Brella Recliner Chair is now ready for use.



MOVING UMBRELLA TO EITHER SIDE

1. To move the umbrella to the other side holder of the chair, press tab and pull out the umbrella shaft from the side holder. Place umbrella in the other side holder until it clicks into place.

ADJUSTING BASE HINGE

1. The umbrella can be adjusted forward and backward by pressing the base hinge button, moving the umbrella arm and releasing the button to lock it in place.




TOP HINGE AND ROTATING THE CANOPY

1. To adjust the umbrella forward or backward 180 degrees, press the top hinge button. Move umbrella into place, and release to lock.

2. To rotate the canopy, grab the canopy tip and rotate the canopy to desired position. The canopy shaft will rotate in the stationary collar.

NOTE: Do not attempt to twist the stationary collar.

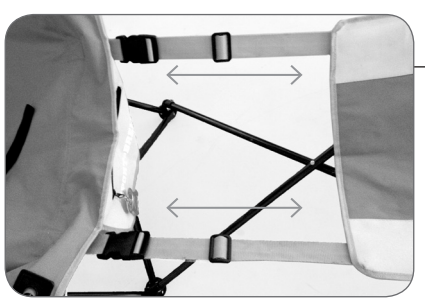

FOOTREST ADJUSTMENT

SETUP

1. Slide the black buckles up or down the footrest straps. Make sure the buckles are always at the same position to keep the footrest level.





REMOVAL

1. From an open position, unscrew the black connectors connecting the two poles that support the footrest to the front feet of the chair.

2. Unbuckle the two clips that secure the straps to the front of the chair seat. The footrest will now be fully detached and can be stored in the carry bag for future use.



RECLINING ANGLE ADJUSTMENT

The Sport-Brella Recliner chair has three positions.

Position 1 - Fully upright, standard position.




Position 2 - Partially reclined at 15º.



Position 3 - Fully reclined at 30º.




NOTE: In full recline position, the chair back support poles will rest securely into cradle of the recliner joint.

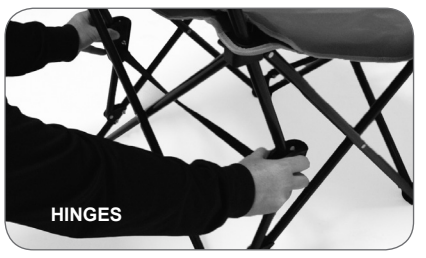

When adjusting the chair, it is best to push both hinge adjustments at the same time.
(see hinges image above).

⚠WARNING:

To avoid being pinched, keep fingers and other body parts out of the inside of the recliner joint.

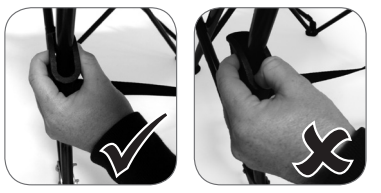

STORE YOUR SPORT-BRELLA RECLINER CHAIR

Make sure that the chair, umbrella and recliner chair are dry and free of debris before storing.

1. Place chair in upright position before folding (see position 1 image).

2. Straighten the umbrella pole with the top hinge. Close the umbrella and secure with the velcro ties.

3. Press and hold the Base Hinge button. Rotate the umbrella downward until it is parallel with the back chair leg.

4. Fold the chair, footrest and umbrella together. Slide contents into the carry bag.

