91.5mm

135mm


ENGLISH


Thank you for Buying and welcome to **Ufree** Electrical Appliance! For you to share the support from **Ufree** Electrical sufficiently, please buy the products you like from our distributors or retailers.

Basic explanation

Component Names

1	Trimming comb 1-10mm
2	Trimming comb 11-20mm
3	Pruning parts
4	Trim Comb key
5	Accurate adjustment knob
6	ON/OFF sliding button
7	Charging indicator
8	USB Power cord
9	Cleaning brush

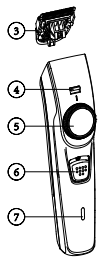



Attention

product, and keep the manual properly for later reference.

Danger

Please keep the product dry always.



Charging

Normal charging time is about 8 hours. When the product is fully charged, it can run for over 40 minutes.
1. Please turn off the trimmer before charge
2. Plug the USB cable into this product
3. Please charge by the original USB cable to connect intelligent mobile phone 5v adaptor/computer USB ports

Notice: when the product is fully charged, the charging indicator shall not change light color or turn off.

Use this beard trimmer product

Please pay special attention when use this trimmer to cut beard first time. Do not move the trimmer too quickly, and make sure your movement is soft and smooth.
Use comb to cut your beard.

1. Install cutter on handler
2. Insert comb into comb grooves
3. Push the precise zoom lock adajusting ring to the required setting and push the limit comb key to the lower position You may select any setting between 1 and 20.
4. Turn on the product
5. When the product runs out of power or is of insufficient electricity, please charge by USB cable to connect intelligent mobile phone 5v adaptor/computer USB ports
6. Move the trimmer slowly against hair growing direction. Press softly to make sure comb surface touches skin completely.

Notice: start to cut at 20 mm setting in the first time in order to get familiar with how to use this product.

Storage

Put trimmer, combs, attachments and USB Wire into the packaging box, and store it at dry place to avoid any potential damage.

Common problem	Reason	processing method
Beard trimming comb Can not be fixed on the handle	Not properly fitted with beard, trim, comb	Trim the beard and comb it into the sides of the handle The guide until you hear a "clicking" "sound
	The guide groove is not clean	Thoroughly clean the product and guide groove
	Pruning damaged comb	Please contact the dealer or customer misun appliances Buy new trim comb at garment center
The product is not working	The battery charge has run out	"Charge the product (see '' Charging chapter. During charging, The charging indicator on the product is not on. Check to see if there is a power failure, Or whether the power supply socket, but charge The electric indicator is still not on."
Connected to the power supply products Not work	Poor contact for adapter	Check that the adapter or USB power cord is connected to the power supply
Product of pruning Not before.	The trim parts for the attachments you use Dirty	The product is removed from Annex In lukewarm water Tap cleaner attachment.