


Quick Guide



1. Insert the device into the vehicle's cigarette lighter.



2. Adjust the car radio to a blank FM channel (87.5-108.0 MHz).




3. Tune the device to the same channel as the car radio.



4. Activate the Bluetooth on your phone, and select "BC61" to connect.

Frequency Modulation

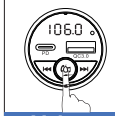

1. Long press the "⏯" button to enter frequency adjustment mode.
2. Click or long-press the "⏭"/"⏮" button to increase/decrease the frequency.
3. Press the "⏯" button to confirm or wait 3 seconds for automatic saving.

Volume Adjustment

The transmitter volume is set to maximum and **NOT ADJUSTABLE**. Please adjust the volume on your phone or car stereo.

FAQ

Q1 How to avoid static noise to ensure sound quality?

A: Please make sure that your car radio and FM transmitter are tuned to the same unused/blank frequency (with no music or vocals, just steady rustling).
B: Lowering car speaker volume and increasing phone volume can help reduce background noise.

Q2 Why can't I hear the other's voice on the call?

A: Select the FM transmitter "BC61" to answer the call via car speaker.
B: Turn up the volume of your phone.
C: Poor signal on the other end, please try again later.

Q3 The product can't pair with my phone.

A: Clear the Bluetooth pairing history on your phone, and restart it.
B: Disconnect and reconnect the FM transmitter to the cigarette lighter.
C: Activate Bluetooth on your phone and attempt to reconnect.

Q4 Should I unplug the product after turning off the engine?

A: Please unplug the car FM transmitter when exiting the vehicle. (In certain cars, the cigarette lighter socket remains powered after engine shutdown, preventing battery drain and electrical damage, especially in older models.)