
QUICK START GUIDE

Control Panel

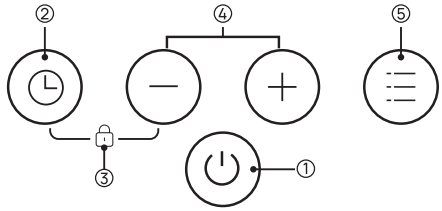

① **Power (On / Off)**
- Touch to turn the heater on/off.

② **Timer(0-12H)**
- Touch to set a timer (0-12H).

③ **Child Lock**
Long press ◷ and ⊖ for 3s to activate/deactivate Child Lock function.

④ **Heat Level / Temperature**
- In Power Heat mode, touch to adjust the heating level (H1/H2/H3).
- In ECO mode, touch to adjust the set temperature (41-95°F).

⑤ Mode (Power Heat /ECO/ Fan Only)
- Touch to switch between ☼ → ECO → ❀
- Long press 3s to turn on/off the button sounds.

Note:
Once turned off, a 30-second countdown will show up on the display while the fan blows out the remaining heat.

LED Display



Plugged in

Timer

Fan Only

Power Heat with three heating levels:
H1(1000W)
H2(1300W)
H3(1500W).

ECO
The heater will automatically select its optimal heating power, depending on the difference between the set and ambient temperature.

Extend Warranty to 30 Months

Scan the QR code or visit dreo.com/warranty to extend your warranty for free.

Looking for help?


Contact us to get expert support.
Fast, professional, helpful.

support@dreo.com

(888) 290-1688
Mon - Fri, 9:00 am-5:00 pm PST/PDT

www.dreo.com


Heater Safety: Do's and Don'ts



Do


Directly plugged into a 15A 120V wall outlet only.

Power strip / extension cord / shared outlet can cause overloading and result in a short circuit, fire, or electric shock.

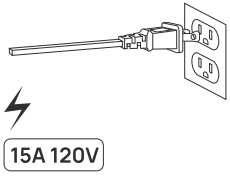

Check the plug and outlet regularly and keep them clean.

Most dust is flammable and dust buildup can cause a short circuit, fire or electric shock.

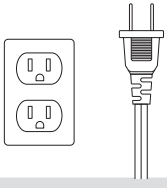


Check the plug regularly and contact Dreo Customer Service if it's bent or damaged.

Any bent or damaged plug can cause a short circuit, fire, or electric shock.




Ask an qualified electrician to fix the outlet if it's loose.

Loose outlets can disrupt currents and cause a short circuit, fire, or electric shock.

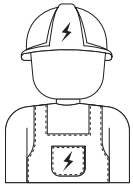


Don't


Don't use a dusty plug or plug into a dusty outlet.

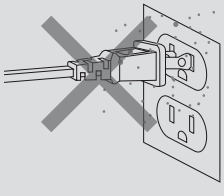


Don't share the outlet with other appliances.

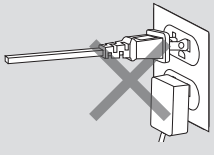


Don't use a power strip / extension cord.

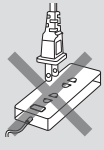

Don't plug into a loose outlet.

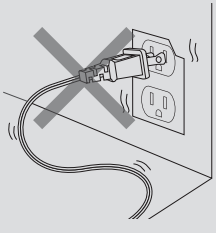

Don't use a bent or damaged plug.

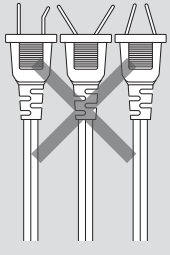

DR-HSH006 / DR-HSH006A
Rev_1.3_EN