
Mesqool

ELECTRIC SPIN SCRUBBER

MODEL:CB1001

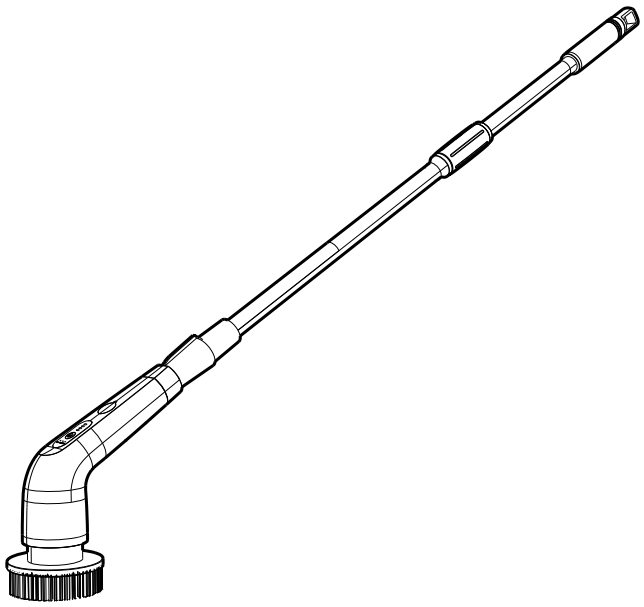

Http://www.mesqool.com

Email:support-us@mesqool.com

CE FC RoHS Made in China Version 1.0

Package List



① Scrubber Head
② Extension Handle
③ Flat Brush
④ Wide Flat Brush
⑤ Corner Brush
⑥ Dome Brush
⑦ Velcro Base
⑧ Sponge Brush
⑨ Fiber Brush
⑩ Imitation Wool Brush
⑪ Cloth Brush

8 Different Types of Cleaning Brushes



Wide Flat Brush

Used to clean large flat surface areas, like floor, tile, wall, door, window, glass, counter, patiofurniture, pool, soap scum, stove, carpet, ceramic.



Flat Brush

Ideal for narrow flat surface areas, like the edge of the sink.



Dome Brush

Perfect as a concave cleaning brush for tub, bathtub, sink, baseboard, toilet.



Corner Brush

Great for cleaning tile grout, edges, corners and cranny places.

Cloth Brush

Suitable for window glass, wooden floors, wooden furniture and all surfaces that cannot be abraded.



Sponge Brush

Mainly used for washing car paint surfaces, glass, etc, without causing surface scratches.



Fiber Brush

Apply to clean stoves, Kitchen ventilator, gas cooker and hard-to-clean areas.



Imitation Wool Brush

Good for cleaning furniture, car seats, leather, etc.


Brush Head Assembly




01 When replacing the brush head, please turn off the machine



02 Gently swing the brush head and pull it out vertically

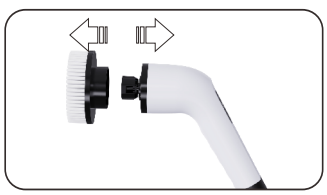

03 Hold the brush head with one hand and pull it out vertically.

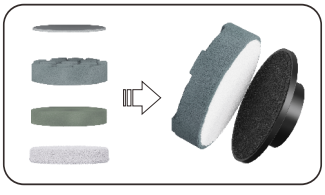


04 4 pieces need to be installed on the Velcro base to use


Extendable Rod Assembly



01 The rod with the threaded end is rotated and tightened with the machine head

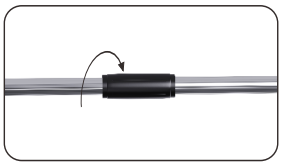

02 Rotate and tighten the two pole sections as shown in the image

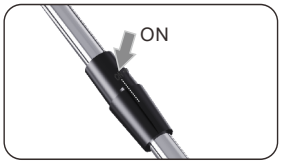

03 Rotate the indicator arrow to align with "ON" to unlock, and adjust the extension rod to the length you need



04 Rotate the indicator arrow to align with "OFF"to lock and secure the extension rod

Instructions

1. Press the power switch to activate the machine and switch to H-M-L-OFF mode. (Default is H gear when starting up)
2. Long press for 2s to turn off the machine when in any speed mode (H=440RPM M=380RPM L=220RPM)



How to charge

01 The device comes with a type C charging port, open the silicone cover and insert adapter. Then plug into an electrical outlet for charging.

02 The lighting indicator flashes when charging. After fully charged, the lightning indicator will stay on.




PARAMETERS

Model	CB 1001
Size	65x115.7x1300mm
Material	ABS+Stainless Steel
Working Time	90Mins
Charging Time	2Hours
Speed	440RPM-380RPM-220RPM
Operating Noise	H=69dB, M=66dB, L=64dB
Input Voltage	DC 5V/2A
Battery Capacity	3000mAh
Waterproof Level	IPX5

Cleaning & Maintenance

Handle Part: Gently wipe handle part of the scrubber with a soft cloth.

Brush Head: Disassemble the brush head and immerse it into the water to clean. Clean it with neutral detergent if it is difficult to clean.

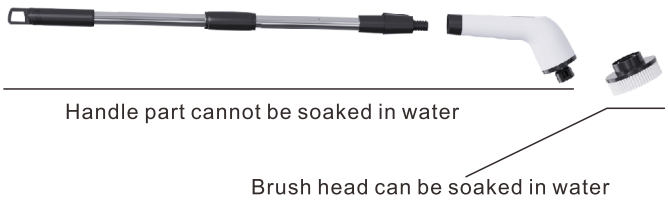

Note:

1. Make sure the silicone charging cover is sealed when cleaning.
2. Do not use steel wire, abrasive cleaner or corrosive liquid (eg. alcohol or petrol) to clean brush heads and fuselage surfaces
3. After cleaning is finished, it's necessary to shake off the moisture from the product and wipe it with a dry cloth