INSTRUCTION MANUAL

ESPRESSO MACHINE



ITEM NO: CM8054-BLACK

MODEL NO: CM5400BA-UL

120V~ 60Hz 1350W

THANK YOU FOR CHOOSING OUR COFFEE MAKER
PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING

IMPORTANT SAFEGUARDS


Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
9. Ensure the power cord do not touch hot surface of appliance.
10. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
11. To disconnect, turn any control to “off,” then remove plug from wall outlet. Always hold the plug. But never pull the cord.
12. Do not use appliance for other than intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used by or near children.

14. Be careful not to get burned by the steam.
15. Do not touch the hot surface of appliance (such as steam wand, and the steel mesh just boiling). Use handle or knobs.
16. Do not let the coffee maker operate without water.
17. Scalding may occur if the water tank is removed during the brewing cycles.
18. Do not remove the metal funnel when appliance in brewing coffee or when steam and hot water escape from metal funnel and ensure to release the pressure in water tank before removing metal funnel.
19. Connect plug to wall outlet before using and turn any switch off before plug is removed from wall outlet.
20. Relief pressure through steam wand before removing tank cover or metal funnel.
21. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. This appliance is intended to be used in household and similar applications such as:
    – staff kitchen areas in shops, offices and other working environments;
    – farm houses;
    – bed and breakfast type environments.
24. Do not use outdoors.
25. Do not place on or near a hot gas or electric burner, or in a heated oven.
26. Save these instructions.

KNOW YOUR COFFEE MAKER

(Product may be subject to change without prior notice)

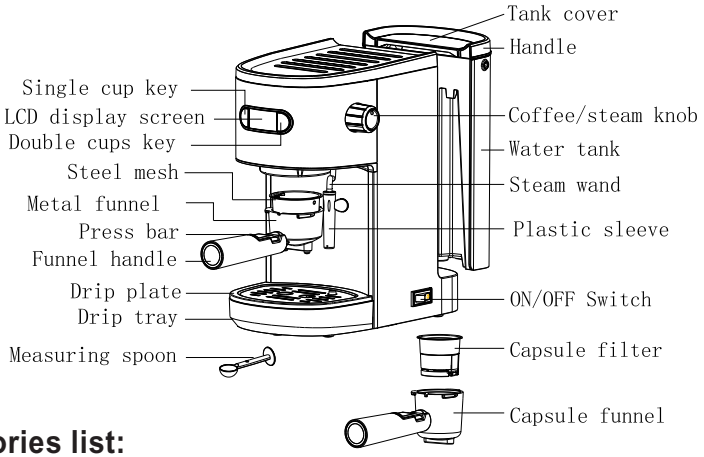

Accessories list:

No.	Name	quantity
1	Steel mesh(single cup)	1
2	Metal mesh(with double cup stell mesh)	1
3	capsule funnel(with capsule filter)	1
4	Measuring spoon	1

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

- Remove the water tank from the coffee machine, remove the red silicone plug between the water tank and the coffee machine, and dispose of it properly.
- Pour water into water tank, the water level should not exceed the “MAX” mark in the tank. Then close the water tank cover.

Note: The appliance is supplied with a detachable tank for easy cleaning, you can fill the tank with water firstly, and then put the tank into the appliance.

- Set steel mesh into metal funnel (no coffee in steel mesh).
- Place an espresso cup (your cup) on drip plate. Make sure the "Coffee/Steam knob" is on the " O " position.

Note: The appliance is not equipped with jug, please use your own jug or coffee cup.

- Connect it to power source, press the ON/OFF switch. The LCD display screen will flash.
- The appliance will start heating. When the LCD display screen becomes solid, it means the pre-heating is finished.
- When the appliance stops pumping water automatically, you can pour the water in container out then clean them thoroughly, now you can start brewing.

PRE-HEATING

To make a cup of good hot Espresso coffee, we recommend you preheat the appliance before making coffee, including the funnel, steel mesh and cup, so that the coffee flavour can not be influenced by the cold parts.

- Remove the detachable tank and open the tank cover to fill it with desired water, the water level should not exceed the "MAX" mark in the tank. Then place the tank into the appliance properly.
- Set steel mesh（single cup or double cup) into metal funnel, make sure the tube on the funnel aligns with groove in the appliance, then insert the funnel into the appliance from the "  " position, and you can fix them into coffee maker firmly through turn it anticlockwise until it is at the"  " position.
- Place an espresso cup (your cup) on removable drip plate.
- Then connect the appliance to power supply source. Make sure the "Coffee/Steam knob" is on the " O " position.
- Press the ON/OFF switch, the LCD display screen will flash.

- When the LCD display screen becomes solid, the appliance stops pumping water automatically, the pre-heating is finished.

Note: There may be noise when pumping the water on the first time, it is normal, the appliance is releasing the air in the appliance. After about 20s, the noise will disappear.

MAKE ESPRESSO COFFEE

- Remove the funnel by turning clockwise, add ground coffee to steel mesh with coffee spoon, a spoon of ground coffee powder can make about a cup of top-grade coffee, then press the ground coffee powder tightly with the coffee spoon.
- Set steel mesh into metal funnel, make sure the tube on the funnel aligns with groove in the appliance, then insert the funnel into the appliance as indicating of " " mark, and you can fix them into coffee maker firmly by turning it anticlockwise until it is in the " " position.
- Pour out the hot water in the cup. Then place the hot cup (yourself cup) on drip plate.
- Rotate "Coffee/Steam knob" to " "position, Press the "single cup key" " "or "double cup key" " " according to your demand. After waiting for a moment, there will be coffee flowing out.
- The appliance will stop working when the coffee-brewing is finished, and then your coffee is ready now.

WARNING: Do not leave the coffee maker unattended during making the coffee,as you need to operate manually sometimes!


- After finishing making the coffee, rotate the "Coffee/Steam knob" to " " position, you can take the metal funnel out through turn clockwise, then pour the coffee residue out with the steel mesh pressed by press bar.
- Press the power switch to cut off the power source.
- Let them cool down completely, then rinse under running water.

USING THE PORTA-FIL TER FOR OriginalLine NESPRESSO® CAPSULES.

Note: The filter only matches Nespresso® capsules.

- Lift the lid of the OriginalLine Nespresso® capsule filter. Place the OriginalLine Nespresso® capsule inside the filter and then close the lid.



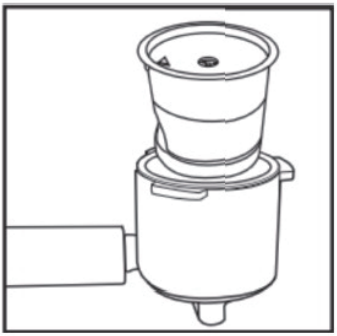

- Set the OriginalLine Nespresso® capsule filter into capsule funnel, then put the capsule funnel into the appliance as indicating of “ ▼🔓 ” mark, and you can fix them into coffee maker firmly by turning it anticlockwise until it is in the “ ▼🔒 ” position .
- At the time, rotate “Coffee/Steam knob” to “ 💧 ”position, Press the “single cup key” “ ☕ ” . After waiting for a moment, there will be coffee flowing out.
- After finishing making the coffee,rotate the “Coffee/Steam knob” to “ O ” position, you can take the metal funnel out by turning it clockwise, then pour the coffee residue out with the steel mesh pressed by press bar.

FROTHING MILK/ MAKE CAPPUCCINO

You get a cup of cappuccino when you top up a cup of espresso with frothing milk.
Note: during making steam, the metal funnel must be assembled in position.
Method:

- Prepare espresso first with a container big enough according to the part “MAKE ESPRESSO COFFEE”.
- Fill a jug with about 100 grams of milk for each cappuccino to be prepared, you are recommended to use whole milk at refrigerator temperature (not hot!).
  Note: In choosing the size of jug, it is recommended the diameter is not less than 70±5mm, and bear in mind that the milk increases in volume by 2 times, make sure the height of jug is enough.
- Insert the plastic sleeve into the milk about two centimeters, then turn the “Coffee/Steam knob” to the “ ” position, steam will come out from the steam outlet and froth milk in the way moving vessel round from up to down.
  Warning: Be sure to operate carefully as the steam may result in scald to person.
- When the required purpose is reached, you can turn the “Coffee/Steam knob” to the “ O ” position.
  Note: Clean the steam outlet with a wet sponge immediately after steam stops generating, but care not to hurt!
- Pour the frothed milk into the espresso prepared, now the cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.
- Press the power switch to cut off the power source.

PRODUCING STEAM TO HEAT LIQUIDS

The steam wand can be used to froth milk singly or make hot beverages like drinking chocolate and water.
Method:

- Remove the detachable tank and fill it with desired water, the water level should not exceed the “MAX” mark in the tank. Then place the tank into the appliance properly.
- Then connect the appliance to power supply source.
- Press the ON/OFF switch, The LCD display screen will flash.
- When the LCD display screen becomes solid, it shows the pre-heating is finished.
- Dip the steam wand with plastic sleeve into the liquid to be heated or the intended froth milk. Turn the “Coffee/Steam knob” to the “ ” position and start making steam.
- When the required temperature is reached or the frothing milk is obtained, you can turn the “Coffee/Steam knob” to the “ ” position.
- Press the ON/OFF switch to cut off the power source.

AUTOMATICALLY POWER-OFF FUNCTION

After pressing the power switch, if there is no any operation within 15 minutes, the unit will power off automatically.

CLEAN AND MAINTENANCE

- Cut off power source and let the coffee maker cool down completely before cleaning.
- Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and drip plate regularly then dry them.
- **Note:** Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
- Detach the metal funnel by turning it clockwise, get rid of coffee residue inside, then you can clean it with cleanser, but at last you must rinse with clear water.
- Clean all the attachments in the water and dry them thoroughly.

CLEANING MINERAL DEPOSITS

- To make sure your coffee maker operates efficiently, internal piping is clean and the peak flavor of coffee, the coffee machine needs to be descaled, cleaned and maintained periodically. descaling warning will be shown when the appliance has cumulatively worked for 500 cycles, at that time, the icon “  ” will flash 10 times alternatively, which means that the coffee machine needs to be performed descaling, and then the appliance will go back into normal condition. Descaling warning will be shown each time when you turn on the appliance if you do not cancel.
- Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid (obtainable from chemists or drug stores) instead of the descaler (the one hundred parts of water and three parts of citric acid).

- Press “Double-cup key” “ ” once to make hot water for about 100ml. Then turn off the appliance and leave the descaling solution in the appliance for 5 minutes.
- Turn on the appliance and repeat the Step 3 for 3 times. Repeat
- the steps of 3 for 2 times with tap water at the MAX level (it is not necessary to wait for 5 minutes).
- After finishing descaling, cancel the descaling warning. And you can directly cancel the descaling warning if you do not want to perform descaling when the descaling warning is shown. Follow the operation below to cancel the descaling warning: Turn the knob to “ ” while pressing the “Single-cup key” “ ” button and then turn the knob “ ”.

TROUBLE SHOOTING

Symptom	Cause	Corrections
Water leaks from the bottom of coffee maker.	There is much water in the drip tray.	Please clean the drip tray.
	The coffee maker is malfunction.	Please contact with the authorized service facility for repairing.
Water leaks out of outer side of filter.	There is some coffee powder on filter edge.	Get rid of them.
Acid (vinegar) taste exists in Espresso coffee.	No clean correctly after cleaning mineral deposits.	Clean coffee maker per the content in “before the first use” for several times.
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.

The coffee maker cannot work any more.	The power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact with the authorized service facility for repairing.
The steam cannot froth.	The white indicator is not illuminated.	Only after the white indicator is illuminated, the steam can be used to froth.
	The container is too big or the shape is not fit.	Use high and narrow cup.
	You have used skimmed milk	Use whole milk or half-skimmed milk

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact a certified serving center.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio
al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC 28407
Ascent Way, Santa Clarita, CA 91350
Phone: 213-4467172 or 661-4358826