Licensed by Hasbro

NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. ©2023 Hasbro.

FSC www.fsc.org
MIX
Paper | Supporting responsible forestry
FSC® C141070

Made In China
Franklin Sports Inc.
Stoughton, MA 02072

AGES 6+

BOUNCE N SCORE

ITEM NUMBER: **82105** **82105X** **82105S78**



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **franklinsports.com/instructions**

If possible, please include product part number and parts description so we can best assist you.

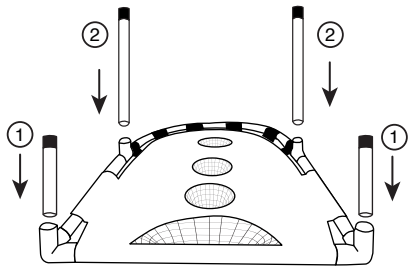
WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.


WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

STEP 7



PARTS


1		x2
2		x2
6		x2
7		x2

NOTE



Flip the Target Frame over. Attach the **Short Tube Legs** (#1) to the bottom **Corner Connectors** (#6) and attach the **Long Tube Legs** (#2) to the top **3 Way Connectors** (#7). Target is complete.

YOU ARE NOW READY TO PLAY!

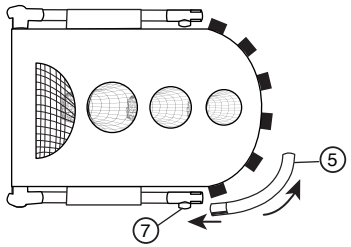STEP 4




PARTS

5		x1
7		x2
9		x1



NOTE

Slide a **Curve Tube** (#5) through the elastic on one side of the **Target** (#9) and connect it to the **3 Way Connector** (#7).

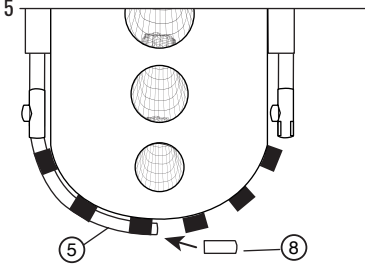STEP 5




PARTS

5		x1
8		x1
9		x1



NOTE

Attach the **Straight Connector** (#8) to the end of the **Curve Tube** (#5).

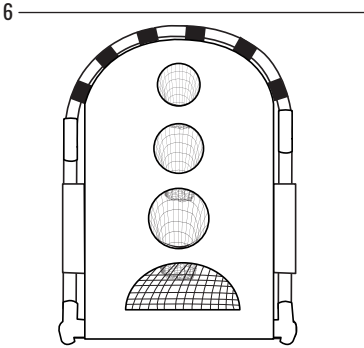STEP 6












PARTS

5		x1
7		x2
8		x1
9		x1

NOTE

Slide the other **Curve Tube** (#5) through the elastic on the remaining side of the **Target** (#9) and attach to the **Straight Connector** (#8) and the **3 Way Connector** (#7).

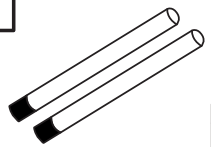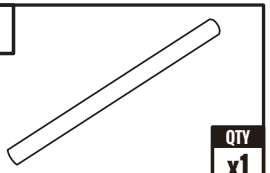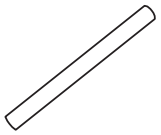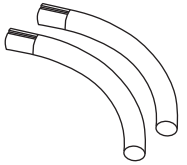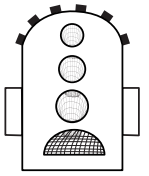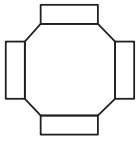PARTS LIST

1  QTY x6 Short Tube Legs	2  QTY x2 Long Tube Legs	3  QTY x1 Long Frame Tube
4  QTY x6 Short Frame Tube	5  QTY x2 Curve Tube	6  QTY x6 Corner Connector
7  QTY x2 3 Way Connector	8  QTY x1 Straight Connector	9  QTY x1 Target
10  QTY x1 Bounce Pad	11  QTY x6 Foam Ball	

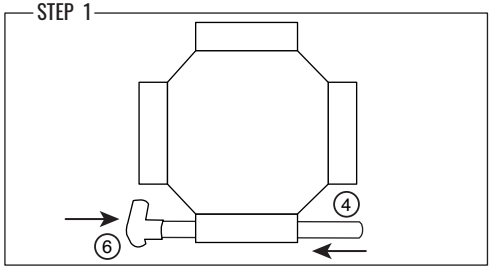
ASSEMBLY INSTRUCTIONS

GENERAL NOTE

Remove all the parts from the box and verify that you have all the parts as shown on the parts list page.

BOUNCE PAD ASSEMBLY

STEP 1




PARTS

4		x1
10		x1
6		x1

NOTE

Slide the **Short Frame Tube** (#3) into the **Bounce Pad** (#10) and add the **Corner Connectors** (#6).

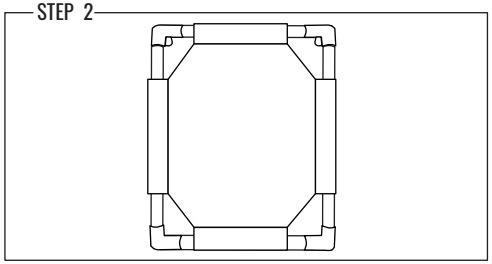STEP 2




PARTS

4		x3
10		x1
6		x3

NOTE

Repeat step one on all 4 sleeves of the **Bounce Pad**(#10).

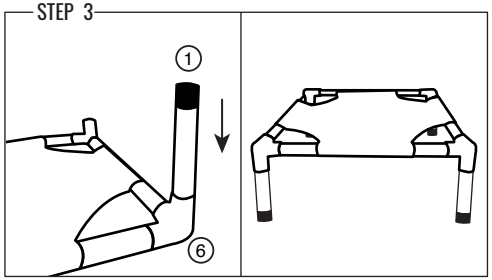STEP 3



PARTS


1		x4
6		x4

NOTE

Flip the Bounce Pad Frame over and add the **Short Tube Legs** (#1) to each **Corner Connector** (#6). Bounce Pad is complete.

TARGET ASSEMBLY

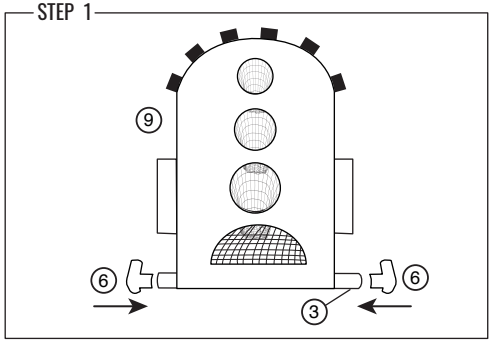STEP 1




PARTS

3		x1
6		x2
9		x1

NOTE

Slide the **Long Frame Tube** (#3) on the bottom sleeve of the **Target** (#9). Add a **Corner Connector** (#6) to each end.

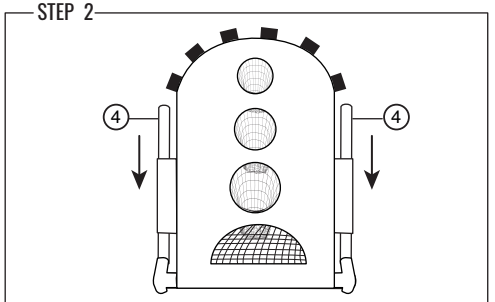STEP 2




PARTS

4		x2
6		x2
9		x1

NOTE

Slide a **Short Frame Tube** (#4) into each side sleeve of the **Target** (#9) and attach to each **Corner Connector** (#6).

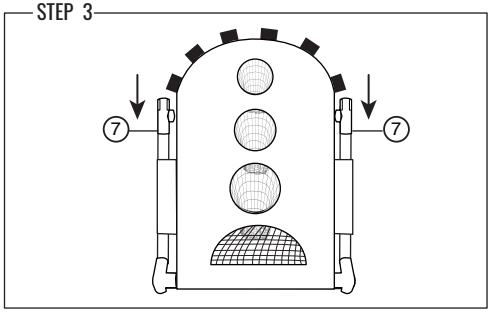STEP 3



PARTS

4		x2
7		x2

NOTE

Attach the **3 Way Connector** (#7) to each end of the **Short Frame Tube** (#4).