## CLEANING & MAINTENANCE

- Unplug the appliance and let cool completely before cleaning it.
- Use a damp cloth then clean carefully. Make sure the appliance is completely dry before using again.
- The rear filter should be cleaned using a soft brush on a regular basis to help prevent buildup and overheating. This will also prolong the motor life.


## STORAGE

Unplug appliance when not in use.

Welcome to contact us for any reason by email:

service@nicebaylife.com

Nicebay by WHALL

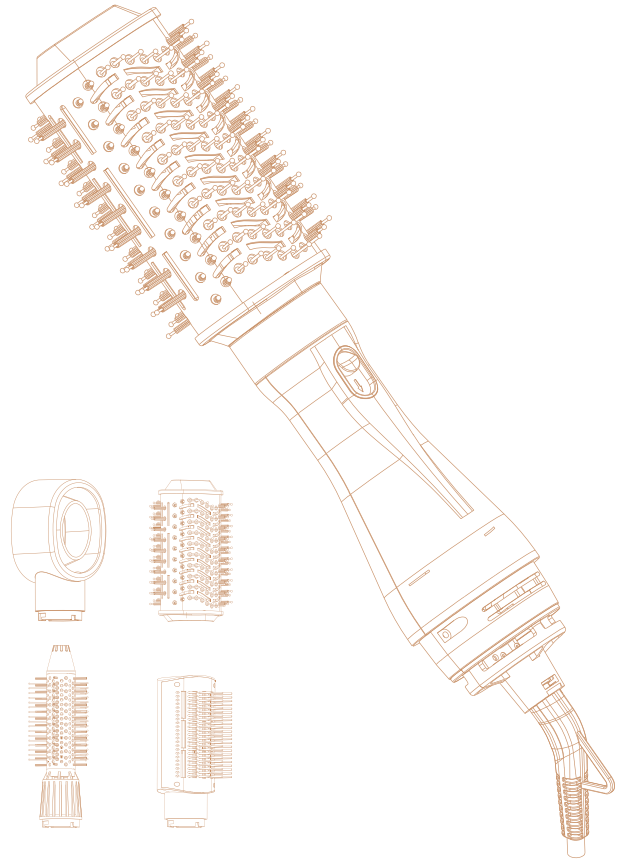



# INSTRUCTION MANUAL

Hot Air Brush


Model **CT-536**

125V~ 60Hz 1000W

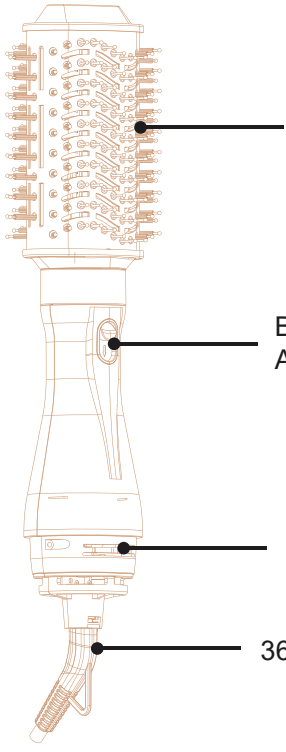


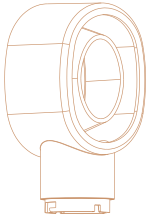
BLOW DRYER

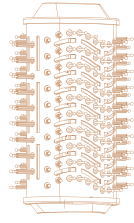

2.0 INCH OVAL
STYLING BRUSH



1.5 INCH CURLY
HAIR BRUSH

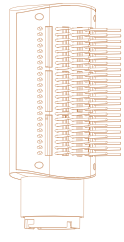

STRAIGHT HAIR BRUSH

## HOW TO REPLACE THE HEAD BRUSH?

### INSTALLATION

Step1: Match the card slot of brush head and handle.
Step2: Twist left with some till it clicks.

### DISASSEMBLY

Step1: Press and hold the button.
Step2: Twist right to remove the brush head.

**Note: If it doesn't click it will work itself loose. Once you locking correctly,it never falls off.**

## IONIC TECHNOLOGY

Negative ions saturate the airflow to reduce the size of water droplets for faster drying. This helps condition, smooth and make hair shinier, while reducing frizz and static.

## CERAMIC COATING

Protects hair from over-styling with even heat distribution that penetrates hair quickly from the inside out for less damage.

## THREE TEMPRETURE SETTINGS

- **LOW SETTING:** This positing combines ideal air flow and temperature setting for shaping finer, damaged or treated hair.

- **HIGH SETTING:** Combines ideal airflow with higher temperature, especially recommended for pre-drying and also for styling thick hair.

- **COOL SETTING:** Using the cool setting at the end sets the style for a long-lasting effect. The rotation/spin function so thatstyle can easily be set.

## DETACHABLE DESIGN FOR TRAVEL

This hair dryer brush set includes blow dryer head for drying and styling, 1x2.0 inch oval styling brush for straightening and curling, 1x1.5 inch curly hair brush heads for curling styles,1x2.4 inch straight hair brush head for straight.It is easy to change brush heads just by pressing the button.

## OPERATING INSTRUCTIONS

**This appliance is intended for household use only.**

Use on Alternating Current (60 HZ) only. Standard hot air brushes are designed to operate at 110 to 125 volts AC. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

# IMPORTANT - 1000 WATT OPERATING GUIDE

Use of this hot air brush on the same circuit or fuse with other electrical products or appliances may trip the circuit.
NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

# INSTRUCTIONS FOR USE

## Styling Tips

1. For faster results, dry hair with towel to remove excess water, then run a comb through damp hair to detangle for best results.
2. Plug the appliance into an electrical outlet and adjust the switch to the selected setting. Use the LOW setting on fine or thin hair and the HIGH setting on thick and coarse hair. Use the COOL setting to lock in the style.
3. Separate hair into manageable sections.
4. Position the appliance in the hair close to the roots, and brush though the section.
5. Move the brush through the hair toward the ends, and as you reach the end of the section, start to rotate the brush away from the head by pressing and holding the appropriate rotate button.
6. As you do this, resist the rotation of the brush by pulling the brush downward. Tension created through the section of hair will help to smooth hair faster.
7. For added root lift, hold the brush in place at the the root for a few seconds.
8. For even more volume, allow the brush to rotate, winging the entire section of hair around the barrel. Release the rotate button and then leave the brush in the hair for a few seconds. Use COOL setting to lock in the style.
9. To release the section, press and hold the opposite rotation button to unwind the hair section.
10. Repeat as necessary.
11. For less volume, you can follow the same steps and use without the spin function.
12. Turn the appliance off when drying and styling is complete. Allow the unit to cool completely before storing.

## ⚠ Warning:

### To reduce the risk of burns, electrocution,fire,or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is disabilities.
3. Use this appliance only for its intended use as described by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug,if it is not working properly,or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not warp he cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.Keep the air openings free of lint, hair,and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being adminis tered.
10. Do not use an extension cord with this appliance.
11. Do not direct hot air toward eyes or other heat sensitive areas.
12. Attachments may be hot during use.Allow them to cool before handling.
13. Do not place appliance on any surface whileit is operating.
14. While using the appliance, keep your hair away from the air inlets.
15. This appliance has a polarized plug(one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully nto the outlet, reverse the plug, if it till does not ft, contact a qualified electrician. Do not attempt to modify the plug in any way.
16. Do not operate with a voltage converter.
17. If the supply cord is damaged,it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
18. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
19. For additional protection the installation of a residual current device (RCD)with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
20. WARNING-Do not use this appliance near water in bathtubs, basins or other vessels.