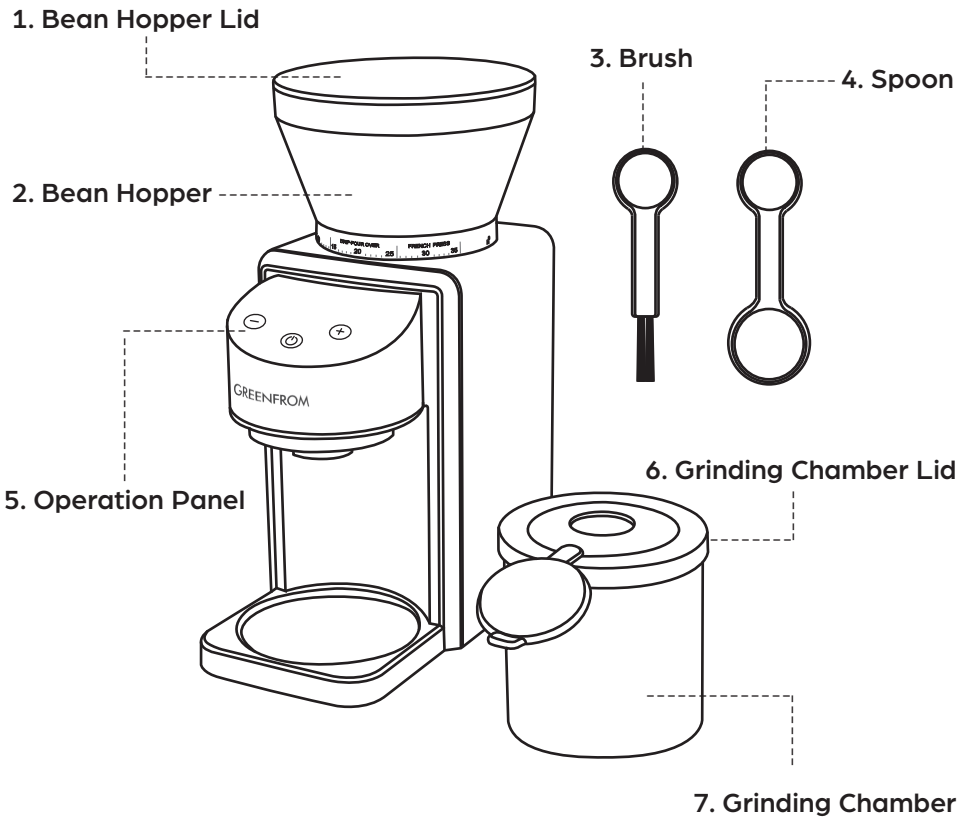
GREENFROM®

Automatic Conical Burr Coffee Grinder User Manual



1 YEAR WARRANTY

PRODUCT DECOMPOSITION



SPECIFICATION

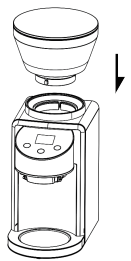
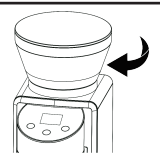
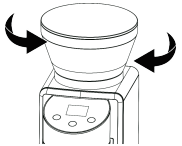
Model	CG9406B-UL
Rated Voltage	120V~
Rated Frequency	60Hz
Rated Power	200W
Bean Hopper Capacity	8.46oz
Grinding Chamber Capacity	4.58oz
Net Weight	4.5 pounds
Dimensions	7.87 x 4.72 x 11.81inch

SAFETY INSTRUCTION

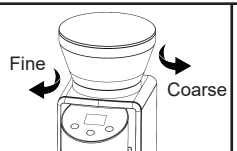
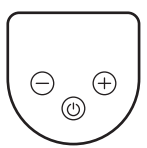
1. Please ready this manual carefully before using the product.
2. Please make sure the product connects with the right voltage as the rating label shown. And the pin is connected perfectly.
3. When the cable, socket, or other electric parts are broken, please stop using this product.
4. While the product is connected with the socket, please do not put hands, spoon, clip,chopsticks and so on into the bean hopper.
5. It is prohibited to disassemble, fix, improved the product without instruction.
6. Please leave this product far away from children and make sure not to play with the appliance.
7. Once you stop working or fall into the water, please unplug it immediately.
8. Please clean the product carefully before using. Make sure there is no dust or solid stuff except the coffee bean.
9. It is prohibited to pull in/ pull off the socket with wet hands.
10. After each usage, please turn off the coffee bean grinder. Before remove the parts, make sure the power is totally off.
11. Please do not immerse the coffee bean grinder, power cord and plug into liquid.
12. If there is unusual sound, unusual smell, excessive heat, smoke, please turn off the grinder and pull off the socket.
13. It is prohibited to leave weight or the grinder on the cable or socket.
14. It is prohibited to shake or fall the grinder.
15. Please pull the cable gently when using the grinder.
16. It is strictly forbidden to touch the bean hopper when the product is running. If you have long hair, make sure not to fall into the bean hopper.
17. Keep this product away from open flames and heat sources.

USING INSTRUCTION

1. Before using for the first time, please clean all the parts and accessories carefully. (Kindly check page “CARE AND CLEANING” for more details)
2. Placing the grinder on the table vertically.
3. Assembling

1		Install the Bean Hopper into the correct position of the appliance. Make the positioning ribs at the Bean Hopper align with the grooves at the main body. The Bean Hopper can be removed when the icon ▼at the Bean Hopper aligns with the icon 🔓.
2		Rotate the Bean Hopper clockwise to lock it, and then the grind size can be adjusted.
3		Open the lid, add the beans and cover the lid. (Maximum capacity: 240g)
4		Rotate the Bean Hopper clockwise to get finer ground; Rotate the Bean Hopper counterclockwise to get more coarse coffee ground.
5		Remove the sealing cover and place the chamber into correct position.

SETTING AND OPERATION

1		Plug in a power outlet. Rotate the Bean Hopper to select the grind size from 1(Fine) to 35 (Coarse).
2		Touch “+” or “-” on the operation panel selects the number of cups or shots. Tap the "on/off" to start / pause grinding. French Press: 1-12Cups Drip Coffee Maker: 1-12Cups Espresso Machine: 1-2Cups

WARNING: Do not operate this appliance for longer than 3 minutes at a time as this can cause overheating. Please allow the appliance to cool down 30 minutes if it works over 3 minutes.

GRINDING AND SETTING

Brew Type	French Press	Drip Coffee Maker	Espresso
Ground Size	Coarse	Medium	Fine
Cup Selection	1-12 Cups	1-12 Cups	1-2 Cups
Maximum Grinding Time	55S(12Cup)	55S(12Cup)	9-18S(1-2Cup)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not work	Grinder not plugged in	Plug power
	Bean hopper or chamber not attached properly	Gently remove and re-install bean hopper or chamber ensuring it is seated properly.
	Grinder overheated	Fill hopper with fresh coffee beans
Grinder stops mid-cycle	No beans in hopper	Fill hopper with fresh coffee beans
	Foreign item trapped in burrs	Unplug power cord and remove hopper. Inspect hopper, clean the burrs. Remove any foreign objects. Refer to Care and Cleaning section.
	Grounds chute is clogged	Unplug power cord and remove hopper. Clean grounds chute with brush.

CARE AND CLEANING

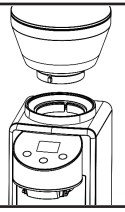
• Clean The Grinder

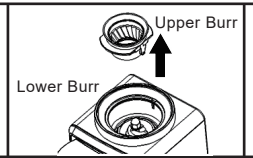
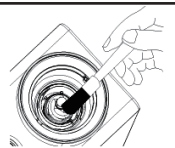
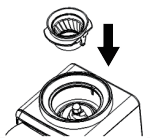
Warning: Before cleaning, please make sure the grinder is unplug.
To avoid damage, do not immerse the main body, grinding burr or power cord in water or put it in the dishwasher.

1		The Bean Hopper, Bean Hopper Lid, Grinding Chamber, Grinding Chamber Lid, brush and spoon can be cleaned with warm soapy water, then rinse with clean water and dry thoroughly. Also you can clean them with the dishwasher.
2		Wipe the main body of Coffee Grinder with a soft and damp cloth and dry it with a soft dry cloth.

• Cleaning The Burrs

Warning: It is recommended to clean out the coffee bean hopper after every few uses for keeping best grinding effect and best performance.

1		Empty the Bean Hopper. Remove the lid and the Bean Hopper.

2		Remove the upper burr.
3		Clean the upper burr with the cleaning brush
4		Clean the lower burr with the cleaning brush to remove coffee residue.
5		Install the upper burr in correct position.

DISPOSAL

This product should not be disposed of with other household wastes.
To prevent possible harm to the environment or human health from uncontrolled waste disposal, it should be recycled responsibly.

WARRANTY

- **One-year limited warranty**

  This product is warranted to be free from defects in material or workmanship for a period of one year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable.

  Please contact our Customer Service for instructions on the repair and/or replacement of the appliance if a covered defect occurs within the one year warranty period.

Please contact for warranty:

Email: greenfromservice@outlook.com