Door Draft Stopper User Manual

READ AND SAVE THESE INSTRUCTIONS

Inspect Unit Before Use.
Contact support@upperechelonproducts.com immediately
for any damaged or defective units.



Watch our video installation guide as provided on our Amazon listing to see visually how to install the Everlasting Comfort Door Draft Stopper.


Contact Upper Echelon Products directly through Amazon for any assistance.

We're here to help!

1. Go to product listing on Amazon and select Upper Echelon Products.
2. Select the "Ask a Question" button.
3. Write your message and send! We'll reply in less than 24 hours.
4. Or just simply click the button below!

Ask a question

Attention! This product is only suitable for door gaps between 0.25 inches and 1.5 inches and door widths between 30 inches and 36 inches.

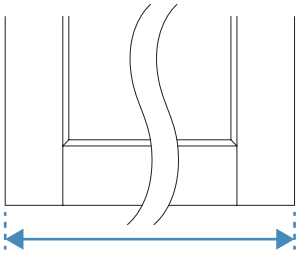


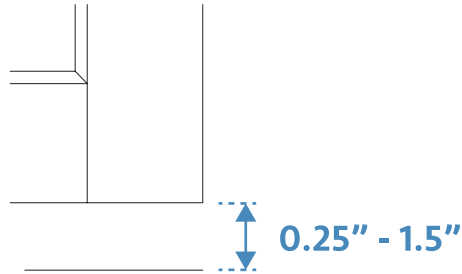


TABLE OF CONTENTS

1 COMPONENTS
2 ASSEMBLY
3 INSTALLATION
4 MAINTENANCE


1. COMPONENTS

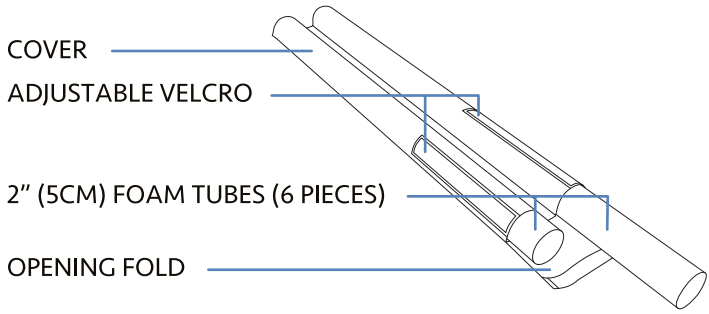


2. ASSEMBLY

1 Line up 3 foam tubes along the bottom edge of your door.


The door draft stopper is suitable for doors measuring 30" - 36" wide.

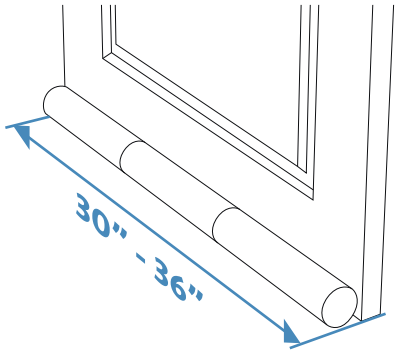

2 If there's excess foam, follow the steps below. If there's no excess foam, skip to Step 3.

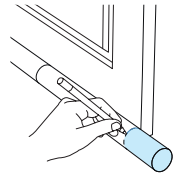


A. Use a pen or marker to mark the excess amount on the foam.

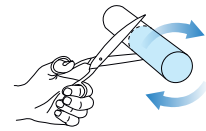


B. Use a pair of household scissors to cut the excess foam off. You may need to twist and angle the scissors to cut through the foam.

Note: Save excess foam should you wish to use the door draft stopper on a wider door.

3 Slide 3 foam tubes one after the other into each opening of the door draft stopper.

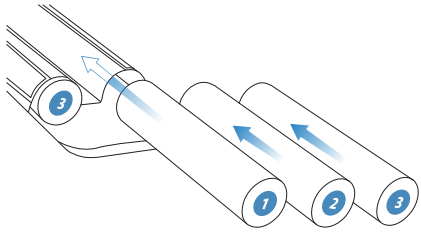


4 Fold and press down the hook-and-loop fasteners to close the opening and secure the foam tubes inside the door draft stopper.

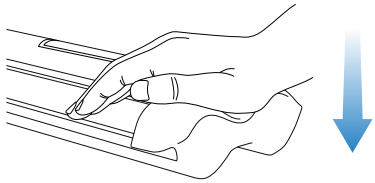


3. INSTALLATION

1 Open your door. With the folded opening first, slide the door draft stopper under the bottom edge of your door. To help guide the door draft stopper, you may need to wiggle it back and forth while sliding underneath the door.

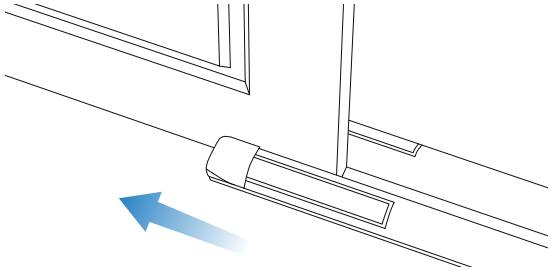

4. MAINTENANCE

1 Open the folded opening and remove all 6 foam tubes from the door draft stopper.

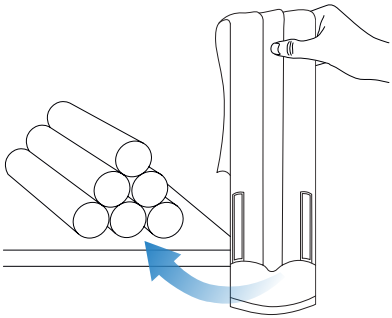

2 Machine wash cold. Dryer safe on low heat or air fluff.



IMPORTANT: DO NOT PUT FOAM TUBES IN THE WASHER OR DRYER.

TIPS

1. Keep this product away from children. This is not a toy.

2. If used on uneven surfaces such as certain carpet or exterior doors with saddles or metal thresholds, then you may experience snagging of the Door Draft Stopper when you open and close your door.

   To fix, please remove the tubes and cut them as needed to fit the shape of the floor surface. You can make vertical and horizontal cuts to the tubes and shape them to your needs. Keep adjusting until you get a snug fit on the door and reduce resistance when opening and closing.