

SKU:BS-5T-006

rologee

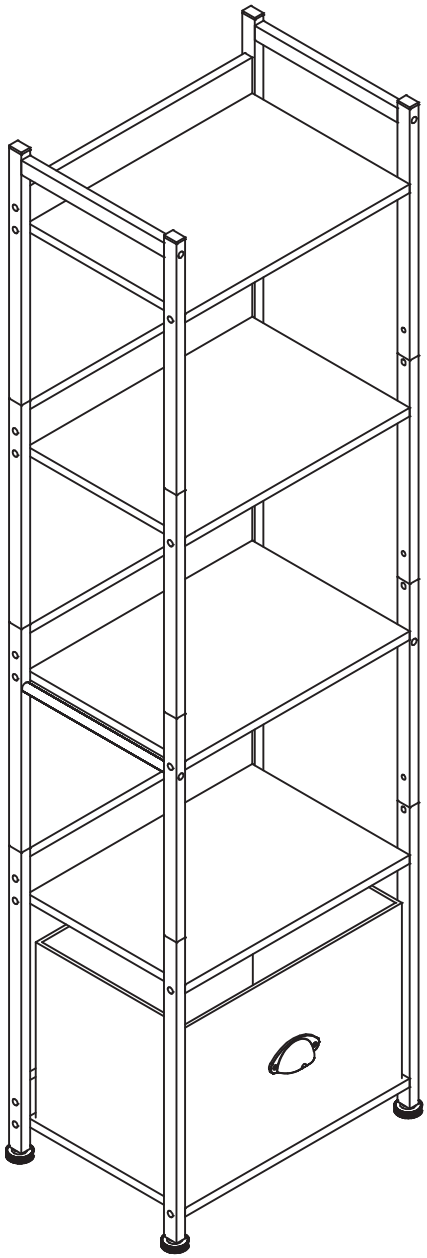

5-Tier Bookshelf with Drawer User Manual

Disassembly Diagram

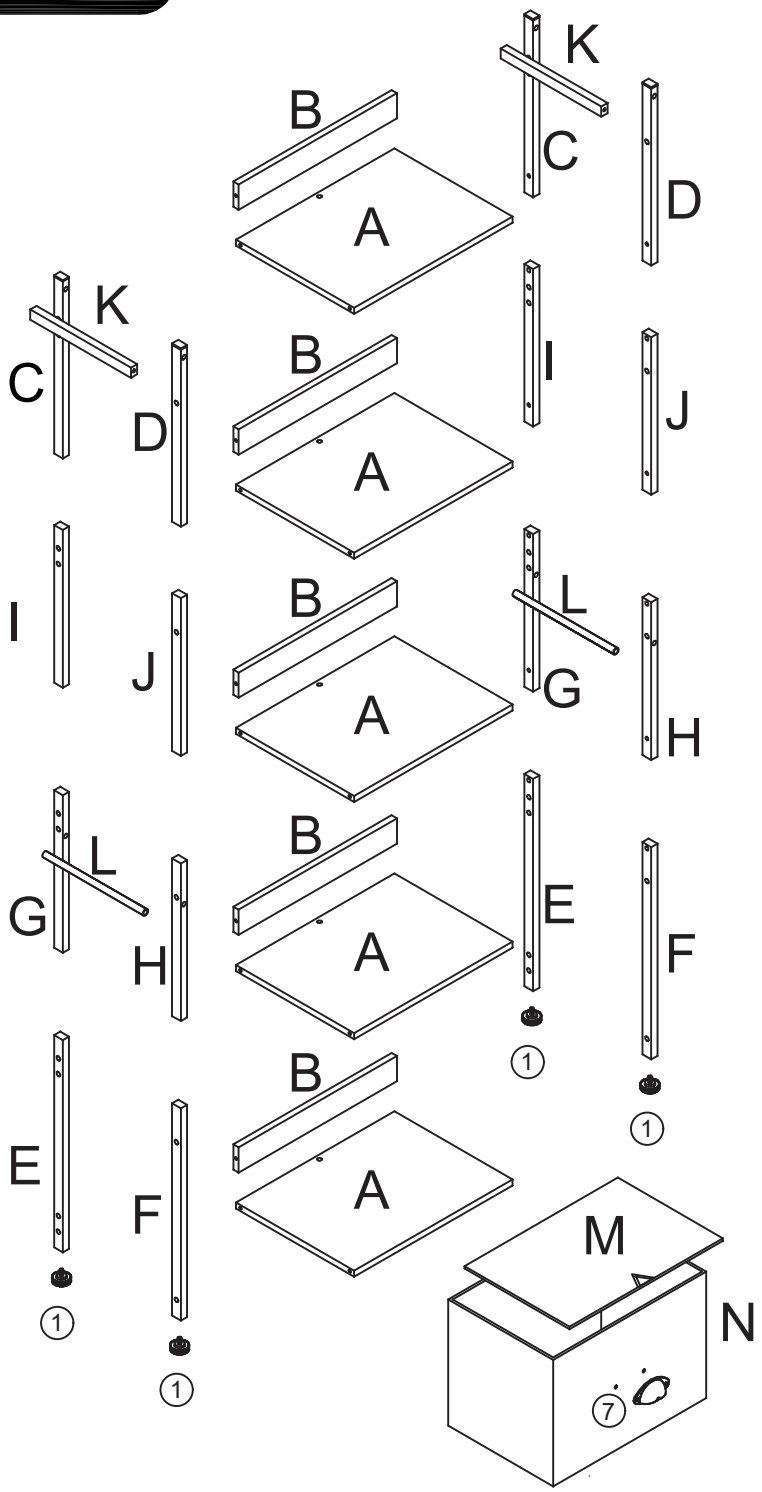

Before assembly, please read the USER MANUAL thoroughly for quick assembly, and check according to Accessories.
If you have any concerns or questions during installation or about product itself, please feel free to contact us via Amazon Orders or Customer Support Email:

Furologeeservice@sincerehl.com


Accessories




❶ 5PCS



❷ 26PCS



❸ 9PCS

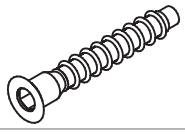

❹ 38PCS



❺ 12PCS




❻ 3PCS




❼ 1PC




❽ 2PCS




❾ 1PC

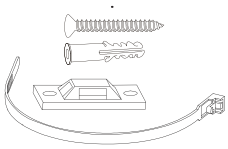

❿ 2PCS

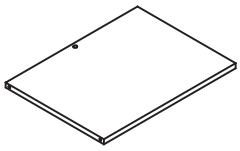

Ⓐ 5PCS

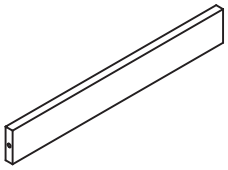

Ⓑ 5PCS



Ⓒ 2PCS



Ⓓ 2PCS



Ⓔ 2PCS



Ⓕ 2PCS



Ⓖ 2PCS




Ⓗ 2PCS



Ⓘ 2PCS




Ⓙ 2PCS




Ⓚ 2PCS



Ⓛ 2PCS

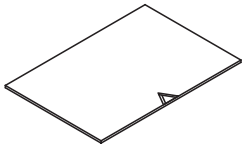



Ⓜ 1PC

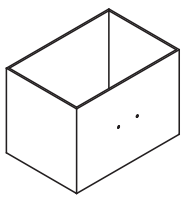


Ⓝ 1PC


Step 1: Assemble the shelf board Ⓐ and back board Ⓑ

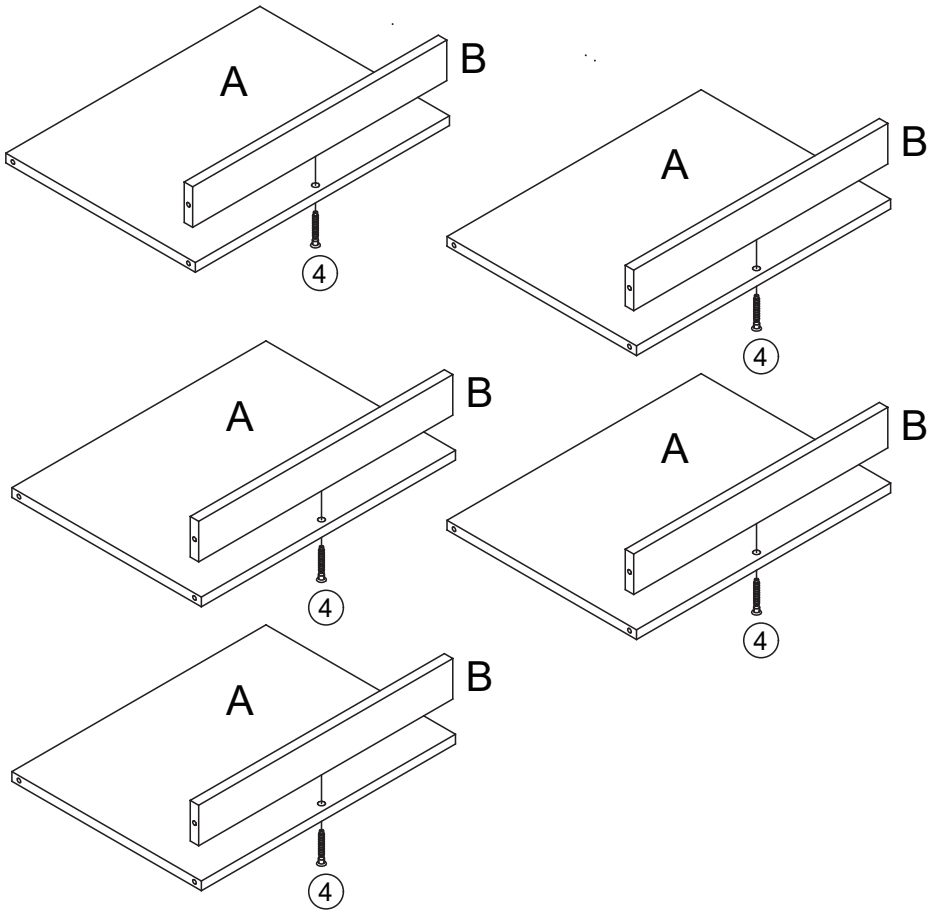

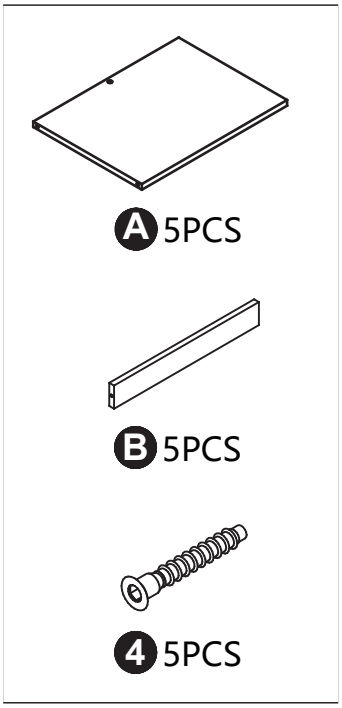



Step 2: Connect the tube Ⓓ and connectors 5

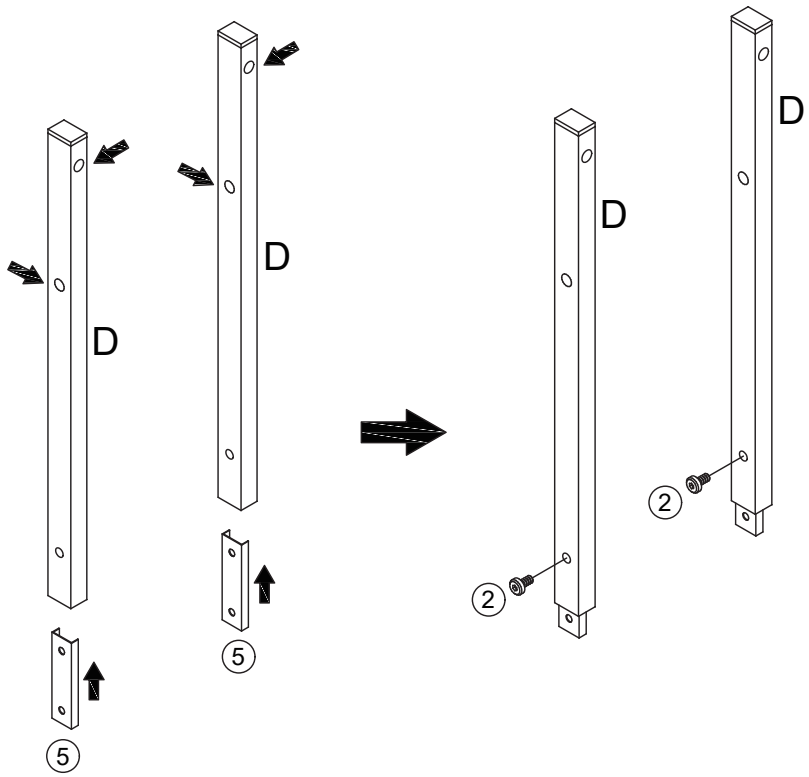

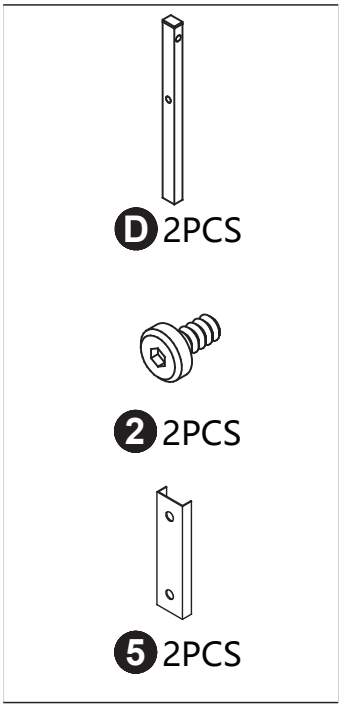



Step 3: Connect the tube D and J with connectors 5

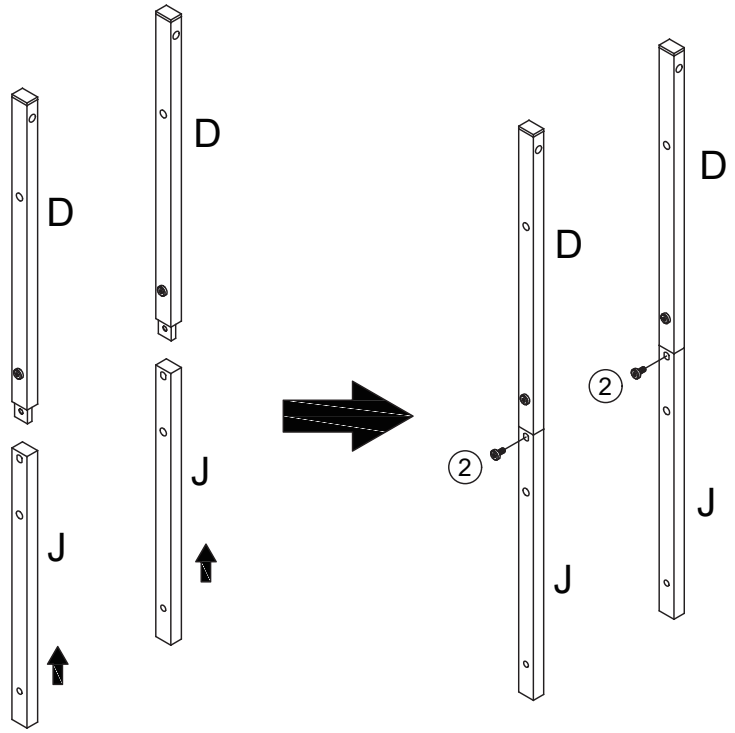

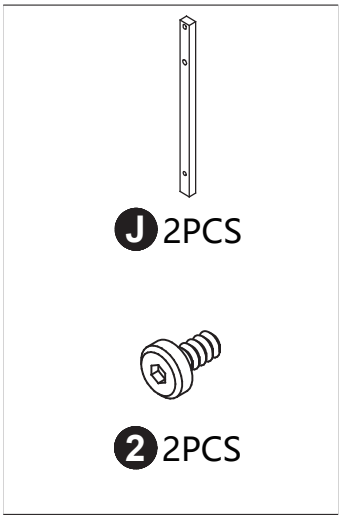



Step 4: Connect the tube J and connectors 5

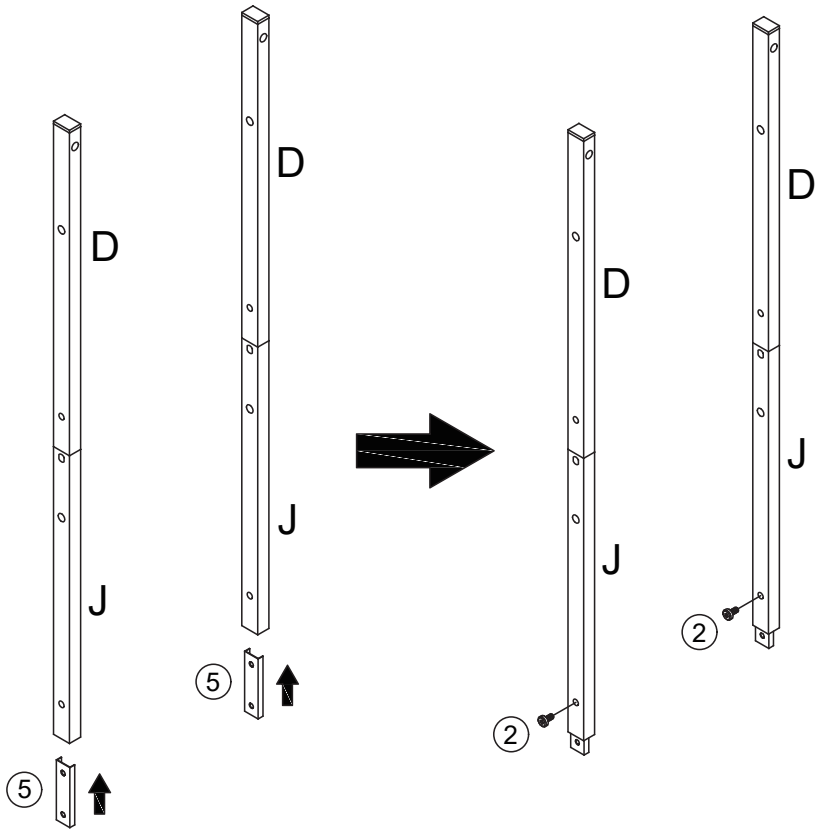

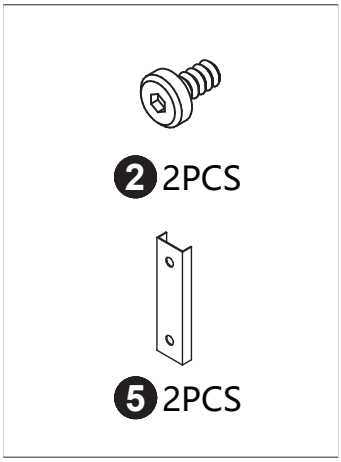



Step 5: Connect the tube J and H with connectors 5

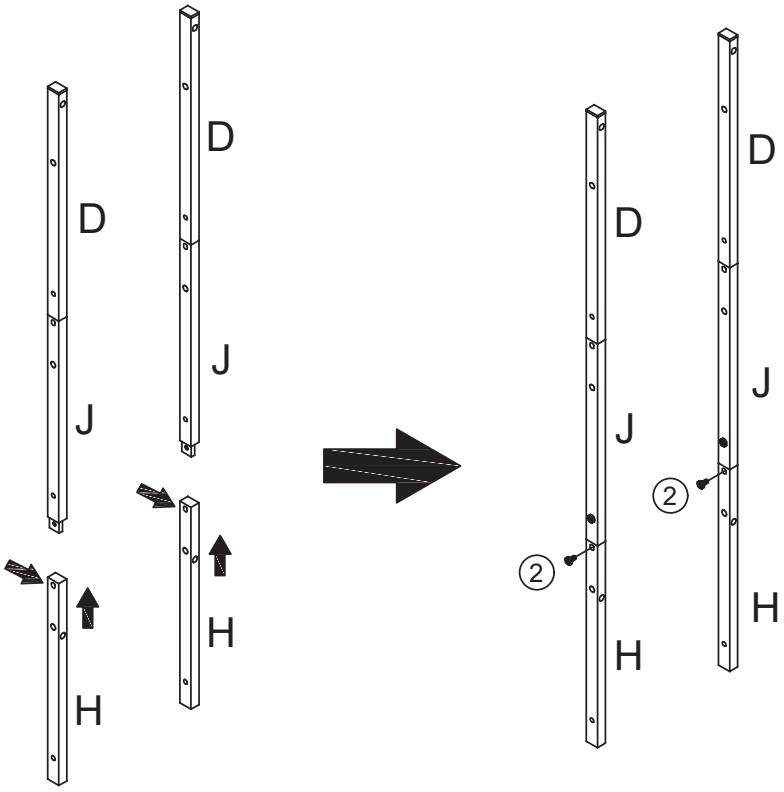

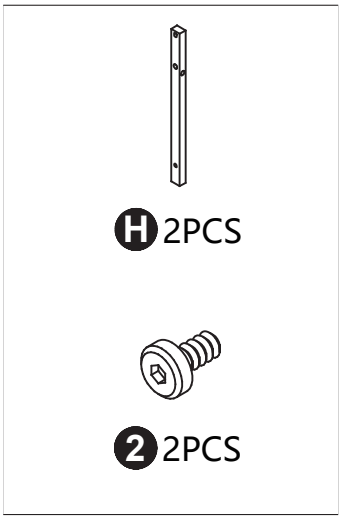



Step 6: Connect the tube H and connectors 5

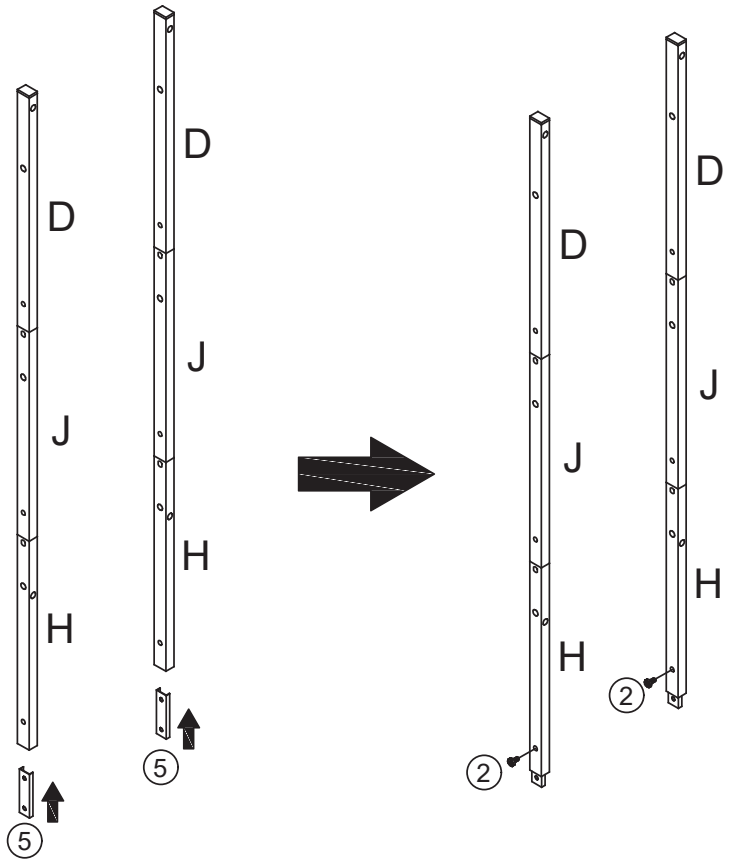

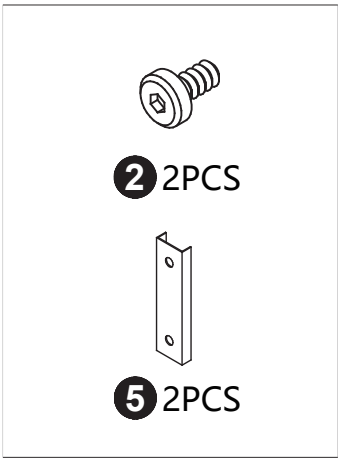



Step 7: Connect the tube H and F with connectors 5

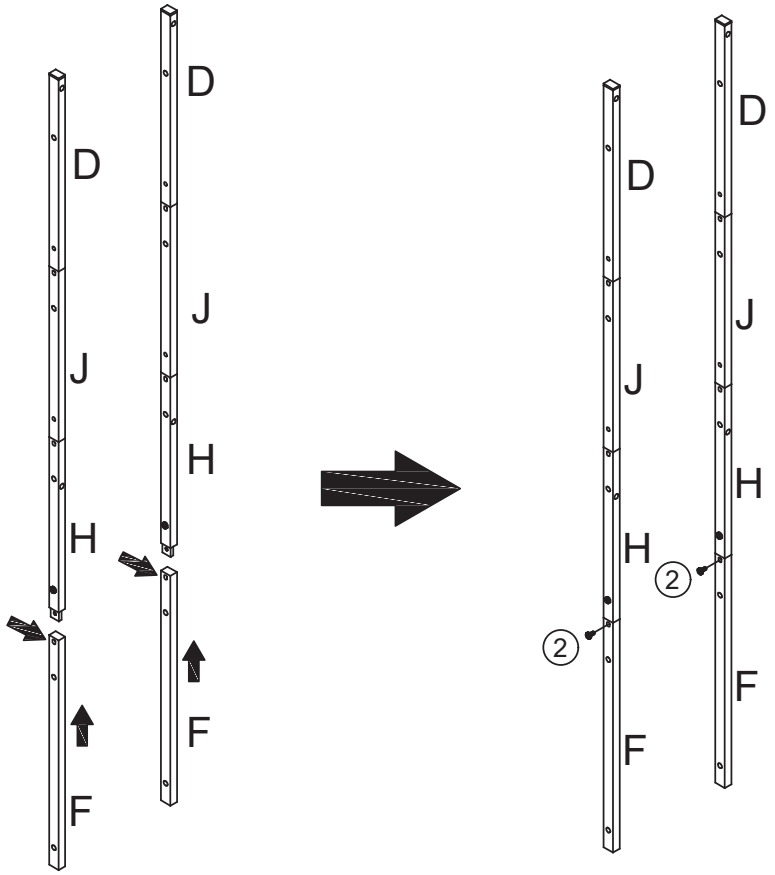

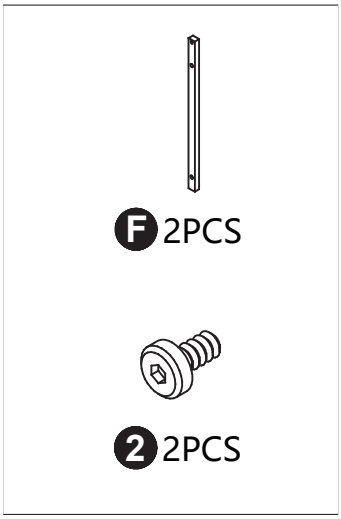



Step 8: Connect the tube C and connectors 5

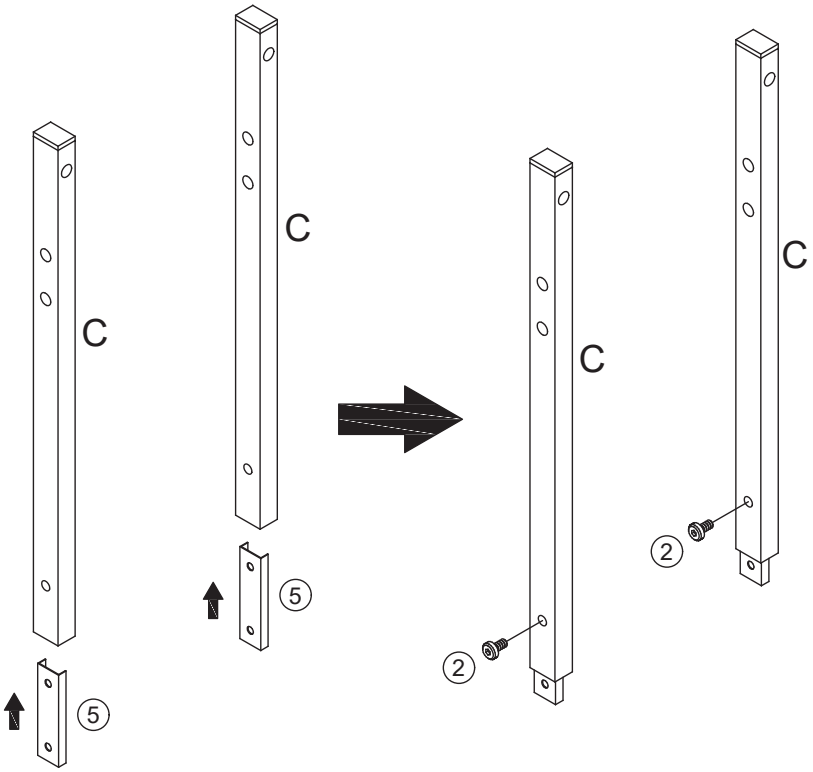

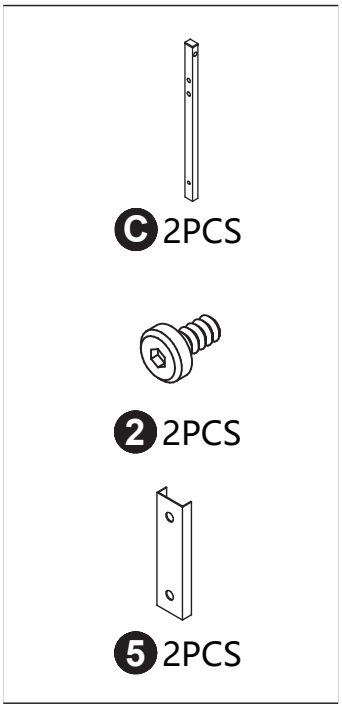



Step 9: Connect the tube C and I with connectors 5

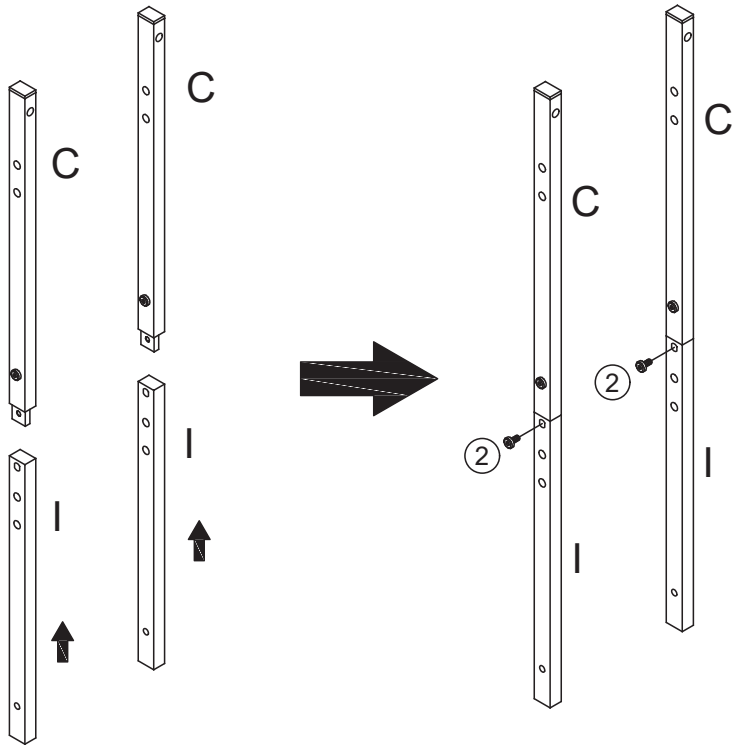

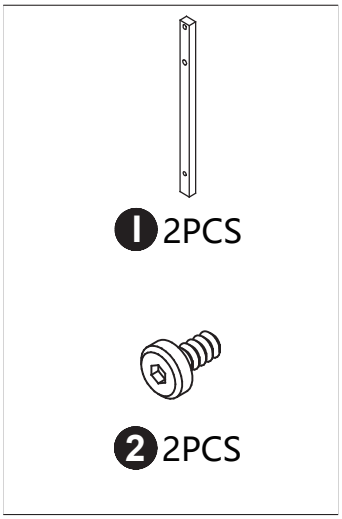



Step 10: Connect the tube I and connectors 5

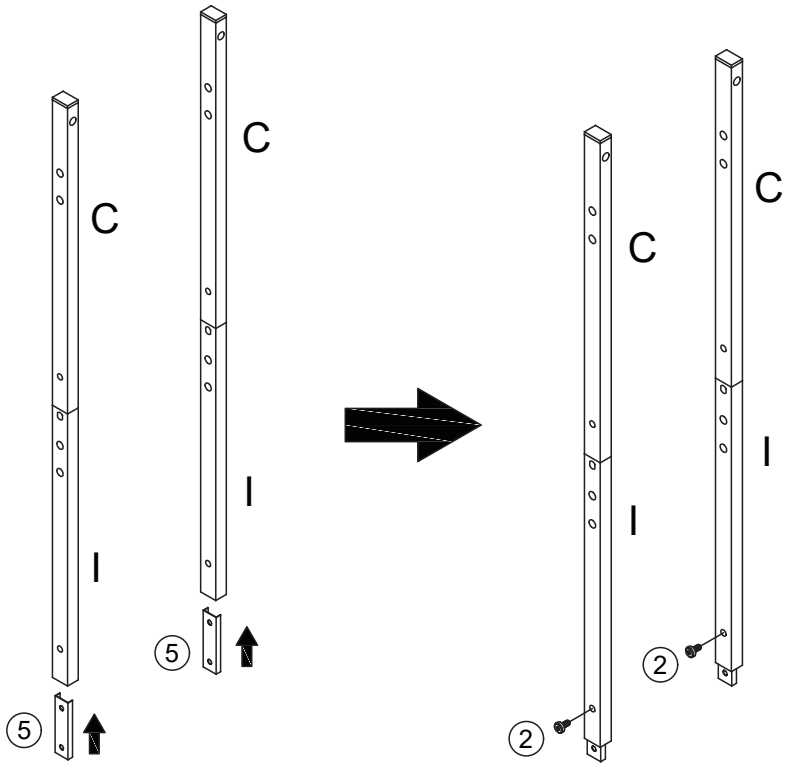

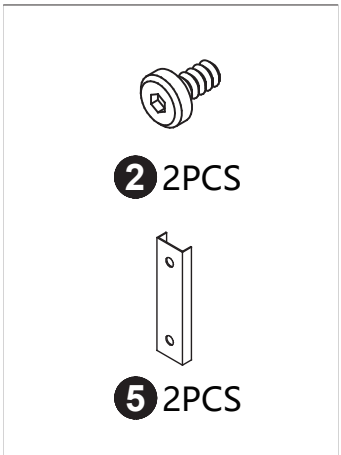



Step 11: Connect the tube I and G with connectors 5

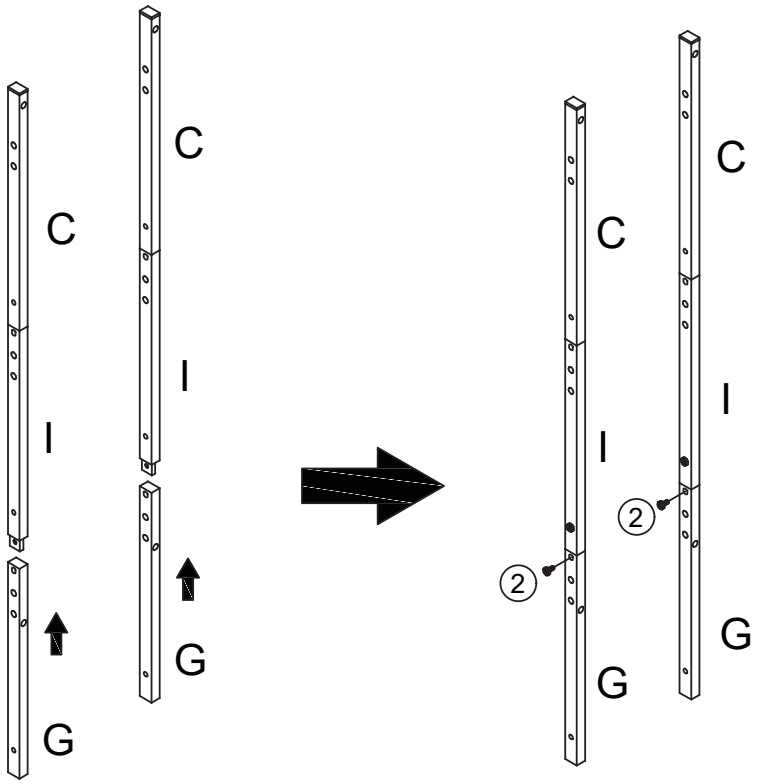

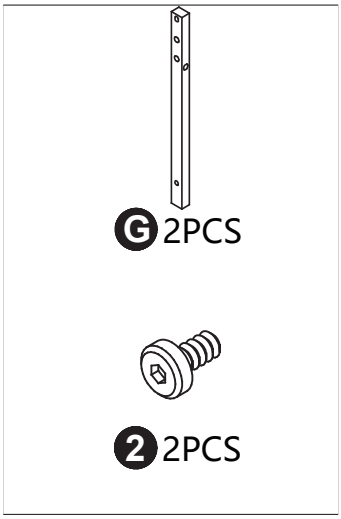



Step 12: Connect the tube G and connectors 5

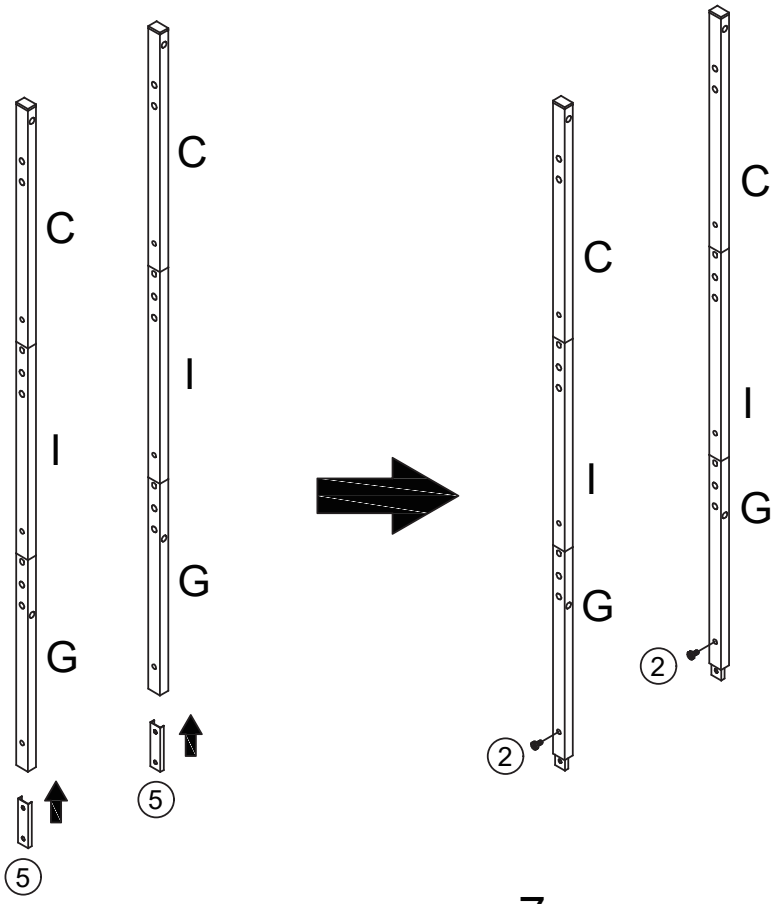

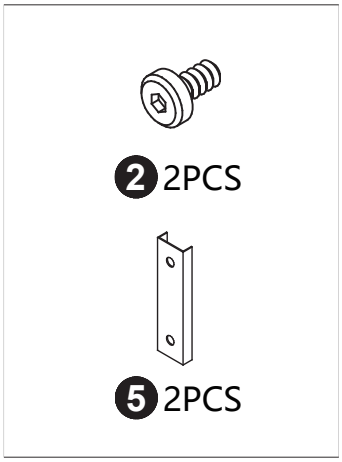



Step 13: Connect the tube G and E with connectors 5

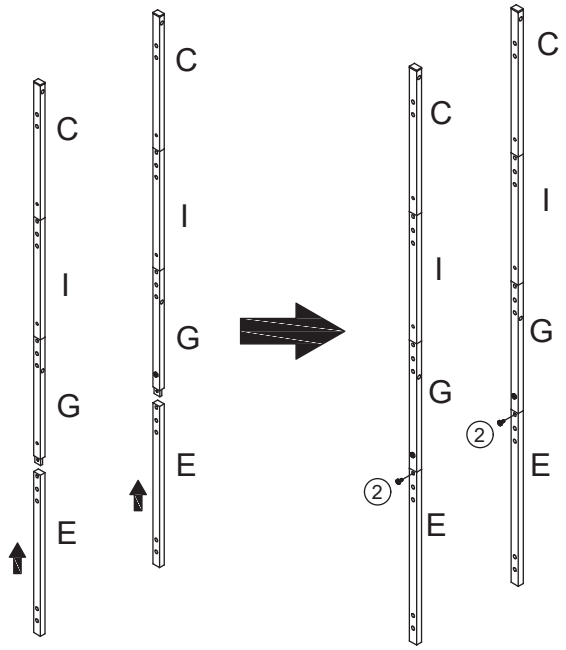

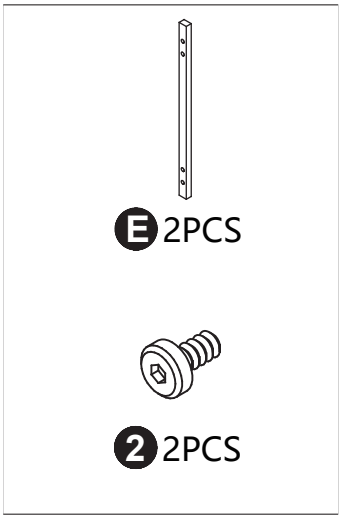


Step 14: Assemble the frame and shelf

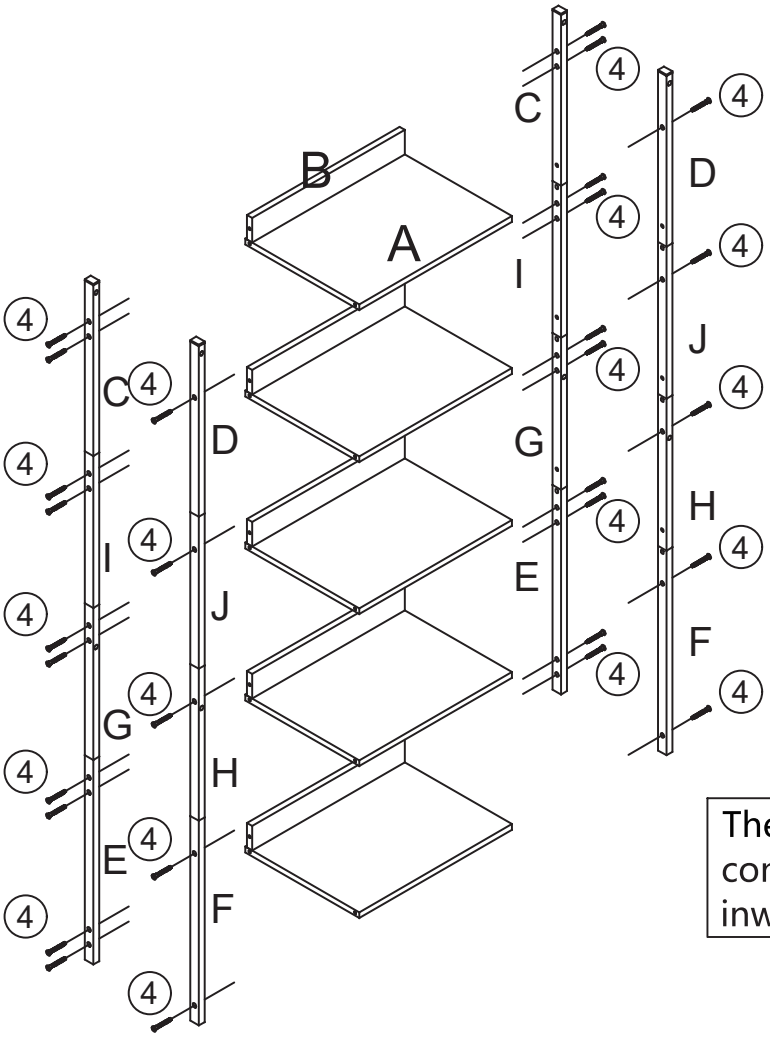


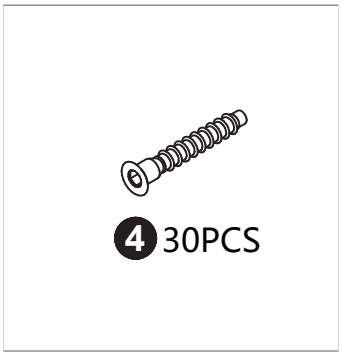

The screws at the connectors face inwards


Step 15: Assemble the adjustable feet

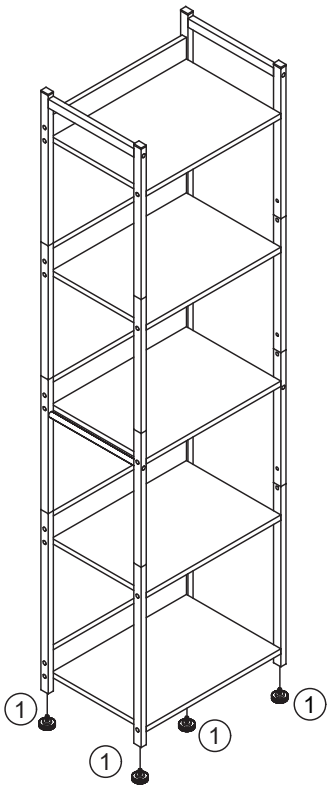





1 4PCS

Step 16: Assemble the top crossbar, Assemble tube L to make the bookshelf more stable

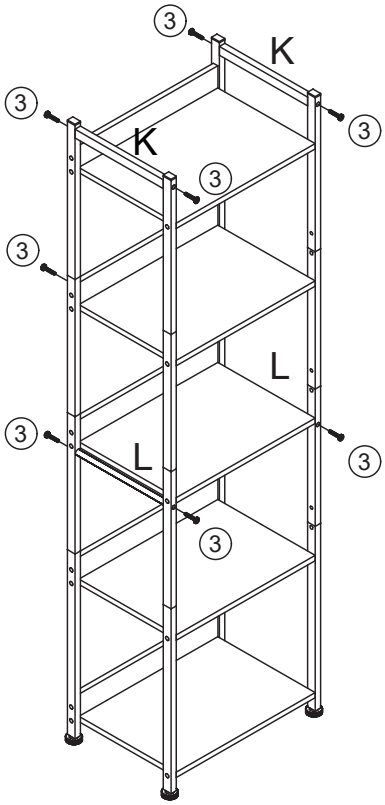


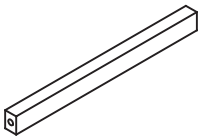

K 2PCS

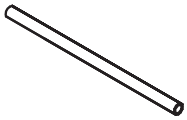



L 2PC

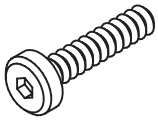


3 8PCS

Step 17: Assemble the drawer

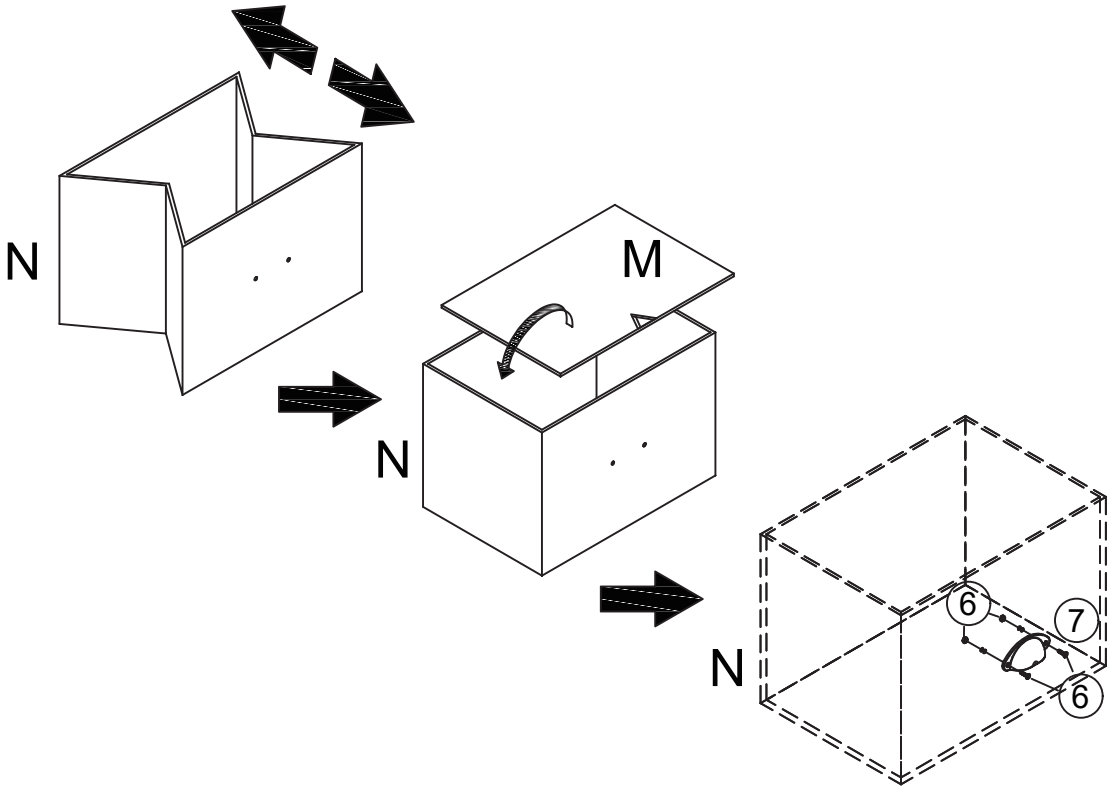


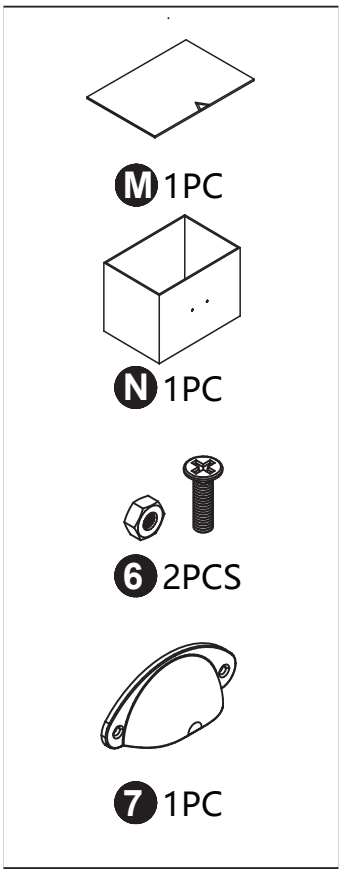



Step 18: Put in the drawer

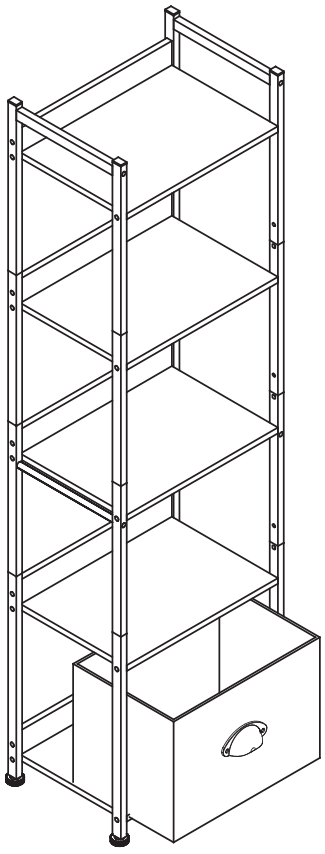

Step 19: If necessary, install the anti-tip kits

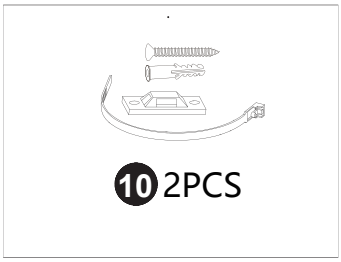

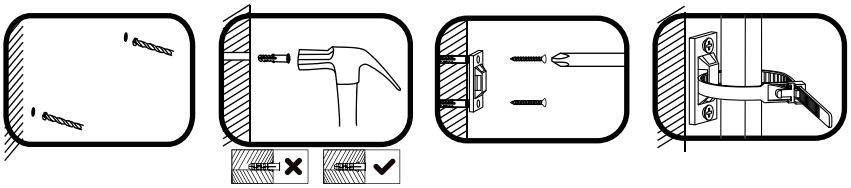

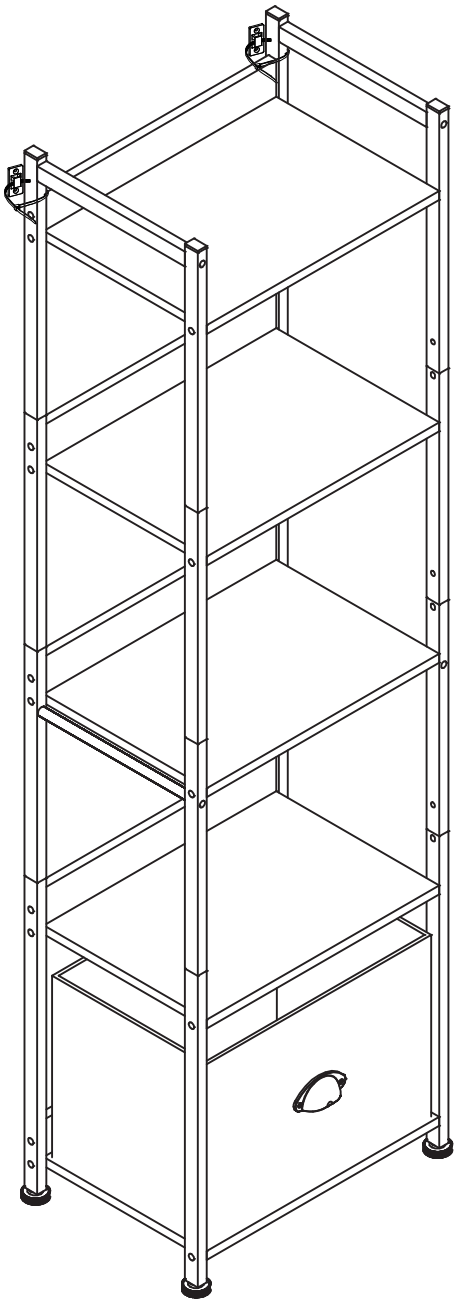

Customer Service

1-Year Warranty

We guarantee your product is free from defects in ptoduct material and work manship for one(1)year starting from the date of purchase during normal use of household conditions. If your appliance fails within the limited warranty period, we will arrange a new replacement free of charge, and cover all the shipping costs.

Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately at our support email: **Furologeeservice@sincerehl.com.**
It doesn't matter if the product has been installed, our customer support team will respond within 24 hours and assist you quickly and efficiently.
The most efficient way to confirm your problem with us is to attach a video or picture illustrating your product issue.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after -sales email:**Furologeeservice@sincerehl.com.**
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of some screw holes.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after -sales email:**Furologeeservice@sincerehl.com.**
	The screw holes that on the board and steel frame don't line up.	1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjusting board and steel frame until the screw holes are lined up,then tighten all the screws.
	The desk board is uneven or not tight that has gaps after being assembled.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after -sales email:**Furologeeservice@sincerehl.com.**
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after -sales email:**Furologeeservice@sincerehl.com.**
	The table is unstable after being assembled.	1.Check if the screws are tightened. 2. Read through out the manual, check are there any parts insalled incorrecly or missing assembled. 3. If your problem still an't be solved,please feel free to contact us.

If you can't finish the installation, please feel free to contact us via Amazon or Email：**Furologeeservice@sincerehl.com**