EUREKA FORBES
Your friend for life

FORBES
Clean Home. Healthy Family.




# Easy Clean

**Daily Use Vacuum Cleaner with Blower & Suction**

USER MANUAL

FORBES
Easy Clean

Dear Customer,

Congratulations on your choice of cleaning help and welcome to the happy family of over 2.5 million satisfied owners of Eureka Forbes Vacuum Cleaners.

We always endeavour to bring to you technologically superior appliances, designed to let you live life on your terms.

Forbes Easy Clean, a multi-purpose, power-packed, daily use vacuum cleaner gives you immense cleaning power. Its high suction and amazingly low power consumption makes it an ideal cleaning device.

To always ensure the optimal functioning and performance of your product, we would like to advise the following:

1) Before using the appliance for the first time, carefully read the operating and safety instructions and adhere to these at all times.

2) In case you pass on this product to someone else, please ensure that you hand over the user manual along with it.


Should you have any further question, visit www.eurekaforbes.com or for any assistance you can be rest assured that we are just a call away.

Happy Cleaning.



# INDEX


| | |
|---|---|
| 1. Making you Familiar with Forbes Easy Clean | 3 |
| 2. How to Use Forbes Easy Clean | 4 |
| 3. Getting Started with Forbes Easy Clean | 5 |
| 4. Cleaning and Maintenance | 7 |
| 5. Precautionary Measures | 8 |
| 6. General Safety Instructions | 9 |
| 7. Troubleshooting | 10 |
| 8. Technical Specifications | 11 |
| 9. Warranty and Post-warranty | 14 |

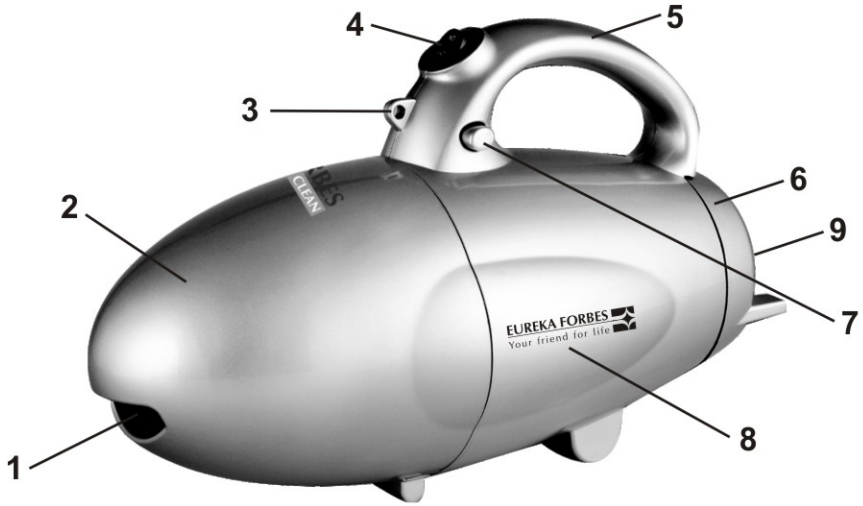


1. SUCTION END
2. DUST CUP
3. SHOULDER STRAP EYELET
4. ON / OFF BUTTON
5. HANDLE
6. REAR FILTER COVER
7. DUST CUP RELEASE BUTTON
8. HOUSING
9. BLOWER END

⚠ Always turn off and unplug the vacuum cleaner before performing maintenance or cleaning.

## ACCESSORIES FOR DAILY CLEANING

1. Flexible Hose: Gives you the flexibility to reach hard-to-clean areas.
2. Multi-purpose Brush: For cleaning corners, crevices, table tops and window grills.
3. Accessory Adapter / Nozzle: Helps you connect other accessories to your Easy Clean and can be used to pick up dust directly as well.
4. Upholstery Brush / Nozzle: For cleaning sofas, mattresses, pillows, cushions and curtains.
5. Floor and Carpet Brush: For cleaning hard floor surfaces as well as tough-to-clean carpets with same efficiency.
6. Shoulder Strap: Gives you flexibility in cleaning without holding the vacuum cleaner in your hand.
7. Blower Adapter: Helps you to use blower end.




Be sure the power switch is in the off position before adding or removing attachments. Accessories can be attached by siphon and extension tube.

## 1. SUCTION END

Accessories for daily cleaning

- To use the vacuum to clean, simply insert the desired accessory into the air intake and press the ON / OFF button to switch ON. (As per fig. i)
- To use the flexible hose to clean, attach the adapter to the hose end and insert the hose into the air intake. Insert the desired accessory into the other end of the flexible hose. (As per figs. ii-a, b & c)



fig. i



fig. ii - a



fig. ii - b



fig. ii - c

## 2. BLOWER END

- To use the blowing function, first remove the rear filter cover and replace it with the blower adapter. (As per figs. i - a & b)



fig. i - a



fig. i - b

- Insert the flexible hose into the blower adapter and attach the desired accessory.

  Press the ON / OFF button to switch the appliance ON. (As per fig. ii)



fig. ii

- The shoulder strap can be used when using either the cleaning or blowing function. (As per fig. iii)

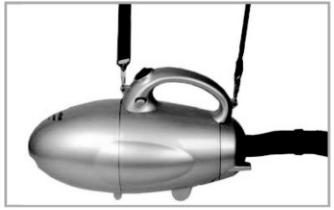


fig. iii

## CLEANING THE FILTER

The dust cup should be emptied and the filter should be cleaned after each use, or at least on a monthly basis. To do so, the following steps should be followed.

1. Press the dust cup release button to remove the dust cup and filter assembly from the main body of the vacuum cleaner. Additionally, remove the small sponge motor filter.
2. Remove the main filter from the housing.
3. Tap the loose dust away from both filters.
4. Rinse using water.
5. Keep all parts in free air to dry.
6. When completely dry, reassemble the filter and dust cup and replace the motor filter. Reattach the assembly to the main body.





## PRECAUTIONARY MEASURES

- Never operate the appliance without the dust filter and dust cup in their correct position. Always make sure that the appliance is not connected to any power supply when performing any cleaning or maintenance activities.
- Always ensure that both filter and dust cup are totally dry before placing them in the appliance. Always unplug the appliance from the main supply socket after use and before cleaning.
- The filters must be replaced immediately if they become damaged.
- A damaged power cord must only be replaced by an authorised service agent.
- Clean only with a dry or slightly damp cloth when disconnected from the power supply. Never immerse in water.
- The plug connectors must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture must touch them. (Danger of electric shock).

# GENERAL SAFETY INSTRUCTIONS

FORBES Easy Clean

When using an electrical appliance, basic safety precautions should always be taken, including the following:
WARNING: To reduce the risk of fire, electrical shock or injury.
READ ALL INSTRUCTIONS BEFORE USING YOUR FORBES EASY CLEAN

1. Do not leave the appliance when plugged in. Unplug from outlet when not in use.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this user manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped in water. Return it to an authorised service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
7. Do not run the appliance over cord. Keep cord away from heated surfaces.
8. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
9. Do not handle the plug or the appliance with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Turn off the control before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Look on your vacuum cleaner and follow all label and marking instructions.
17. Keep end of hose, wands and other openings away from your face and body.
18. Do not use the vacuum cleaner without dust cup in place.
19. Do not use the product during voltage fluctuations.
20. Do not use the product when there is heavy lightning and thunder.
21. Always unplug this appliance before connecting or disconnecting vacuum cleaner hose.
22. Store the vacuum cleaner indoors. Put the vacuum cleaner away after use to prevent tripping accidents.
23. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
24. Use only on dry surfaces.
25. Do not use for any purpose other than described in this user manual.
26. If the vacuum cleaner is damaged, it must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

| Problem | Possible Cause | Possible Solution |
|---|---|---|
| The appliance does not switch on | 1. Power cord not firmly plugged into socket.<br>2. No power in the main supply. | 1. Plug the unit firmly.<br>2. Check fuse or cut out switch. Replace fuse/reset the switch.<br>3. Take it to the authorised service centre. |
| The appliance has weak suction power | 1. Dust cup is full.<br>2. Unit clogged.<br>3. Dust cup needs cleaning. | 1. Empty dust cup.<br>2. Turn unit off and unplug from wall socket. Remove dust cup and check for object(s) in air duct and remove.<br>3. Clean or replace dust cup. |
| The dust escapes from the appliance | 1. Dust cup is full.<br>2. Dust cup is not installed correctly.<br>3. Puncture/ Hole in dust cup. | 1. Empty dust cup.<br>2. Review dust cup instructions.<br>3. Replace dust cup. |
| The hose or brushes do not pick up | 1. Hose clogged.<br>2. Dust cup is full. | 1. Remove hose and/or brushes. Remove obstruction from hose.<br>2. Empty and clean dust cup. |
| Heat produced during use. | A small amount of heat is normally produced by the vacuum cleaner during use. | |

| | |
|---|---|
| Voltage | 230 V AC, 50 Hz |
| Input Power* (IEC) | 800 W |
| Suction of Motor* | 1600 mm of WC |
| Net Weight of the unit | 1.8 kg |
| Dimensions (LxWxH) in mm | 250 mm x 126 mm x 175 mm |

*At mean sea level (MSL) (All figures are nominal values)

Note: Due to continuous Research & Development in Eureka Forbes Ltd., features and technical specifications mentioned may vary without prior notice. Product and images are representative visuals only and may vary state to state

## WARRANTY

FORBES Easy Clean

Forbes Easy Clean Vacuum Cleaners are warranted against defects arising out of faulty design, workmanship and materials, for a period of 12 months from the date of the invoice, subject to the following conditions:

1. The customer will notify the company promptly about any defects noticed and give the company or its authorised dealer sufficient opportunity to inspect, test and remedy them, for which the customer will deposit the goods, if necessary, with the company's office / service centre along with the original invoice, in the city where they are sold.
2. Inspection and test report of the company's office / service centre will be treated as final and binding under the warranty for determining defects, repairs / alterations required or carried out, or certifying working of the goods thereafter.
3. The company or its authorised dealer will be entitled to retain any defective parts replaced under the warranty.
4. The company's liability under the warranty will be limited only to defects which occur under the conditions of normal operation and under proper use. It excludes defects occurring because of abuse, faulty care or maintenance, repairs / alterations to goods or parts by others, use on electrical supply for which the goods are not designed or to damage caused by lightning or other electrical disturbances.
5. Components subject to wear, such as flexible cable, carbon brushes and accessories, are not covered by this warranty.
6. The customer will have no claim under this warranty in respect of any personal injury, damage to property or consequential damages, or for utilisation of the goods not in accordance with the user manual.

Note : The undernoted expressions should have the following meanings:

'The goods' shall mean goods described in the purchase agreement.

'The Customer' shall mean the original purchaser under the purchase agreement.

'The company' shall mean 'EUREKA FORBES LIMITED'.

NB: For registration of the warranty, please fill in the details in the warranty card and mail the same to Eureka Forbes Limited.

## POST-WARRANTY

1. The Customer may be offered a yearly Service Contract at the prevailing Company rates and terms.
2. In case the Customer does not wish to enter the Service Contract, he has the option of calling our Service Centre and having his Forbes Easy Clean serviced on an actuals basis i.e. by paying for labour cost and spares needed to attend to that Service / Complaint call at the prevailing company rates. Such service will be rendered by the Company in towns / places where the company has its Service Centres.

# AquaSure™

from

Aquaguard

## BRING HOME THE MOST PRECIOUS GIFT... *Health!*




RO + UV
MRP ₹ 16,999/-




Nano RO
Water Purifier
MRP ₹ 9999/-




Smart
UV Water Purifier
MRP ₹ 7499/-




Marketed and Serviced by:

EUREKA FORBES LIMITED

B-1/B-2, 701, 7th Floor, Marathon Innova, Marathon NextGen, Off Ganapatrao Kadam Marg, Lower Parel, Mumbai-400 013.

Tel: 022 30449700, 30449888 Fax: 022 30449701, www.eurekaforbes.com