Keychron

C0 HE 8K Magnetic Switch Keypad


IN THE BOX:

Keychron C0 HE 8K Magnetic Switch Keypad x 1
Type-A Cable x 1
Keycap & Switch Puller x 1
Manual x 1

Quick Start Guide

1 The Keypad's default layout is configured for Windows. To use it with macOS, please remap it using Launcher web app.

Windows

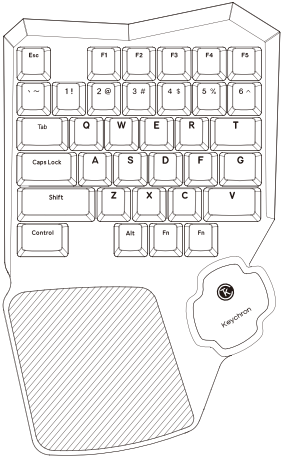


2 The Keychron Launcher App

Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher can not recognize your keypad, please reach our support to get the instructions.


*The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.

3 The Backlight

Press Fn + Q to change the lighting effect

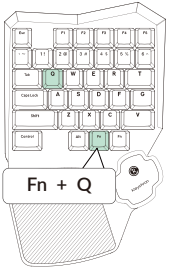


Press Fn + Tab to turn the backlight on/off

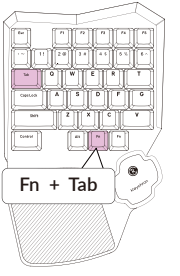


4 Adjust The Backlight Brightness

Press Fn + W to increase the backlight brightness

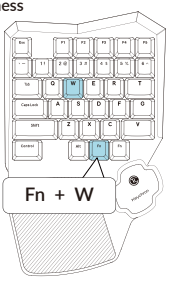

Press Fn + S to decrease the backlight brightness

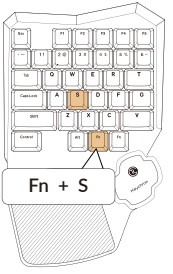


5 FN Key Combinations Description

Combination	Function
Fn+F1	Brightness Down
Fn+F2	Brightness Up
Fn+F3	Task View
Fn+F4	Print Screen
Fn+F5	Cortana

Combination	Function
Fn+1	7
Fn+2	8
Fn+3	9
Fn+4	0

6 Factory Reset & Firmware Update

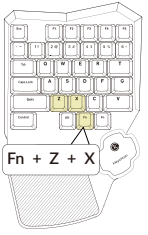

Troubleshooting? Don't know what's going on with the keypad?

Factory reset your keypad

1. Power on your keypad.
2. Press and hold Fn + Z + X (for 4 seconds). The keypad backlight will flash in red quickly for 3 seconds, indicating that the keypad has been reset.

Flash your keypad firmware


1. Visit launcher.keychron.com to open the online Launcher web app.
2. Plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keypad with it.
4. Follow the instructions on the Launcher and complete the firmware update.


*Step-by-step guide, search the keyword "firmware" on keychron.com.

C0 HE 8K MAGNETIC SWITCH KEYPAD SPECIFICATIONS

Specifications					
Key	35 key	Length	245.1 mm	Keyboard feet height	1.3 mm
Switch type	Magnetic	Height	39 mm	Wire Length	1.8 m
Width	149.4 mm				

C0 HE 8K MAGNETIC SWITCH KEYPAD OVERVIEW

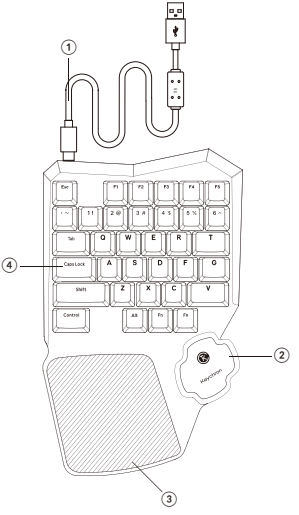


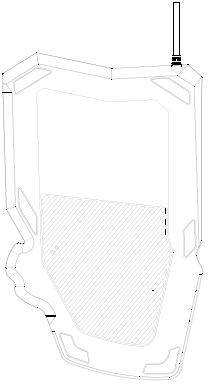


① Type-A Cable
② Space Button
③ Palm Rest
④ Caps Lock Indicator

DEFAULT KEY LAYOUT:


LAYER 0: This is the default layer.

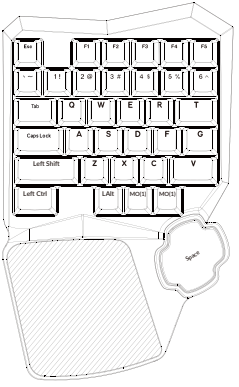

LAYER 1: This layer will be activated when you press the Fn/MO(1) key.

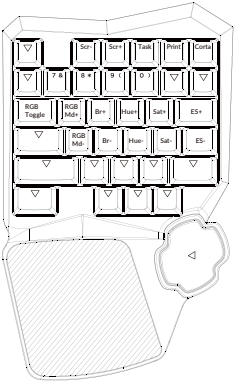

LAYER 2/LAYER 3：This is a blank layer.

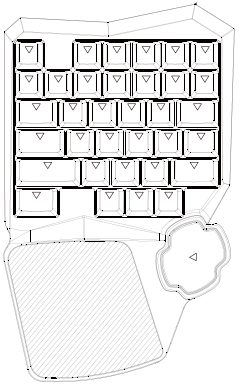

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGB Md+	RGB Mode Next	ES-	RGB Speed Decrease
Scr+	Screen Brightness Increase	RGB Md-	RGB Mode Previous	MO(1)	Layer 1 will be activated when holding this key
Br-	Backlight Decrease	Hue+	Hue Increase	Sat+	Saturation Increase
Br+	Backlight Increase	Hue-	Hue Decrease	Sat-	Saturation Decrease
RGB Toggle	Turn Backlight on/off	ES+	RGB Speed Increase	Task	Task View

LED STATUS OVERVIEW

Function	LED Location	Status
Caps Lock	Caps Lock Indicator	Enable Caps Lock - Static White Disable Caps Lock - Light Off

BACKLIGHT SETTING

- Short press key combination “Fn” +“Tab” turn the backlight on/off.
- Short press key combination “Fn”+“Q” or “Fn”+“A” to switch between types of lighting effects.

PROFILE SWITCHING IN HALL EFFECT MODE

Short press Fn + 6 + Z / X / C to switch to Profile Default / Gaming / Gamepad. The keypad backlight will flash red, with the Z / X / C key flashing white, indicating that the Hall Effect mode profile has been successfully switched.

The key combination for each Profile is configarable on the Launcher web app: open the app > go to Keymap > Custom > select the button Default / Gaming / Gamepad > drop it on the key you want on Layer 0 / 1 / 2 / 3.

POLLING RATE SWITCHING

Short press Fn + 5 + Z / X / C to switch keyboard polling rate to 1K / 4K / 8K Hz. The keypad backlight will flash BLUE / GREEN / RED for 3 times, indicating that the keypad polling rate has been successfully switched.

*Backlight Blue = 1K Hz Polling Rate; Backlight Green = 4K Hz Polling Rate; Backlight Red = 8K Hz Polling Rate.
*More polling rate setings can be configured on Keychron Launcher web app.

Third-party input tools are not compatible with the keypad.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keypad. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.
Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

Safety Precaution:
Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.
Always keep the product dry to avoid corrosion.
Do not expose the product to extreme temperatures below -10°C (14°F) or above 50°C (122°F) to preserve the lifespan of the keypad and battery.

Keychron, Inc.
Dover, DE 19901, United States
Find us at:
https://www.keychron.com
support@keychron.com
@keychron
@keychron
@keychronMK
Designed by Keychron
Made in China