




PRO

powered by BRAUN

500-3000

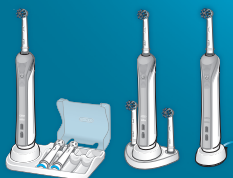

Charger Type 3757
Handle Type 3756



91283907



가까운 피씨에스원코리아 서비스센터에서
A/S를 받으실 수 있습니다.

(KR) 1577-8027

If you should require further
assistance, please call our
Consumer Service line.

Internet:

www.oralb.com

www.oral-b.co.kr















www.braun.com

www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

Charger type 3757
Handle type 3756

91283907/III-17
Korea/GB

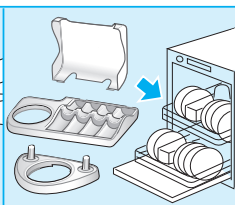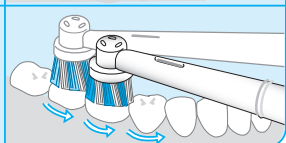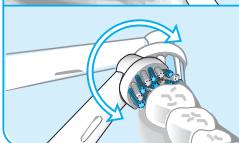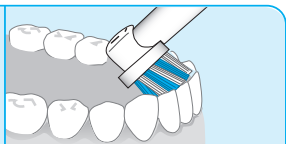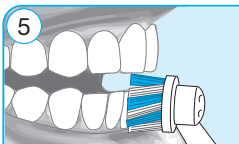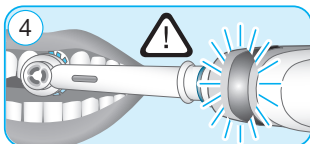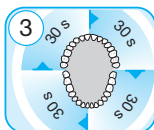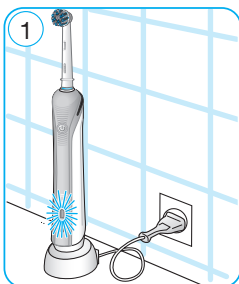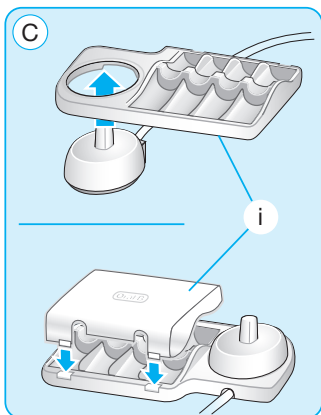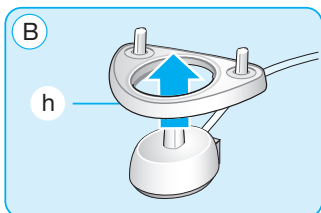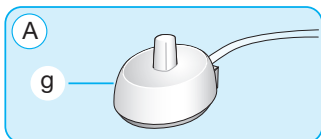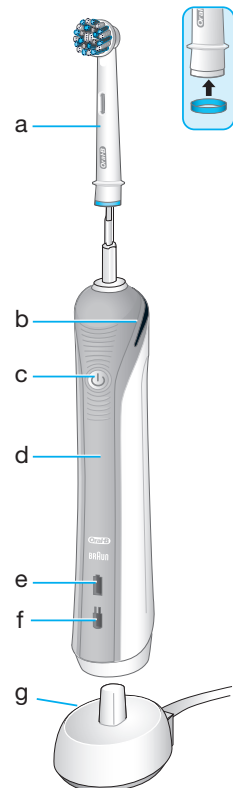

한국어

오랄-비 전동칫솔은 여러분과 여러분의 가족이 특별한 칫솔질을 경험하도록 세심하게 디자인된 안전하고 효율적인 제품입니다.

중요사항

- 전반적인 전기 코드의 손상 여부를 정기적으로 확인하십시오. 전기 코드가 손상되었을 경우, 충전기를 오랄-비 서비스센터에 가져가십시오. 손상되거나 작동하지 않는 장치는 더 이상 사용하지 마십시오. 제품의 어떤 부분도 변경하거나 조작하지 마십시오. 이는 화재, 감전, 혹은 부상을 초래할 수 있습니다.
- 만 3세 이하의 어린이가 사용하도록 제작되지 않았습니다. 어린이나 육체적, 정신적, 지각상의 장애를 겪고 있거나 사용 경험이나 지식이 부족한 사람은 보호자의 관리 감독 및 안전한 기기 사용을 위한 지도를 받은 경우, 그리고 관련 위험을 이해한 경우에만 전동칫솔을 사용할 수 있습니다.
- 어린이가 직접 세척하거나 관리하지 않도록 합니다.
- 어린이가 가지고 놀지 않도록 지도가 필요합니다.
- 제품은 이 설명에 명시된 목적에만 사용하십시오. 제조자의 추천이 없는 부품은 절대 사용하지 마십시오.

주의사항

- 제품이 바닥에 떨어졌을 경우, 눈에 보이는 손상이 없더라도 다시 사용하기 전에 칫솔모를 교체하십시오.
- 충전기를 물 또는 액체 안이나 욕조 또는 세면대와 같이 쉽게 빠질 수 있는 장소에 놓지 마십시오. 물에 빠뜨린 충전기를 꺼내기 위해 손을 넣지 마십시오. 물에 빠진 즉시 코드를 뽑아 주십시오.
- 배터리 폐기를 위해 배터리를 꺼내는 경우를 제외하고는 제품을 분해하지 마십시오. 배터리 폐기를 위해 배터리를 꺼내는 경우, 배터리의 양극(+)과 음극(-)에 의한 누전이 일어나지 않도록 주의하십시오.
- 플러그를 뽑을 때는 항상 코드가 아닌 파워 플러그를 잡고 빼십시오. 젖은 손으로 파워 플러그를 만지지 마십시오. 전기 충격을 일으킬 수 있습니다.
- 구강 관련 질환으로 치료를 받고 있는 경우, 제품 사용 전 전문가와 상담하시기 바랍니다.
- 본 제품은 개인위생용 기구입니다. 다수의 환자를 대상으로 한 치과 시술이나 기관에서 공동 사용으로는 적합하지 않습니다.
- 3개월마다 혹은 칫솔모(헤드)가 손상, 마모된 경우 즉시 교체하시기를 권장합니다.

각 부의 명칭

- a 칫솔모(모델에 따라 다름/교체 가능)
- b 압력센서등(모델에 따라 다름)
- c On/Off 버튼(모드 선택기능)
- d 전동칫솔 핸들
- e 충전 표시등
- f 저충전 표시등
- g 충전기
- h 칫솔모 홀더(모델에 따라 다름)
- l 커버 형 칫솔모 보관함(모델에 따라 다름)

세부사항

전압사항은 충전장치 하단을 참조하세요.
소음 레벨 : ≤65 dB(A)

전원연결 및 충전

이 전동칫솔의 손잡이는 생활방수 기능이 있어 전기적으로 안전하게 욕실에서 사용할 수 있도록 설계되었습니다.

- 기본 충전기(g)를 전원에 연결하거나 조립된 충전부(그림 B/C 참조)를 전원 콘센트에 연결한 후, 전동칫솔 핸들(d)을 충전기에 꽂으십시오.
- 핸들이 충전되는 동안 초록색 충전 표시등(e)이 깜빡거립니다. 완전히 충전되면 표시등은 꺼집니다. 완전 충전은 약 22시간 정도 소요되며, 완전 충전 후에는 약 7일 동안 사용 가능합니다(하루 2번, 2분 동안 사용 시)(그림 1 참조).
- 알아두기 : 방전된 후에는 충전 상태 표시등이 바로 깜빡이지 않을 수 있습니다; 약 10-15분 정도 소요될 수 있습니다.
- 배터리 충전 정도가 낮을 경우, 전동칫솔의 전원을 켜거나 끌 때, 저충전 표시등(f)이 빨간색으로 수 초 동안 깜빡거립니다.
- 매일 사용하시는 경우, 전동칫솔 핸들을 전원이 연결된 충전장치에 놓아두시면 언제나 완전히 충전된 상태에서 사용하실 수 있습니다. 배터리의 과충전의 우려는 없습니다.
- 충전지의 용량을 최대화하기 위해서, 적어도 6개월마다 한 번씩 충전부의 전원을 뽑은 상태에서 정상적으로 사용하여 완전 방전을 한 후 재충전해 주십시오.

전동칫솔 사용하기

칫솔질 방법

칫솔모에 물을 적신 후 종류에 상관없이 치약을 묻히십시오. 치약이 튀는 것을 방지하기 위하여 입안에 칫솔모를 넣으신 후 기기의 전원을 켜십시오(그림 2 참조).
오랄-비 회전-진동 칫솔모 중 하나를 사용할 때에는 치아에서 치아로 칫솔모를 천천히 이동시키고 다음 치아로 이동하기 전에 칫솔모가 몇 초간 치아에 머무르도록 하십시오(그림 5 참조).

칫솔모의 종류와 상관없이 양치는 바깥쪽에서 시작하여 안쪽, 그리고 음식물이 닿는 저작면 순서로 닦으십시오. 입안의 네 구역을 모두 고르게 닦으십시오. 너무 세게 누르거나 문지르지 마시고, 칫솔모가 움직이도록 두십시오. 치과 전문의나 치위생사에게 올바른 칫솔질에 대한 조언을 구하셔도 좋습니다.

세정 모드(모델에 따라 다름)

1-모드	2-모드	3-모드	4-모드	칫솔질 모드(핸들타입 3756)
✓	✓	✓	✓	세정-입안 세정을 위한 일상적인 기본 모드
		✓	✓	부드러운 세정-민감한 부분을 부드럽지만 꼼꼼하게 세정
			✓	미백-일상적으로 혹은 때때로 사용 가능한 미백 기능
	✓	✓	✓	잇몸 관리-부드러운 잇몸마사지

《일반 세정》- 일상적인 구강 세정을 위한 기본 모드.

《부드러운 세정》- 민감한 치아와 잇몸을 부드럽고 깔끔하게 세정.

《미백》- 가끔 혹은 일상적인 사용을 위한 미백 기능.

《잇몸 관리》- 잇몸을 부드럽게 자극.

세정모드 변경하기 :

전동칫솔을 켜면, 자동으로 《일반 세정》모드로 작동합니다.

다른 모드로 바꾸시려면, 전원 버튼을 연달아 누르십시오.

《부드러운 세정》 모드에서 전원을 끄고자 할 경우, 모터가 멈출 때까지 on/off 전원 버튼을 누른 상태로 조금 기다리십시오.

칫솔모

오랄-비는 오랄-비 전동칫솔에 호환 가능한 다양한 기능의 오랄-비 칫솔모를 제공합니다. 오랄-비의 **회전-진동 칫솔모**는 치아 사이사이를 꼼꼼하게 닦아냅니다.



오랄-비 초미세모 칫솔모

치아표면을 닦아내는 일반모와 잇몸선을 따라 부드럽게 작용하는 초미세모가 어우러진 칫솔모입니다.



오랄-비 크로스액션® 칫솔모

오랄-비의 가장 진보된 기술의 칫솔모로써 정교한 세정을 위해 기울어진 칫솔모입니다. 플라그를 들어내며 닦아냅니다.



오랄-비 플로스액션 칫솔모

효율적으로 치아를 닦아내는 칫솔모가 잇몸선을 따라 치아 뒷면과 같이 닿기 힘든 곳까지 세정합니다.



오랄-비 프리시즌 클린 칫솔모

곡선 칫솔모로 치아를 감싸고 동시에 치아 사이 깊은 곳까지 닦아줍니다.



오랄-비 3D화이트 칫솔모

치과의사로부터 영감을 받은 광택컵이 커피나 차, 그리고 담배 등으로 생긴 치아표면 착색을 제거합니다. 만 12세 이하의 어린이는 오랄-비《3D화이트》칫솔모를 사용하지 마십시오.

오랄-비 인디케이터® 칫솔모는 칫솔 교체 시기를 알려줍니다. 하루에 2분씩 2회의 지속적인 양치를 할 경우, 푸른색의 인디케이터가 약 3개월 후에 반 정도 사라지게 되어 칫솔모 교체 시기를 알려줍니다. 치아와 잇몸에 과도한 압력을 주어 양치할 경우, 칫솔모 교체시기 이전에 칫솔모가 벌어집니다.

오랄-비 《플로스액션》이나 오랄-비 《3D화이트》 칫솔모는 치아 교정기 착용 시에는 사용하지 않는 것이 좋습니다. 교정기 주변을 세심하게 닦아줄 수 있도록 디자인된 오랄-비 《교정 치아용 칫솔모》를 권장합니다.

압력센서 기능

과도한 양치질로부터 치아와 잇몸을 보호하기 위하여 이 전동칫솔에는 압력센서 기능이 내장되어 있습니다. 과다한 압력이 가해지면, 빨간색의 압력센서등(b)에 불이 켜짐으로써 압력을 줄이도록 알려줍니다(그림 4 참조)(모델에 따라 다름). 또한, 칫솔모는 계속 움직이지만, 상하진동은 멈추며, 이는 양치할 때 소리가 다르게 들리는 것으로 알 수 있습니다. 양치할 때 칫솔모에 적당한 압력을 가하여 압력센서가 작동하는지를 정기적으로 확인하십시오.

프로페셔널 타이머

30초마다 짧은 진동이 울리면서 스마트링이 반짝거림으로써 구강 내 4구역을 골고루 양치하도록 알려줍니다(그림 3 참조). 치과의사가 권장하는 2분 양치가 완료되면 긴 진동과 반짝거림으로 알려줍니다. 칫솔질 도중 잠깐 전원이 꺼지더라도 실제 양치 시간은 30초 동안 저장되어 있습니다. 전원이 꺼지고 30초가 지나면 타이머는 초기화됩니다.

처음 전동칫솔을 사용하는 며칠 동안은 잇몸에서 약간의 피가 날 수도 있습니다. 이러한 현상은 보통 며칠이 지나면 멈춥니다. 그러나 2주가 지나도 출혈이 계속될 경우에는 치과 전문의나 치위생사와 상담하십시오. 오랄-비는 치아와 잇몸이 민감한 고객께는 《부드러운 세정》 모드 사용을 권장합니다. (오랄-비 《센서티브》 칫솔모를 함께 사용하실 수 있습니다.)

세척 권장사항

칫솔질 후 전동칫솔 전원을 켜 채로 수 초 동안 흐르는 물에 칫솔모를 깨끗이 헹구십시오. 핸들의 전원을 끈 후, 칫솔모를 분리합니다. 두 부분을 각각 흐르는 물로 세척하여 물기를 닦아내고, 재조립하기 전에 물기가 마르도록 건조시켜 주십시오. 충전부는 세척 전에 분리시켜 주십시오. 충전기를 식기세척기 또는 물에 넣지 마십시오. 반드시 젖은 형겅으로만 닦아주십시오. 칫솔모 홀더, 칫솔모 보관함과 보호 커버는 식기세척기로 세척이 가능합니다(그림 6 참조).

이 안내 사항은 사전 예고 없이 변경될 수 있습니다.

환경 관련 안내

이 제품은 건전지와 재활용 가능한 전자 쓰레기를 포함하고 있습니다. 환경보호를 위해 생활 쓰레기로 분류하지 마시고, 폐전지 수거함이나 재활용 전자 쓰레기 폐기장에 버려주시기 바랍니다.



품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다. 1년간의 품질보증 기간 동안 제품 자체나 생산 과정에서 비롯된 불량품은 상태에 따라 무료 보수 또는 교환해 드립니다. 이 보증은 이 기기가 브라운 또는 지정된 유통업체를 통해 공급되는 모든 지역에서 적용됩니다. 보증기간 내의 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모(특히 칫솔모), 사용에 지장이 없는 경미한 결함 등은 무상 수리 또는 교환이 적용되지 않습니다.

오랄-비 애프터서비스 센터가 아닌 다른 곳에서 수리하였거나 오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

그리고 본 제품의 구매 일자가 판매점에 의해 혹은 구매 시의 영수증에 의해 확인되어야만 정상적인 품질보증품으로 인정됩니다.(구입 시 영수증을 잘 보관하셔서 오랄-비 서비스센터에서 애프터서비스 시 불이익이 없도록 하십시오.)

이 보증은 법령에 의거하여 귀하의 권리에 영향을 미치지 않습니다.

칫솔모 교체 관련 품질보증

오랄-비 정품이 아닌 교체용 칫솔모를 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 오랄-비는 오랄-비 정품이 아닌 교체용 칫솔모 사용을 권장하지 않습니다.

- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칫솔모의 품질을 보증할 수 없습니다. 따라서 오랄-비 정품이 아닌 다른 교체용 칫솔모를 사용할 경우 최초 구매 시와 동일한 세정 성능을 보장할 수 없습니다.
- 오랄-비 정품이 아닌 다른 교체용 칫솔모는 잘 맞지 않을 수 있으며, 오랄-비는 이를 보장할 수 없습니다.
- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칫솔모를 오랄-비 전동칫솔 핸들에 장기간 사용할 경우 제품에 미칠 수 있는 영향에 대해 알 수 없습니다.

오랄-비 정품 교체용 칫솔모는 오랄-비의 로고가 새겨져 있으며 오랄-비의 높은 품질 기준을 충족합니다. 오랄-비는 다른 브랜드명으로 교체용 칫솔모나 핸들 부속품을 판매하지 않습니다.

제조 일자 읽는 방법

제조 연월은 충전기 또는 전동칫솔 핸들의 바닥에 4자리로 표시된 제조코드에서 확인할 수 있습니다. 첫 두 자릿수는 생산된 연도의 마지막 두 자릿수를 의미하며, 나머지 두 자릿수는 생산된 월을 나타냅니다. 예시 : ‘1209’ – 2012년 9월에 생산되었음.

Class	Notification
B급 기기 (가정용 방송통신기자재)	이 기기는 가정용(B급) 전자파 적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

애프터서비스

A/S 문의 : 1577-8027

가까운 피씨에스원코리아 서비스센터에서 A/S를 받으실 수 있습니다.

본 제품은 소비자분쟁해결기준에 따라 교환 또는 보상 받으실 수 있습니다.

오랄-비 제품 : 전국 유명 백화점 및 전자상가에서 구입하실 수 있습니다.

www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.

아래 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고 객		판	
		매	
		점	

한국 피앤지 판매 (유)

서울시 강남구 테헤란로 203, 16층

전화: 080-920-6000(수신자부담)



Your **Oral-B®** toothbrush has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective.

IMPORTANT

- Periodically check the cord for damage. If cord is damaged, take the charging unit to an Oral-B Service Centre. A damaged or non-functioning unit should no longer be used. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance should not be performed by children.
- Children should not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.

WARNING

- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place the charger in water, liquid or store it where it can fall or be pulled into a tub or sink. Do not reach for it if it has fallen into water. Unplug immediately.
- Do not disassemble the product except when disposing of the battery. When taking out the battery for disposal of the unit, use caution not to short the positive (+) and negative (–) terminals.
- When unplugging, always hold the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and not intended for use on multiple patients in a dental practice or institution.
- Replace brush (head) every 3 months or sooner if brush head becomes worn.

Description

- a Brush head
- b Pressure sensor light (depending on model)
- c On/off button (mode selection)
- d Handle
- e Charge indicator light
- f Low charge indicator light
- g Basic charger
- h Brush head holder (depending on model)

- i Brush head compartment with protective cover (depending on model)

Specifications

For voltage specifications please refer to the bottom of the charging unit.

Noise level: ≤65 dB (A)

Connecting and charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the basic charger (g) or the assembled charging unit (picture B/C) into an electrical outlet and place the toothbrush handle (d) on the charging unit.
- The green charge indicator light (e) flashes while the handle is being charged. Once it is fully charged, the light turns off. A full charge can take up to 22 hours and enables up to seven days of regular brushing (twice a day, 2 minutes) (picture 1).
Note: After deep discharge, the green light might not flash immediately; it can take up to 10–15 minutes.
- If the rechargeable battery is low the red low charge indicator light (f) is flashing for some seconds when turning your toothbrush on/off.
- For everyday use, the toothbrush handle can be stored on the charging unit to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using your toothbrush

Brushing techniques

Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (picture 2). When brushing your teeth with one of the Oral-B **oscillating-rotating brush heads** guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface (picture 5). With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally. Do not press too hard, simply let the brush do all the work.
You may also consult your dentist or dental hygienist about the right technique for you.

Brushing modes (depending on model)

1-mode	2-mode	3-mode	4-mode	Brushing modes (with handle type number 3756)
✓	✓	✓	✓	Daily Clean – Standard for daily mouth cleaning
		✓	✓	Sensitive – Gentle, yet thorough cleaning for sensitive areas
			✓	Whitening – Exceptional polishing for occasional or everyday use
	✓	✓	✓	Gum Care – Gentle massage of gums

How to switch between modes:
Your toothbrush automatically starts in «Daily Clean» mode. To switch to the other modes, successively press the on/off button. If you wish to turn off your toothbrush from «Sensitive» mode e.g., push and hold down the on/off button until the motor stops.

Brush heads

Oral-B offers you a variety of different Oral-B brush heads that fit your Oral-B toothbrush handle.

Our **oscillating-rotating brush heads** can be used for tooth-bytooth precision cleaning.



Oral-B UltraThin brush head

features a combination of regular bristles to clean teeth surfaces and ultrathin bristles for a gentle brushing experience on the gumline.



Oral-B CrossAction brush head

Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.



Oral-B FlossAction brush head

features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.



Oral-B Precision Clean brush head

provides effective and gentle cleaning action for both teeth and gums. The brush head cups each tooth with longer and denser bristles and reach deep between teeth at the same time.



Oral-B 3D White brush head

features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.

More Oral-B brush heads feature light blue INDICATOR[®] bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway approximately within 3 months, indicating the need to replace your brush head. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums.

We do not recommend using the Oral-B «FlossAction» or Oral-B «3DWhite» brush head with braces. You may use the Oral-B «Ortho» brush head, specifically designed to clean around braces and wires.

Pressure Sensor

Helping protect your teeth and gums from hard brushing, your toothbrush has a pressure control feature installed. If too much pressure is applied, the red pressure sensor light (b) will light up, reminding you to reduce pressure (picture 4) (depending on model). In addition the movement of the brush head will continue but its pulsation will stop and you will also hear a different sound while brushing. Periodically check the operation of the pressure sensor by pressing lightly on the brush head during use.

Professional Timer

A short stuttering sound at 30-second intervals reminds you to brush equally all four quadrants of your mouth (picture 3). A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time. The elapsed brushing time is memorised even when the handle is briefly switched off during brushing. When pausing longer than 30 seconds the timer resets.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» mode (depending on model).

Cleaning recommendations

After brushing, rinse your brush head carefully under running water for some seconds with the handle switched on. Switch off the handle and remove the brush head. Clean both parts separately under running water then wipe them dry before reassembling the toothbrush. Disassemble charging unit before cleaning. Never place the charger in dishwasher or water; it should be cleaned with a damp cloth only. Brush head holder, brush head compartment and protective cover are dishwasher-safe (picture 6).

Subject to change without notice.

Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Guarantee

We grant 1 year limited guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Service Centre.

This guarantee in no way affects your rights under statutory law.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.

- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

Manufacturing date code:

To determine the year and month of manufacture, refer to the 4-digit production code located on the type plate of charger and handle. First two digits of the production code refer to the year of manufacture. Next two digits refer to the month of manufacture. Example: «1209» – means the product was manufactured in September of 2012.