WARRANTY CARD

Product : MINI CHOPPER

Model : JIFF / BULLET / BULLET INOX

Serial No .....

Date of purchase.....

Bill/ Cash Memo no.....

Purchaser' name…….....….....……..…….....

Address…….....……..……..…….....

.....……..…….....……

Dealer's stamp and Signature



Customer Care Number (Timing: 9:30 to 5:30) (Mon - Sat)

9773982065

INALSA

TUAREG MARKETING PVT. LTD.
154, Bhalswa, Delhi- 110033

INALSA

MINI CHOPPER

Jiff
Bullet
Bullet Inox

INSTRUCTION MANUAL
CUM
WARRANTY CARD

Dear Customer,

Congratulations! On the purchase of your **INALSA Mini Chopper**, this is designed to include many superior features that permit you the fullest expression of your **Chopping** skill and enthusiasm. You are now on the threshold of a whole new world of **Chopping** pleasure.


At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Chopping Ranges, Juice Extractors, Cooktops, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Mini Chopper** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Mini Chopper** has a lot of thoughtful features built in to make **Chopping** convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Mini Chopper**.

Welcome to the INALSA world of **Chopping** pleasure!

Parts Identification :

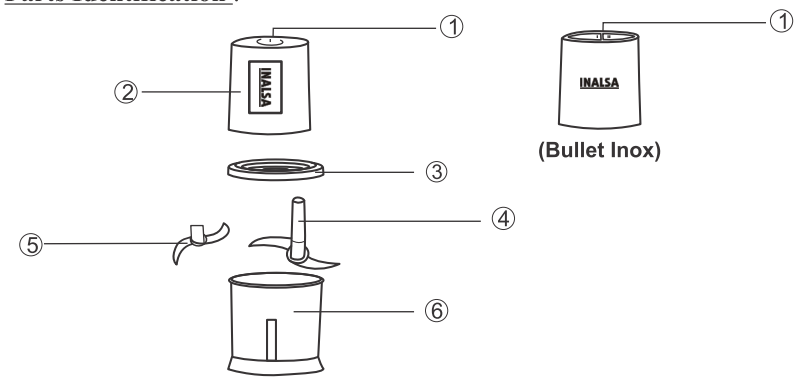

Parts No.	Parts Name
1.	Power On/Off top (Double Speed in case of Bullet Inox)
2.	Motor Unit
3.	Bowl Lid
4.	Blade support with first layer of chopping blade
5.	Second layer of chopping blade
6.	Chopping bowl

Technical Specifications*

Product	Mini Chopper		
Model	Jiff	Bullet	Bullet Inox
Voltage	240V, 50Hz, AC		
Power	400 Watt		450 Watt
Speed control	Single		Double
Bowl capacity (in mls)	500ml		
Cord plug	2 Pin moulded plug with PVC cord		
Accessories	Double Layer Chopping Blade		

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instruction

1. Read this instruction manual carefully before operating this unit.
2. Before using this unit, check the mains power voltage corresponds to the voltage shown on the rating plate.
3. Always remove the plug from this power socket when this unit is not in use and before carrying out any cleaning or maintenance operation.
4. Never leave this unit unattended when it is switched on. Keep this unit out of the reach of the children.
5. Don't switch the appliance 'ON' if it appears to be faulty in any way.
6. Don't immerse main unit in the water.
7. Do not run this unit for more than 1min., otherwise the inner parts will be damaged.
8. When the motor is running, do not insert your finger or other objects into the bowl.

Using Your Mini Chopper

1. Place the Chopping bowl (6) on the level surface, put the Chopping blade (5) into the blade support (4). However you can also use the chopper w/o chopping blade (5) if you need to chop small quantity.
2. Place the ingredients into the Chopping bowl (6). It is recommend to pre-cut large pieces of ingredients into small pieces as 1-2 cm x 1-2 cm x 1-2cm. Don't put the ingredients over the maximum capacity of processing guide table.
3. Place the lid (3) onto the bowl (6).
4. Place the motor unit (2) on the lid-bowl assembly by twisting it slightly, so that the blade axis fits into the motor unit axis.
5. Plug in your appliance.
6. Press down the power On/Off switch (1) (in case of Bullet Inox model there are two speed level) , and the appliance starts up immediately. **Do not run the chopper continuously for longer than 15 seconds when chopping the heavy loading of ingredients. Leave to cool for 15 seconds in between each operation. Do not operate exceed 3 cycles continuously .**
7. Once release the power On/Off switch (1), appliance to be stopped.
8. Once finish processing, unplug the appliance, and wait for the blade to stop completely.
9. Remove the motor unit (2), the lid (3) , take out the blade (5).

Cleaning and Maintenance

1. Before cleaning, always remove the plug from the electrical socket.
2. After usage, please clean the motor unit (2) with soft and dry cloth.

WARRANTY

The **"Inalsa Mini Chopper "** is fully warranted against any manufacturing defect for a period of **Two Years** from the date of purchase. Should any defect develop in the **Mini Chopper** during the warranty period, **Tuareg Marketing Pvt. Ltd.** undertakes to get the **Mini Chopper** or any part thereof, repaired at any of its Authorised Service Center. The above warranty shall be subject to the following terms and conditions:-

1. Any defective product or part thereof will be repaired within the above stated warranty period on receipt of the same with this card duly filled in and stamped by dealer from whom the product was purchased along with the purchase bill/ invoice, provided the product is brought to our nearest service center freight paid and packed securely.
2. In the event of repairs/ replacement of any part of product, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
3. This warranty is valid only when:-

- The product is purchased from the company's authorized dealer and accompanied by this warranty card / cash memo.
- The product has been serviced by the Inalsa's authorized service personnel.
- The product has been used and maintained in accordance with the instruction manual.

4. The warranty does not apply to :-

- Normal wear and tear of the product
- Damage due to chipping, peeling, plating and denting.
- Damages arising due to running of the appliances on the alternate sources of power such as Inverter, generator or any such auxiliary power supply aid resulting in variation/ fluctuating voltage
- Breakage or damage to components made of ABS, SAN, Bakelite, Glass and such plastic/rubber parts, cord, bulbs and surface coating.
- Damages resulting from accidents, mishandling or negligence on the part of the customer
- Product if used for the commercial purposes.
- Product, the serial number of which has been removed obliterated or altered on the specification plate.

5. The warranty is in lieu of all other warranty, expressed or implied and does not cover indirect or consequential damages/ loss.