
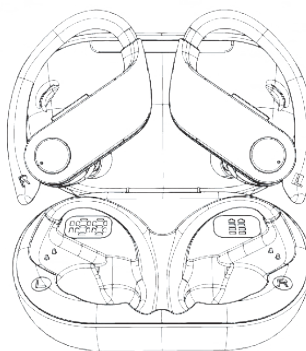
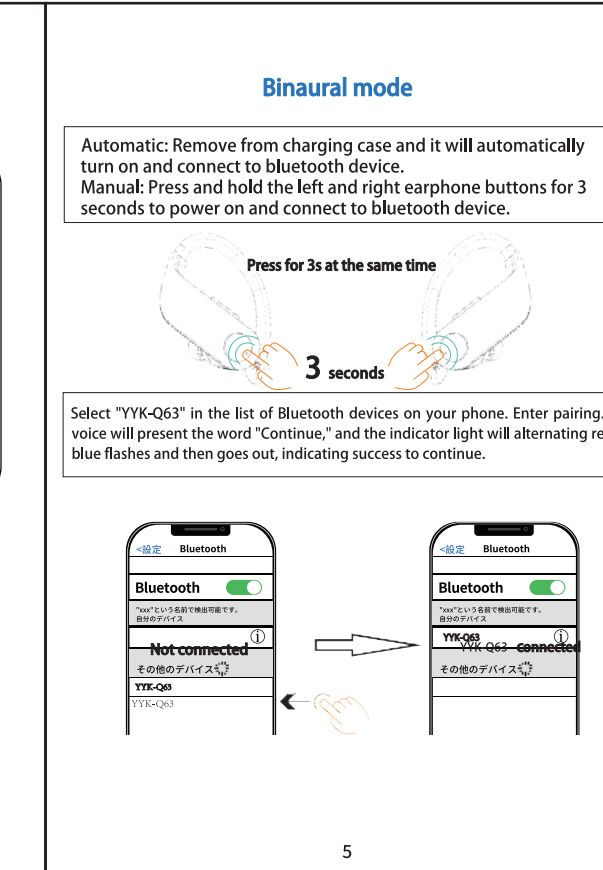
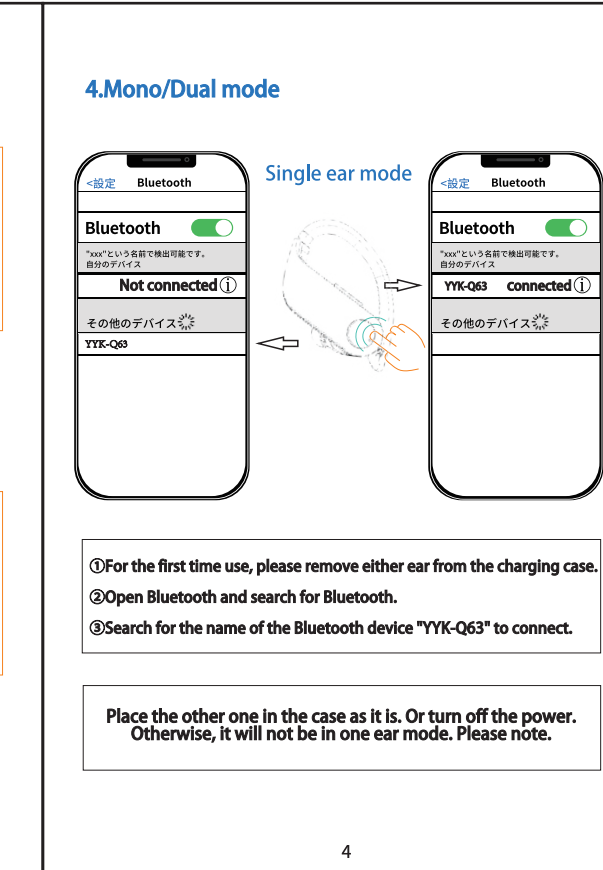
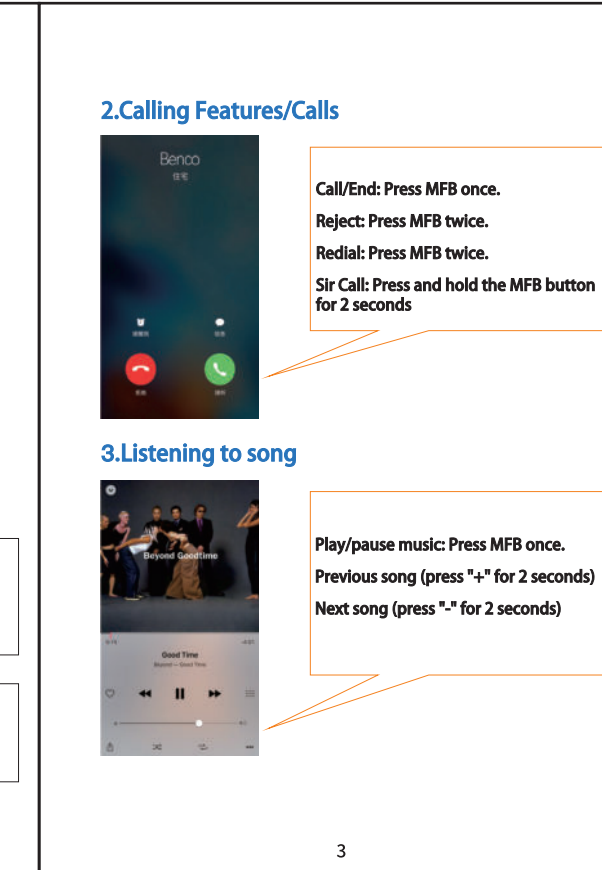


YYK-Q63	CONTENTS
Bluetooth 5.3 Headphones	
Product Manuals	
	
If you have a question that is not listed here, please do not hesitate to contact us by email. Customer Service Department email address.	
vipservice@amazonteam.work	
	- Product introduction1 - Package Contents2 - Instructions for use 1.Power supply2 2.Calling call function3 3.Listen music3 4.Monaural/Binaural mode4 5.Reset pairing5 - Common problems 1.Bluetooth not found6 2.Charging problem7 3.Auto turn off8 4.Only one ear has sound8 5.Sound intermittent9 - Parameter Specification10 - Warranty measures11

The diagram shows a top-down view of the device's control panel. A central 'Multi-function button' is connected by arrows to various functions: 'MFi control' (up), 'Volume +~' (right), 'Volume -~' (left), 'Mic' (down-left), 'Charging case power' (down), 'Left and right earbuds power restoring' (right), 'Charging contact point' (down-left), and 'Charging contact point' (down-right).

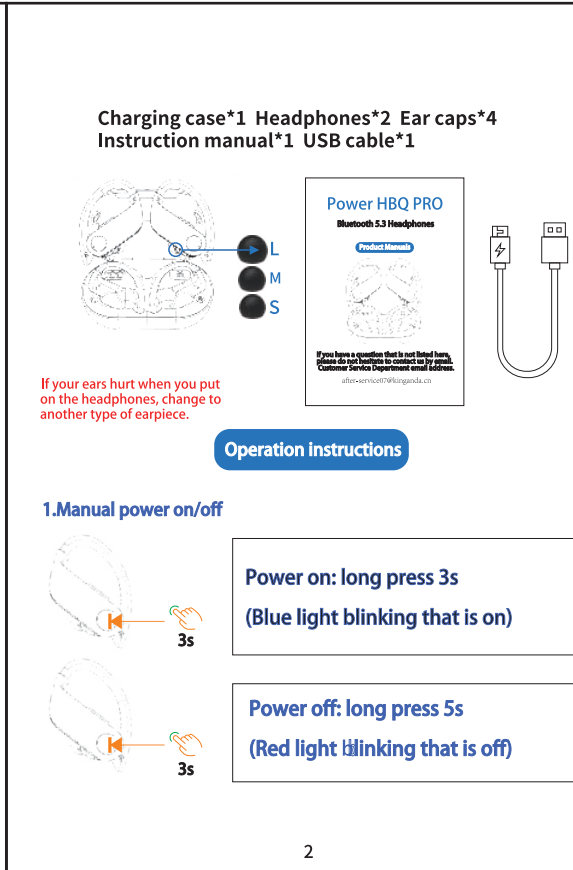

As soon as the earphones are placed in the charging case, they turn off. It will then begin charging. Once the earbuds are removed from the case, they will immediately turn on and automatically pair and connect to a paired Bluetooth device.

Why can't I search for Bluetooth?
Why can't I connect Bluetooth?

1. The distance of Bluetooth is 10m, please make sure there are no obstacles. Besides, the phone needs to be close to the headphones.
2. If any other phone or device has been connected to the headphones, please unpair it first.
3. Please restart the Bluetooth device and try to reset the headphones.

6

FAQ

**Why is there no sound from the headset?
Or why is the concert disconnected?**

Please check the phone network is normally work, the network speed is not slow, and the music is being loaded.

Please check whether your phone is connected to two audio devices at the same time. Press and hold the multifunction key twice to exit the connection. The distance of Bluetooth is 10m, please make sure there are no obstacles. Besides, the phone needs to be close to the headphones. If the surrounding environment is interfered or the magnetic field is too strong, Bluetooth signal transmission will be affected. Open the interface of the phone's Bluetooth, click on contact pairing, delete the pairing record, search for Bluetooth, and pair again. You can restart the phone or reset the headphones.

Charging problems

Reset the headset firstly, restart the phone, delete the connection history, search and then pair again. If it still doesn't work, follow these steps:

1. Turn off the Bluetooth function of your phone. Before turning off, please cancel all previously connected Cancel all the previously connected device names "YYK-Q63".
2. Remove the left and right earphones from the case and manly press and hold the button for 5 seconds to power off.
3. With the device shut down, manually press and hold the multifunction button on the left and right headphones for 10 seconds.
4. After you hear the prompt tones "Power on" and "Power off" and see the red and blue lights flash twice, put your left and right

7

ears back into the charging case and check whether the charging mode is enabled.

5. Remove the left and right earphones from the charging case at the same time and connect them to your phone.

Why does the headset turn off automatically?

Make sure that the headset has enough power. In addition, when you do not use the headphones for 10 minutes, the headphones will automatically disconnect from the Bluetooth connection.

Why can't charge the charging case?

1. Make sure that the charging case or phone charger is in good condition and connected properly.

2. Poor contact is possible. Use your fingers to press the left and right headphones, and fully connect the charging case of the left and right headphones to the charging case.

3. The charging case of the left and right headphones may be dirty, dusty or sweaty. When putting back the charging case of the charging case, please wipe with alcohol or cloth.

4. Please wipe off the sweat and put it back in the charging case for charging, the indicator light will lights up.

5. If you hear "Battery Low," please charge the headset. When the LED display number of the charging case reaches "10", please charge the charging case. Be careful not to exhaust the power in the headphones and charging case, because the headset may shorten the life of the built-in lithium battery.

8

Parameter Specification	
Bluetooth Version:	TWSV5.3
Support Contact:	A2DP1.3/HFP1.0/HSP1.2/AVRCP1.0/D1.3
Bluetooth Frequency:	2.4GHz
Bluetooth Charging case:	10m (No entity obstacles)
Earbud/charging case:	Earbud battery capacity: 100mAh
Battery capacity:	Charging case battery capacity: 550mAh
Call/Music playtime:	Music playtime/standby time in one ear: about 18-20 hours Binaural sound playtime: about 12-14 hours (80S battery level gauge display)
Standby time:	Standby time in one ear: about 240 hours Binaural standby time: 200 hours
Full charge time:	1.5Hours
single ear/charging case weight:	Earphones: 6.9g*2/ Charging case: 60g
Package weight:	0.35lb
Product Size:	93*60*34mm

Attention

- Do not handle this product roughly. Do not eject heavy objects into earphones, and do not place the earphones in a high temperature and humidity environment.
- Do not place this product in the presence of WIFI, routers or other high-power transmitting equipment.
- Use this product in an effective environment (10m) and ensure that there are no entity obstacles between the Bluetooth device and the earphone (e.g. walls).
- Please charge this charging case using a legitimate charging facility. This earphone is compatible with any Bluetooth device.
- If you do not use it for a long time, please recharge it before use.

Safety Picturation

The following instructions are to be observed in order to prevent injury to the user or others and damage to property.

Please read the text after carefully understanding the contents of the indications and symbols described here, and be sure to observe them.

- The following symbols classify and explain the degree of harm or damage to humans that may occur if the product is used incorrectly and the contents of the labeling are ignored.

	Dangerous	A threat of imminent danger or serious injury.
	Warning	Any case that could result in death or serious injury.
	Note	Maybe cause injury or property damage.

- The following pictorial symbols are used to classify and explain the types of symbols to be observed.

attention-grabbing symbol	Symbols prohibiting action	Symbols directing action
	 	

Warnings

1. If this product falls within 6 months from the date of purchase in spite of proper use in accordance with the instruction manual, connection examples, and notes, etc., for home use, we will replace it free of charge.
2. If the product falls within 6 months from the date of purchase, we will replace it free of charge.
3. This product is subject to carry-in repair. The customer will be responsible for shipping charges when sending the product to us.
4. Please keep this document in a safe place and do not lose it.

10

⚠ Dangerous

Do not short-circuit the terminals. Do not carry or store the product together with metal needles, cans, or other small metal objects as this may cause fire, igni-
explosion.

Do not throw the product into a fire or charge, use, or leave it at high tempera-
ture, as this may, in this way cause fire to overwhelm, catch fire, or explode.

⚠ Warning

Never use headphones while riding a bicycle, car, motorcycle, etc. Doing so
may cause a traffic accident.

When using the headphones outdoors, be aware of surrounding traffic.

Do not disassemble or modify the headphones.

Do not use flammable or combustible liquids on the product. Doing so may cause malfunction,
overheating, fire, or electric shock.

If the USB cable is not plugged in securely, it may cause fire or electric shock.

Do not touch the main unit or USB cable with wet hands. Do not give a strong
shake or throw the product. Doing so may cause fire, burns, or injury.

Do not leave within the reach of children or infants, who may accidentally swallow
earphones or earpieces.

⚠ Note

Use and store the product in a place with little moisture and dust as it may cause
generation of static, or electric shock. When using this product, do not raise
volume too high. Using the product at a loud volume that irritates the ears for
a long period of time may adversely affect hearing. If the volume is turned up too
high for the beginning, a sudden loud sound may irritate your ears, cause the volume
gradually.

Do not cover the unit with blankets or drape while charging or using it.

Do not use the product while charging or overcharging.

Do not use the product if the USB cable is damaged or the terminals are loose
or may cause fire or electric shock.

Do not use the product near a fire or store, in a car, in the bathroom, or in a
place subject to high temperatures or humidity.

Doing so may cause overheating, fire, or explosion.

Warranty measures

1. 6 months long warranty period

2. Warranty does not apply to malfunctions caused by failure to follow the instructions for use. Please note that the warranty does not cover any damage caused by failure to follow the instructions for use.

Warranty measures:

Warranty Number:

User Name:

Phone Number:

Address:

Time of Purchase :

Receipt Number:

Edition Seller Name:

Vendor Address:

Edition Store Phone Number:

Failure Description:

UK	REP
----	-----

SVATOST CONSULTING LTD
Suite 11,First Floor,Wyke Road Business
Centre,Taffs Well,Cardiff,Wales,CF15 7QR
contact@svamaster.com


      

12

YYK-Q63

両耳分離耳型耳掛けワイヤレスイヤホン
V5.3+EDR

取扱説明書

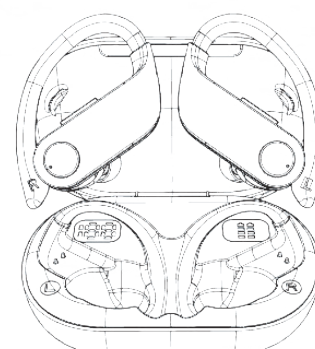

質問があれば遠慮なく連絡してください

vipservice@amazonteam.work

目次




各部の名称	1
付属品	2
操作方法一覧	2
電話	2
通話する	3
音楽を聴く	3
片耳/両耳モード	4
ペアリングをリセット	6
故障かな?と思ったら	7
Bluetoothについて	7
充電について	7
自動電源オフについて	8
片耳しか音が聞こえない	8
音が断続について	9
商品仕様	10
使用上の注意	10
安全上の注意	11
ペアレーター配置	11
安全上のご注意	13

各部の名称

両耳分離型耳掛けワイヤレスイヤホン

多機能ボタン (MP3再生ボタン)
マイク
充電接続点
充電接続点
音量 "+"
音量 "-"
左右のヘッドセット互換
回転ランプ
充電接続点

通話終了 (10秒待機)
充電の待機中
充電完了 (10秒待機)
一時停止 (10秒待機)
音量の "+" を2秒待機
音量の "-" を2秒待機
Power On (2秒待機)

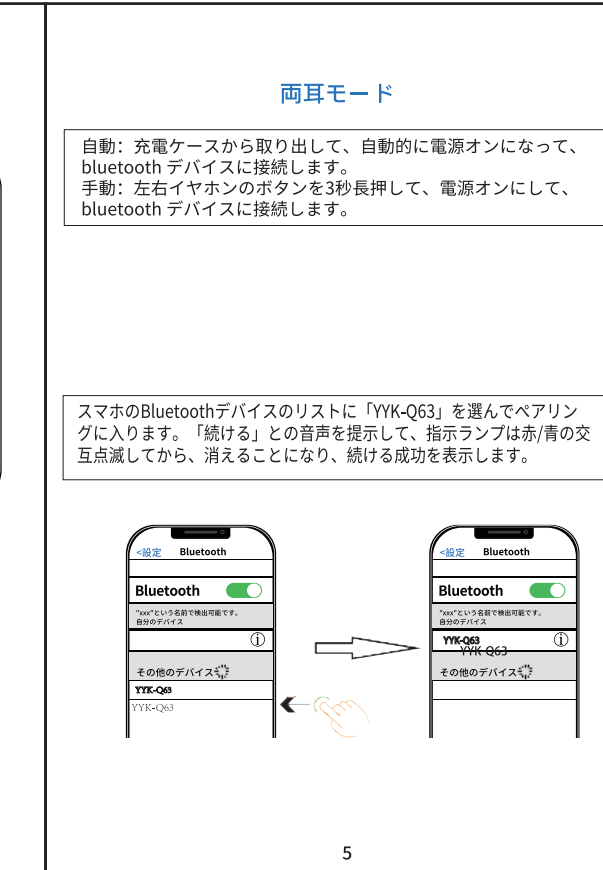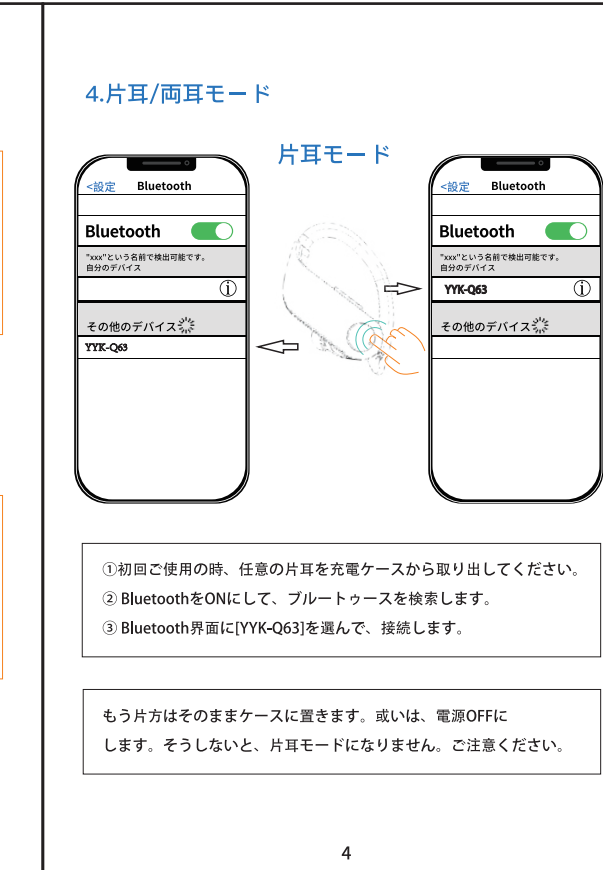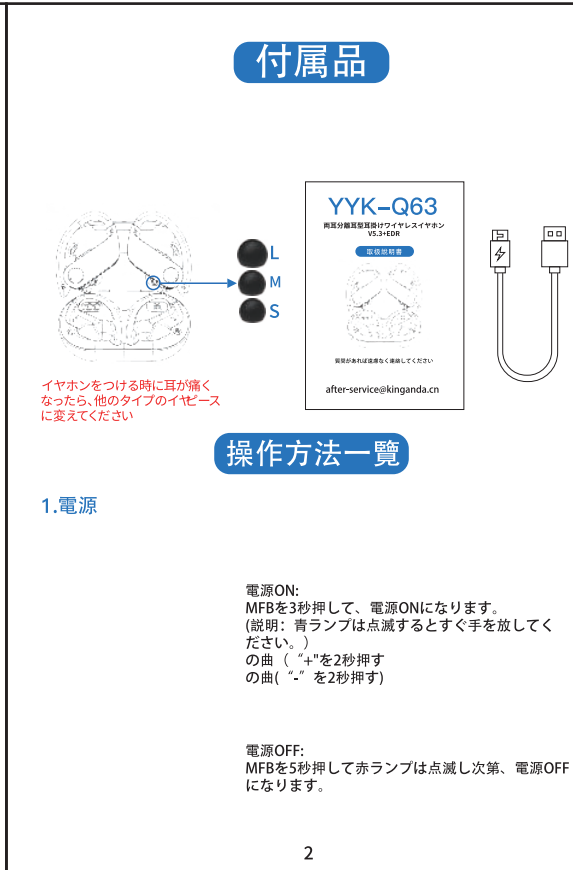

1. イヤホンを充電ケースに入れて充電が始まります。取り出しとイヤホンの電源がONになり、自動的にペアリングされます。

5. イヤホンリセット方法

片耳モードを使用すると両耳モードが解除されます。または操作エラーにより両耳モードを解除した場合は、下記の処理方法でリセットしてください。

両耳モード解除の現象

起動時にそれぞれ赤/青ランプが点滅し、スマホに同じ装置名が2つ表示します。2つのイヤホンを同時に使うとはできません。

解決方法：手動でリセットする必要があります

1. スマホのBluetooth機能をオフにしてください。オペアンに、前接したデバイス名「YYK-Q63」をすべてキャンセルしてください。
2. 左右イヤホンをケースから取り出し、手動でボタンを5秒長押しし10秒を押しとめます。
3. スマートフォンに状態欄で、手動で左右イヤホンの多機能ボタンを10秒長押ししてください。赤と青のランプが2回点滅した後、リセットが完了します。
4. 左右イヤホンを充電ケースに戻して、充電モードになるが確認してください。
5. 左右イヤホンを同時に充電ケースから取り出し、スマホに接続してください。

6

故障かな？と思ったら

Bluetoothについて

1. Bluetoothの通信距離は10mであり、間に障害物がないと、スマートフォンとの距離を正確に認識していただき、スマートフォンとイヤホンは近づけてください。
2. 他のスマートフォンまたはデバイスがすでにイヤホンに接続されている可能性があります。その場合は、まず接続済みのスマートフォン/デバイスのペアリングを解除してください。
3. 接続の問題が解決しない場合、Bluetoothデバイスを再起動し、イヤホンをリセットしてみてください。
4. イヤホンが電源をふれてから、5分間にデバイスを探索しないと、自動シャットダウンになります。
5. 他のスマートフォンに接続する場合、イヤホンは先に前接続のデバイスをから、2分間くらい待つ必要があります。

充電について

1. 充電ケーブルまたは充電用のアダプタに問題が無いこと、充電ケーブルのプラグが正しく差し込まれていることを確認してください。
2. 接続不良の可能性がります。指で左右のイヤホンを持て、左右の充電接続点は充電ケースに完全に接続してください。
3. 左右のイヤホンの充電接続点に汚れ、ホコリや汗など付いた可能性があります。布で拭いてください。

7

4. 「バッテリーLOW」の提示音声が聞こえましたら、イヤホンへご繋いだケースのLEDディスプレイ「数字1」にのみなりましたら、ケースに付属したイヤホンと充電ケースの両方を一度取り外し、充電ケースに付属した内蔵のリチウムバッテリーの使用寿命を短縮する可能性があります。

自動電源オフについて

イヤホンが十分に充電されているかを確認お願いします。さらに、イヤホンは、Bluetoothが切断された10分後に自動的にシミュックタマです。その場合は、充電ケースに戻すか、多機能ボタンを2秒押し開電源をオフにしてください。

片耳しか音が聞こえない

まずイヤホンをリセットして、スマートフォンを再起動してください。スマートフォン の Bluetooth接続履歴を削除した後で、再度検索し直して音をお試くださいそれでも改善でない場合、以下の手順をおこなってください。

1. 充電ケースから左右イヤホンを取り出し、多機能ボタンを約5秒押し、イヤホンがオフになります。

2. 片手/片方イヤホンの多機能ボタンを10秒押し続けて、赤と青のLEDが点灯して、指を放します。

3. 左右イヤホンを充電ケースに戻して、充電モードになるのを確認してください。

4. 左右イヤホンを同時に充電ケースから取り出します。

5. スマートボンの接続履歴を削除した後、再度検索してペアリングください。

8

音が断続について

1、スマートホンのインターネット接続が正常であるか、あるいはインターネット通信速度が遅いため曲がまだダウンロード中になっていないかを確認してください。

2、スマートホンが同時に2つのオーディオデバイスに接続されているかを確認してください。多機能ボタンを2回押すことで、接続を切り替えることができます。

3、Bluetoothの通信距離は10mです。間に障害物がないこと、スマートフォンとの距離を確認してください。スマートフォンとイヤホンとは使用していません。

4、周辺環境の電波干渉が多すぎるか、磁場が強すぎる可能性があります。これらの環境はBluetoothの通信に影響を与えます。

5、スマートフォンをBluetoothペアリングメニューを開き、「ペアリング」を選択して—**自己ペアリング**履歴を削除し、再度検索してペアリングしてみてください。

6、スマートフォンを再起動することで、イヤホンをリセットすることができます。

商品仕様	
Bluetoothバージョン:	TWSV53+EDR低電力消費
サポートモード:	A2DP1.3/HFP1.6/HSP1.2/AVRCP/D1.1
Bluetooth周波数:	2.4GHz
Bluetooth伝送距離:	10m(実環境障害物無し)
イヤホンケーブル:	イヤホンケーブル無し
スピーカ再生容量:	フル充電時・再生容量:100mAh
通話/音楽再生時間:	フル充電時・再生容量:100mAh 片方イヤホン再生・通話時間約18~20時間 両方イヤホン再生・通話時間約12~14時間 (iOS/Android各バージョンご対応)
スタンバイ時間:	片方スタンバイ時間:240時間 両方スタンバイ時間:200時間
フル充電電圧時間:	1.5時間
充電/充電ケーブルサイズ:	イヤホン:6.9*2. 充電ケーブル:66g
本体重量:	160g
製品サイズ:	93*60*34mm
使用上の注意	
1.本製品を容易に破損しないでください。重い物をイヤホンに押さず、また高温多湿の環境に長時間放置しないことにご注意ください。 2.WiFiやBluetooth等の高速通信技術が盛ることによって生じている電波の干渉により、音質や音の遅延が生じる場合があります。 3.本製品の受信機と送信機とを、音質や音の遅延や音質などの原因により、同時に使用し、音質や音の遅延が生じる場合があります。 4.正確な充電状態を確認し、本充電ケースに充電してください。 5.このイヤホンは従来のBluetoothデバイスに対応できます。 6.長時間のそのまま使用は、バッテリーの寿命に影響を及ぼす可能性があります。	

3

安全上の注意

お買い上げの車や人への危害、財産への損害を未然に防止するためお取り扱いのうえを、次より説明いたします。
記述している表示、図記号について内容を良く理解してから本文を読み、必ずお守りください。

●表示内容を無視して誤った使い方をしたときに生じる人への危害の程度を、次の表に区分し、説明しています。

	危険	死亡、または重傷を負う可能性が迫り生じおそれがあるもの。
	警告	死亡、または重傷を負う可能性のあるもの。
	注意	傷害を負う、または財産の損害が生じる可能性があるもの。

●お守りいただく内容の種類を、次の表示で区分し、説明しています。

注意をうける記号	行為を禁止する記号	行為を指示する記号
		

保証規定

①この保証書は取扱いと、取扱説明書、保証書とらへて、車購入のときに必ずお持ちください。ご購入日より3ヶ月以内に故障した場合に返金いたします。
②保証期間は、ご購入日より3年(車両保証)と5年(部品保証)とをご指示のうえ、ご購入の車両に、ご相談ください。
③ご購入の車両はすべて修理対象車両となります。対象商品を当社へ送付した場合は、修理の依頼。ご相談ください。
④日本を出国した場合は、この保証書は有効です。
⑤本書は再発行いたしませんので、紛失した際に大切に大切に保管してください。

11

め、
お読
み
の
ご
注
意
を
お
願
い
し
ま
す。

△危険

電子シガーケースでない、金属製のネックレスやコインなどの金属小物といっしょに携帯するは危険な場合があります。破損の原因になります。

火の付いたライター、加熱した高温での充電・使用・保管しない。発熱・発火、破損の原因となります。

△警告

自転車・自動車・オートバイなどの運転中は、絶対にヘッドホンを使用しない交通の妨げの原因となります。

屋外で使用する場合は、周囲の状況に十分注意する交通事故の原因となります。

△注意

充電、充電したままの充電、発熱、発火・充電の故障になります。

USB ケーブルは確実に差し込み差し込みが不完全な場合は、発火・故障の原因となります。

裸手・手袋や USB ケーブルをさわらない。発火、感電の原因になります。

強い電磁波にさらされ、加熱の恐れがあります。充電の妨げの原因になります。

幼児、子供の手の届く場所に放置しない。放置して子供が充電ケーブルを飲み込みたりすると死にます。

△注意

湿度が高いところの少ない場所で使用・保管する発熱や発火、感電の原因になります。

本機を使用するときは、首巻を上げず強い圧を加えないでください。首巻は長時間使用で使用する上、被り込みの危険を伴うことがあります。はきはひ首巻を上げずそのまま、突然発生した火災に備えてためておく必要があります。首巻は常に上げず、常に上げず。

充電中、使用中は毛布や衣類などをまわらないでください。発熱や発火の原因となります。

USB ケーブルの破損、電子シガーケースの破損には使用しない。発火・感電の原因となります。

火の付いたタバコのスープの灰、車内、お店商品など高温、高温に近づけて使用しない。破損、発熱、発火、破損の原因となります。

保証対策

1.6ヶ月長期保証期間
2.使用上のご注意をお守りいただけたことによる故障に関しては保証対象外です。ご了承ください。

保証カード

保証カード番号 _____

ユーザー名前 _____

電話番号 _____

アドレス _____

購入時間 _____

レシート番号 _____

販売店名 _____

販売店アドレス _____

販売店電話番号 _____

故障説明 _____

PS ㊥ ♻ ㊹ ㊸ CE FCC