

July 2024 QSG1_A_JP_EN Item No. : B350


操作説明

適用: Argus 3 Ultra

目次

内容物一覧 ························2
カメラ各部の名称 ・・・・・・・・・・・・・・・・・・・・・・・・・・3
カメラの設定・・・・・・・・・・・・・・・・・・・・・・・・・・・・・4
カメラの充電方法 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・6
カメラを取り付けます・・・・・・・・・・・・・・・・・・・・・・7
トラブルシューティング ・・・・・・・・・・・・・・・・・・・・・・・・・・・・11
製品仕様 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・ 12
重要な安全上のご注意(バッテリー駆動カメラの場合)・・・・・・・・・・・・・・・・・12
免責事項 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・ 13
制ローン・デーノブン・ブ


内容物一覧

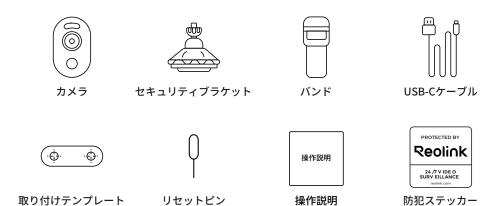



ネジセット

カメラ各部の名称

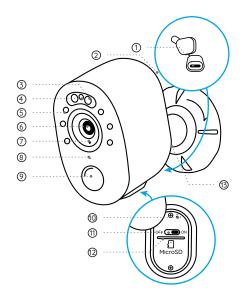

- ① USB-Cポート
- ② スピーカー
- ③ スポットライト
- ④ LEDステータス
- ⑤ 赤外線LED x 6
- ⑥ レンズ
- ⑦ 日射センサー
- ⑧ 内蔵マイク
- ⑨ PIRモーションセンサー
- ⑩ **リセットボタン** *5秒以上長押しすると、デバイスが工場出 荷時の設定にリセットされます。
- ⑪ 電源スイッチ
- ⑫ マイクロSDカードスロット
- ⑬ バッテリーステータスLED

LEDステータスの表示:

赤色:WiFi接続に失敗しました。 ● 青色:WiFi接続に成功しました。 点滅:待機状態 点灯:動作中

カメラの設定

スマートフォンを使用してカメラを設定します


手順1 QRコードをスキャンして、App StoreまたはGoogle PlayストアからReolinkアプリをダウンロ ードします。








手順2電源スイッチをオンにして、カメラの電源を入れます。

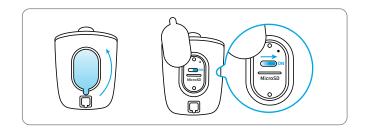

手順3 Reolinkアプリを起動し、右上にある「 🔒 」ボタンをクリックしてカメラを追加します。 本製品上のQRコードをスキャンし、画面の指示に従って初期設定を完了してください。

注:本製品は、2.4GHzおよび5GHz帯のWi-Fiネットワークに対応しています。より最適なネットワー ク環境を実現するため、5GHz帯のWi-Fiに接続することをお勧めします。

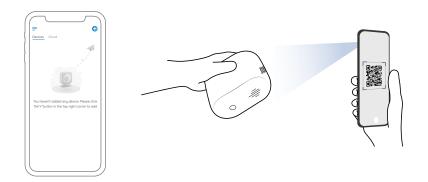

PCでカメラを設定します(オプション)

手順1 Reolink Clientをダウンロードし、インストールします。: https://reolink.com > サポート > アプ リとクライアント。


手順2 Reolink Clientを起動し、「 🕂 」ボタンをクリックします。カメラのUIDコードを入力し、画面 の指示に従って初期設定を完了します。

カメラの充電方法


設置前にカメラをフル充電しておくことをお勧めします。

充電インジケーター:

- オレンジ色LED: 充電中
- 緑色LED: 充電完了



5V電源アダプター(別売)でカメラ を充電します。



Reolinkソーラーパネルでカメラを充電 します(カメラのみを購入した場合、ソ ーラーパネルは別売になります)。




防水性能を確保するため、カメラを充電後は必ず、 充電ポートのゴムキャップを閉めてください。

カメラを取り付けます

カメラの取り付け位置に関 する注意事項

- •カメラを地面から2~3メートル (7~10フィート) の高さに取り 付けます。この高さにすること で、PIRモーションセンサーの検知 範囲を最大限に広げることができ ます。
- 効果的な検知を行うために、カメ ラを斜めに取り付けてください。


注: PIRセンサーに動くものが垂直方 向に近づくと、カメラが動きを検知で きない場合があります。

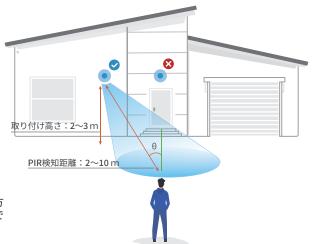

カメラの取り付け




回転させてベースをブラケットか ら取り外します。

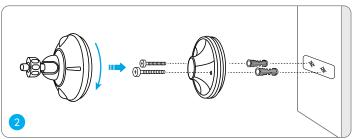


取り付けテンプレートに合わせて穴を開け、ブラケットのベースを壁にネジで取り付けます。次 に、ブラケットのもう一方の部分をベースに取り付けます。

注: 必要に応じて、付属のウォールアンカーを使用してください。

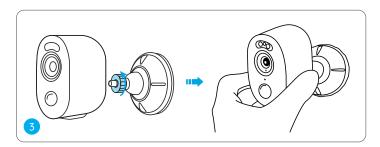


カメラをブラケットに取り付けます。 カメラの角度を調整し、最適な視野を確保します。

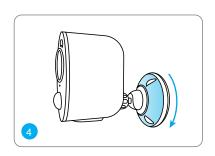


図に表示されているブラケットの 部分を時計回りに回してカメラを 固定します。

注:カメラの角度を後で調整する場合は、ブラケット上部を反時計回りに回してブラケットを緩 めてください。

カメラをループストラップで取り付ける

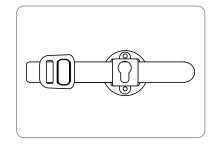

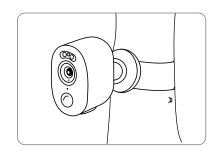

ループストラップをスロットに通し、ストラップを留めます。カメラを木に取り付ける場合 は、この設置方法を最もお勧めします。

トラブルシューティング

カメラの電源が入らない

カメラの電源が入らない場合、以下の解決方法 をお試しください:

- •電源スイッチがオンになっていることを確認 してください。
- 5V/2A DC電源アダプターでバッテリーを充電し てください。緑色のライトが点灯している場 合、バッテリーは完全に充電されています。

これらの方法でも解決合しない場は、Reolinkサ ポートまでお問い合わせください。

携帯電話でQRコードのスキャンに失敗 した

お使いの携帯電話でORコードを読み取れない場 合は、以下の解決策をお試しください:

- カメラのレンズから保護フィルムを剥がす。
- 乾いた紙やタオル、ティッシュでカメラのレ ンズを拭く。
- カメラと携帯電話の距離を変えて、カメラの ピントを合わせやすくする。

・十分な照明の下でORコードをスキャンして みてください。

これらの方法でも解決合しない場は、Reolink サポートまでお問い合わせください。

初期設定中にWiFi接続に 失敗した

カメラがWiFiに接続できない場合は、以下の 解決策をお試しください:

- 正しいWiFiパスワードを入力していることを 確認してください。
- 強いWiFi信号を確保するため、カメラをルー ターに近づけてください。
- ルーターのインターフェイスで、WiFiネット ワークの暗号化方式をWPA2-PSK/WPA-PSK に変更してください (より安全な暗号化)。
- WiFiのSSIDまたはパスワードを変更し、SSID が31文字以内、パスワードが64文字以内であ ることを確認してください。

これらの方法でも解決合しない場は、Reolink サポートまでお問い合わせください。

製品仕様

動作温度:

-10°C~55°C (14°F~131°F) サイズ: 127 x 90 x 56 mm

重量: 335 g

詳細な仕様については、https://reolink.comを ご覧ください。

重要な安全上のご注意(バッ テリー駆動カメラの場合)

カメラをご使用前に必ず本取扱説明書をよくお読 みください。バッテリーの寿命を延ばすヒントに ついては、サポートポストをご覧ください: https://support.reolink.com/hc/en-us/ articles/360006991893

- 1. 標準的で高品質なDC 5Vバッテリー充電器ま たはReolinkソーラーパネルで充電してくだ さい。他メーカーのソーラーパネルとの互換 性はありません。
- 2. メーカーが推奨する機器および付属品と同一 または同等タイプのものとのみ交換してくだ

さい。不適切なタイプを使用すると爆発の危 険があります。

- 3. 内蔵バッテリーをカメラから取り外さないで ください。
- 4. バッテリーの充電は、0°C~45°Cの温度での み行ってください。また、-10℃から55℃の 温度範囲でのみ使用してください。
- 5. スペースヒーター、調理台、調理器具、アイ ロン、ラジエーター、暖炉などの熱源の近く でバッテリーカメラを充電、使用、保管しな いでください。極端な熱は爆発を引き起こす 可能性があります。
- 6. 爆発を引き起こす可能性があるため、バッテ リーを装着したカメラを極端に気圧の低い場 所に置かないでください。
- 7. 火災の危険性があるため、バッテリーを装着 したカメラを高温の原生地域に置いたり、雷 にさらしたりしないでください。
- 8. 火災や爆発の原因となるため、バッテリーを 装着したカメラを叩いたり、強く押しつぶし たりしないでください。
- 9. 損傷していたり膨張していたりなど、何らか の異常がある(液漏れしている、臭いがす

る、へこんでいる、腐食している、錆びてい る、ひび割れている、膨張している、溶けて いる、傷があるなど)とみられるバッテリー は使用しないでください。

- 10.カメラとバッテリーはお子様の手の届かない ところに保管してください。
- 11.バッテリーを口に入れたり飲み込まないでく ださい。バッテリーを口に入れたり飲み込ん だりすると、重度の体内火傷や損傷を引き起 こす可能性があります。バッテリーを口に入 れたり体内に入れたと考えられる場合は、直 ちに医師の手当てを受けてください。
- 12.カメラやバッテリーを自分で分解、修理、改 造しないでください。
- 13. 充電ポートは乾燥させ、清潔に保ち、ゴミが 付かないようにしてください。バッテリーが 完全に充電された後は、ゴムキャップを閉め てください。
- 14.カメラを使用する際は、必ず現地の安全法規 に従ってください。
- 15.使用済みバッテリーの処分は、必ず地域の廃 棄物およびリサイクル法に従ってください。

免責事項

適用される法律が許容する最大限の範囲におい て、本書および記載されている製品、そのハー ドウェア、ソフトウェア、ファームウェア、お よびサービスは、「現状有姿」および「利用可 能な状態」で提供され、いかなる種類の保証も ありません。Reolinkは、明示または黙示を問 わず、商品性、満足のいく品質、特定目的への 適合性、正確性、第三者の権利の非侵害に関す る保証を含むがこれらに限定されない一切の保 証を否認します。いかなる場合においても、 Reolink、その取締役、役員、従業員、または 代理人は、本製品の使用に関連して、事業利益 の損失、事業の中断、データまたは文書の損失 による損害を含むがこれに限定されない、特別 損害、派生的損害、偶発的損害、または間接的 損害について、たとえReolinkがそのような損 害の可能性について知らされていたとしても、 お客様に対して責任を負いません。

適用される法律で許可される範囲において、利 用者によるReolinkの製品およびサービスの利用 は、利用者自身の責任において行われるものと し、利用者はインターネットアクセスに関連す るすべてのリスクを負うものとします。サイバ 一攻撃、ハッカー攻撃、ウイルス検査、その他 インターネット上のセキュリティリスクによる 異常動作、プライバシー漏洩、その他の損害に ついて、Reolinkは一切の責任を負いません。た

だし、Reolinkは、必要な場合には、適時技術サ ポートを提供します。

本製品に関する法規制は、管轄地域によって異 なります。本製品を使用する前に、お客様の管 轄区域におけるすべての関連法規を確認し、お 客様の使用方法が関連法規に適合していること を確認してください。本製品を使用する際は、 現地の関連法規を遵守してください。違法また は不適切な使用およびその結果について、 Reolinkは責任を負いません。本製品が第三者 の権利侵害、医療、安全装置、その他本製品の 故障が死亡または人身傷害につながる可能性の ある状況、大量破壊兵器、化学兵器、生物兵 器、核爆発、安全でない原子力エネルギーの使 用、反人道的な目的など、違法な目的で使用さ れた場合、Reolinkは一切の責任を負いませ ん。本マニュアルと適用される法律の間に矛盾 がある場合は、後者が優先されます。

製品コンプライアンス

| 本製品の正しい廃棄方法

この表示は、EU全域において、この製品を他の 家庭廃棄物と一緒に廃棄してはならないことを 示しています。無秩序な廃棄物処理による環境 や人体への危害の可能性を防ぐため、責任を持 って廃棄物をリサイクルし、物質資源の持続可 能な再利用を促進してください。使用済みデバ イスの返品は、返品・回収システムをご利用い ただくか、製品を購入された販売店にご連絡く ださい。それにより、この製品を環境的に安全 なリサイクルに出すことができます。

限定保証

本製品は、Reolink公式ストアまたはReolink正 規販売代理店から購入した場合に限り、2年間の 限定保証が適応されます。詳細は、

https://reolink.com/warranty-and-return/.

注:どうぞこの機会にお買い求めください。し かしながら、万が一、製品にご満足いただけず 返品を希望される場合は、返品される前にカメ ラを工場出荷時の設定にリセットし、挿入され ているSDカードを取り出されることを強く推奨 いたします。

利用規約とプライバシーポリシー

本製品の使用には、reolink.comに掲載されて いる利用規約およびプライバシーポリシーへの 同意が必要です。

テクニカルサポート

テクニカルサポートが必要な場合、製品をご返 品いただく前に、公式サポートサイト https://support.reolink.com.からサポートチー ムまでお問い合わせください。

利用規約

Reolink製品に搭載されている製品ソフトウェア を使用することで、Reolinkの利用規約に同意し たものとみなされます。詳細は、 https://reolink.com/terms-conditions/

REOLINK INNOVATION LIMITED FLAT/RM 705 7/F FA YUEN COMMERCIAL BUILDING 75-77 FA YUEN STREET MONG KOK KL HONG KONG

Content

What's in the Box·····	18
Camera Introduction · · · · · · · · · · · · · · · · · · ·	19
Set up the Camera·····	20
Charge the Camera · · · · · · · · · · · · · · · · · · ·	22
Install the Camera · · · · · · · · · · · · · · · · · · ·	23
Troubleshooting	27
Specification·····	28
Important Safety Instructions (For Battery-Powered Cameras) · · · · · · · · · · · · · · · · · · ·	28
Legal Disclaimer · · · · · · · · · · · · · · · · · · ·	29
New Street Consultance	70

What's in the Box









(•**⊕**•







Mounting Template

Reset Needle


Operational Instruction

Surveillance Sign



Pack of Screws

Camera Introduction

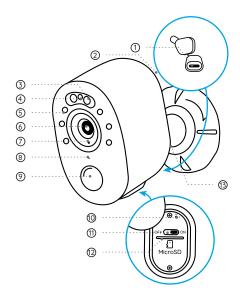

- ① USB-C Port
- ② Speaker
- 3 Spotlight
- 4 Status LED
- ⑤ 6 IR Leds
- 6 Lens
- ⑦ Daylight Sensor
- ® Built-in Mic
- PIR Motion Sensor
- @ Reset Button
- * Press for more than five seconds to reset the device to factory settings.
- 1 Power Switch
- 12 Micro SD Card Slot
- **13** Battery Status LED

Different states of the status LED:

- Red Light: WiFi connection failed
- Blue Light: WiFi connection succeeded

Blinking: Standby status
On: Working status

Set up the Camera

Set up the Camera Using a Smartphone


Step 1 Scan to download the Reolink App from the App Store or Google Play store.








Step 2 Turn on the power switch to power on the camera.

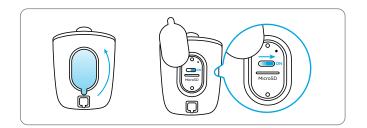

Step 3 Launch the Reolink App, click the " 👴 " button in the top right corner to add the camera. Scan the QR code on the device and follow the onscreen instructions to finish initial setup.

NOTE: This device supports 2.4 GHz and 5 GHz Wi-Fi networks. It is recommended to connect the device to 5 GHz Wi-Fi for a better network experience.

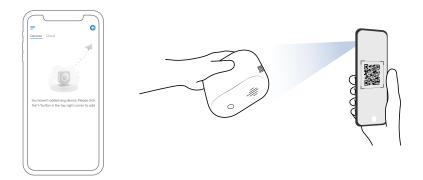


Set up the Camera on PC (Optional)

Charge the Camera


It's recommended to fully charge the camera before installing it.

Charging Indicator:

- Orange LED: Charging
- Green LED: Fully charged



Charge the camera with a 5V power adapter (not included).



Charge the camera with the Reolink Solar Panel (not included if you only purchase the camera).




For better weatherproof performance, please always cover the charging port with the rubber plug after charging the camera.

Install the Camera


Notes on Camera Installation Position

- Install the camera 2-3 meters (7-10 ft) above ground. This height maximizes the detection range of the PIR motion sensor.
- For effective detection, please install the camera angularly.


NOTE: If a moving object approaches the PIR sensor vertically, the camera may fail to detect motion.

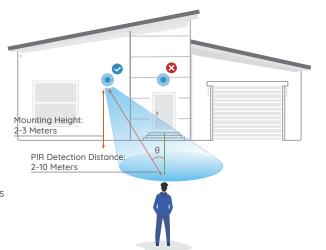

Mount the Camera

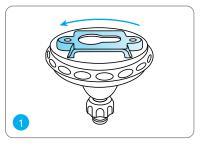


Rotate to separate the base from the bracket.

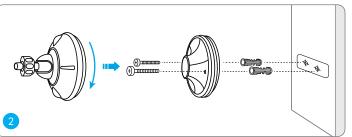


Drill holes in accordance with the mounting template and screw the base of the bracket to the wall. Next, attach the other part of the bracket to the base.

NOTE: Use the drywall anchors included in the package if needed.

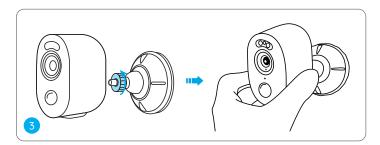

Screw the camera to the bracket.


Adjust the camera angle to get the best field of view.

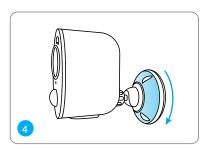


Secure the camera by turning the part on the bracket identified in the chart clockwise.

NOTE: To adjust the camera angle later, please loosen the bracket by turning the upper part anticlockwise.

Install the Camera with Loop Strap

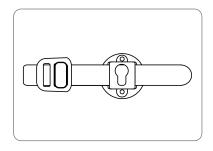

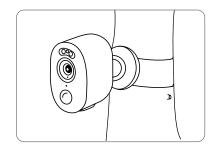

Thread the loop strap through the slots and fasten the strap. It is the most recommended installation method if you plan to mount the camera to the tree.

Troubleshooting

Camera is Not Powering On

If your camera is not powering on, please try the following solutions:

- Make sure the power switch is turned on.
- Charge the battery with a DC 5V/2A power adapter. When the green light is on, the battery is fully charged.

If these won't work, contact Reolink Support.

Failed to Scan QR Code on the Phone

If you cannot scan the QR code on your phone, please try the following solutions:

- Remove the protective film from the camera lens.
- Wipe the camera lens with a dry paper/towel/tissue.
- Vary the distance between your camera and the mobile phone so that the camera can focus better.

• Try to scan the QR code under sufficient lighting.

If these won't work, contact Reolink Support.

Failed to Connect to WiFi During Initial Setup Process

If the camera fails to connect to WiFi, please try the following solutions:

- Ensure that you have entered the correct WiFi password.
- Put the camera closer to your router to ensure a strong WiFi signal.
- Change the encryption method of the WiFi network to WPA2-PSK/WPA-PSK (safer encryption) on your router interface.
- Change your WiFi SSID or password and make sure that SSID is within 31 characters and password is within 64 characters.

If these won't work, contact Reolink Support.

Specification

Operating Temperature: -10°C to 55°C (14°F to 131°F) Size: 127 x 90 x 56 mm Weight: 335 g

For more specifications, visit https://reolink.com

Important Safety Instructions (For BatteryPowered Cameras)

Please read the instructions carefully before using the camera. For tips on extending battery life, visit our support post: https://support.reolink.com/hc/en-us/articles/360006991893

 Charge the battery with a standard and high-quality DC 5V battery charger or Reolink solar panel. It is not compatible with solar panels from any other brands.

- Replace only with the same or equivalent type of equipment and accessories recommended by the manufacturer. Using an incorrect type poses an explosion risk.
- 3. Do not remove a built-in battery from the camera.
- 4. Charge the battery only in temperatures between 0°C and 45°C. And use it only in temperatures ranging from -10°C and 55°C.
- 5. Do not charge, use or store a battery camera near heat sources, such as space heaters, cooking surfaces, cooking appliances, irons, radiators, or fireplaces. Extreme heat may cause an explosion.
- Do not expose the camera with a battery to extremely low air pressure environments, as this may cause an explosion.
- 7. Do not place the camera with a battery in hot wilderness areas or expose it to lightning, as this poses a risk of fire.
- 8. Do not hit or heavily compress the camera with a battery, as this poses a risk of fire or explosion.

- 9. Do not use the battery if it appears damaged, swollen, or compromised in any way (e.g., leaking, emitting odors, dented, corroded, rusted, cracked, swollen, melted. or scratched).
- 10. Keep the camera and battery away from children.
- 11. Do not ingest or swallow battery. If the battery is ingested or swallowed, it can cause severe internal burns and damage. Seek immediate medical attention if you suspect the batteru has been inaested or placed inside any part of the body.
- 12. Do not attempt to disassemble, repair, or alter the camera or battery by yourself.
- 13. Keep the charging port dry, clean and free of any debris. Cover it with the rubber plug after the battery is fully charged.
- 14. Always follow the local safety laws and regulations when using the camera.
- 15. Always follow the local waste and recucling laws to dispose of used batteries.

Legal Disclaimer

To the maximum extent permitted by applicable law, this document and the product described, with its hardware. software, firmware, and services, are delivered on an "as-is" and "as-available" basis, with all faults and without warranty of any kind. Reolink disclaims all warranties, express or implied, including but not limited to, warranties of merchantability, satisfactory quality, fitness for a particular purpose, accuracy, and non-infringement of third-party rights. In no event will Reolink, its directors, officers, employees, or agents be liable to you for any special, consequential, incidental or indirect damages, including but not limited to damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if Reolink has been advised of the possibility of such damages. To the extent permitted by applicable law. your use of the Reolink products and services is at your sole risk and you assume all risks associated with internet access. Reolink does not take any responsibilities for abnormal operation, privacu leakage or other damages resulting from cuber attacks, hacker attacks,

virus inspections, or other internet security risks. However, Reolink will provide timely technical support if required.

The laws and regulations related to this product varu by jurisdiction. Please check all relevant laws and regulations in your jurisdiction before using this product to ensure that your use conforms to the applicable law and regulation. During the use of the product, you must comply with relevant local laws and regulations. Reolink is not responsible for any illegal or improper use and its consequences. Reolink is not liable in the event that this product is used with illegitimate purposes, such as third-partu rights infringement, medical treatment, safetu equipment, or other situations where the product failure could lead to death or personal injury, or for weapons of mass destruction, chemical and biological weapons. nuclear explosion, and any unsafe nuclear energy uses or anti-humanity purposes. In the event of any conflicts between this manual and the applicable law, the latter prevails.

Notification of Compliance



Correct Disposal of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection sustems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Limited Warranty

This product comes with a 2-uear limited warranty that is valid only if purchased from Reolink Official Store or a Reolink authorized reseller. Learn more:

https://reolink.com/warranty-and-return/.

NOTE: We hope that you enjoy the new purchase. But if you are not satisfied with the product and plan to return, we strongly suggest that you reset the camera to factory default settings and take out the inserted SD card before returning.

REOLINK INNOVATION LIMITED FLAT/RM 705 7/F FA YUEN COMMERCIAL BUILDING 75-77 FA YUEN STREET MONG KOK KL HONG KONG

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at reolink.com

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products, https://support.reolink.com.

Terms of Service

By using the Product Software that is embedded on the Reolink product, you agree to the terms&conditions between you and Reolink. Learn more: https://reolink.com/terms-conditions/

English