



TYMO RING

HAIR STRAIGHTENING COMB
USER MANUAL



English

Thank you for choosing TYMO RING Hair Straightening Comb. Read the user manual carefully before use.

Specifications

Model: HC100

Power Supply: 100-240V~ 50/60Hz

Power: 45W

Heating Method: PTC heating


Heating Temperature: 266°F~410°F
(130°C -210°C)

Packaging List

Carefully unpack the box and remove all packaging materials. Ensure no packaging materials are left on heating plates.

Packaging List	Quantity
TYMO RING Hair Straightening Comb	1
Travel bag	1
Glove	1
Hairpins	2

Product Overview

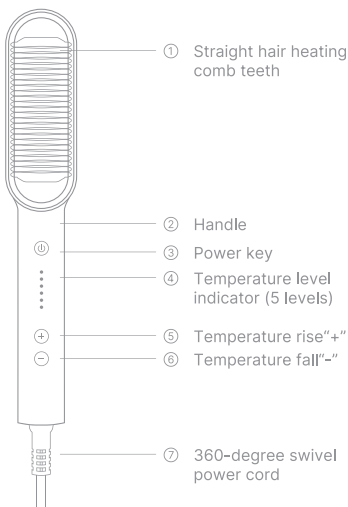

How to Use

A. Operating steps of straight hair

- (1) Wash and dry your hair, comb your hair thoroughly (do not use any spray, styling agent or other inflammable chemical hair-care products), then wrap a towel around your neck so as to avoid possible skin scalding.
- (2) Insert the plug into power socket, press "power" key to start the appliance, then the appliance will work at level 4 (defaulted).
- (3) Press "+" or "-" to choose levels according to different hair types.
- (4) while heating, the LED of corresponding level will be on. After heating to set temperature, LED will be lit long.
- (5) After the LED for level setting is lit, hold the handle of the appliance and take care of the safety distance between the appliance and skin and eyes.
- (6) Split the hair into strands evenly, grasp and take up, put the prepared hair strand into comb teeth starting from the hair root.
- (7) Slide from the hair root downward to the end of hair smoothly. Repeat the above actions till you obtain the straight hair you desire.
- (8) After straightening the hair, press the "Power" key again to turn off the appliance. After the straightened hair is ready, arrange the hair with comb properly.



B. Operating steps of curly hair

- (1) For outward curling-up styling, it is necessary to perform the steps 1-6 for straight hair, grasp the hair and curl up outwards around comb, stay at the end of hair for 3-5 seconds and repeat for 3 times.
- (2) For inward curling-up styling, it is necessary to perform the steps 1-6 for straight hair, grasp the hair and curl up inwards around comb, stay at the end of hair for 3-5 seconds and repeat for 3 times.
- (3) After finishing the styling, press "Power" key again for turning off the appliance. When the finished hair is cooled down, arrange the hair with comb.

⚠ NOTE

- (1) The appliance has intelligent features of high efficiency and energy saving. After 30 minutes working, it will be switched off automatically. If it is put into use again, you can press "Power" key for restarting the appliance.
- (2) While using the hair straightener, the hair shall be under dry state, otherwise, it may fail to reach the styling effect or desired result.

CAUTION

- When the appliance is used for the first time, slight burned smell or little mist may be produced, which is from remaining test material on metal parts of the appliance and will disappear in a few seconds. It is a normal condition, please feel free to use it.
- If the temperature is set too high, it will take the risk of burning hair!
- You shall choose the suitable temperature and use the appliance properly according to your hair condition, otherwise, it may make your hair dry or even scald.

Temperature Setting

266°F / 130°C	Soft and thin hair
302°F / 150°C	Thin, fine or bleached hair
338°F / 170°C	Dyed or Dark colored hair
374°F / 190°C	Normal or Slightly curly hair
410°F / 210°C	Thick, curly and wavy hair

WARNING

- (1) Do not use this product near bath, sink, or any vessel containing water.
- (2) The appliance should not be used by persons who is insensitive to heat, otherwise, it may result in burns or scalding.
- (3) Immediately stop using it if you experience any pain or abnormalities on your skin or inside your body.
- (4) The children shall be supervised not to play with the appliance. The packing material such as plastic bag for the appliance shall be put in places beyond the reach of children.
- (5) This appliance does not apply to straightening the hair of pets.
- (6) Don't touch the metal on the plug when plugging.
- (7) Please unplug the power plug immediately in the following circumstances, otherwise, it may result in accident and even personal injury:
 - While this appliance is not used
 - The appliance does not work normally
 - Before cleaning
 - After use each time
- (8) Keep the appliance away from water and liquid or humidity to avoid electric shock.
- (9) Do not wrap the power cord around the appliance to avoid deformation of cord, which may cause failure of the appliance.
- (10) Do not use the appliance when the plug is loose in the power outlet.
- (11) Do not damage, modify, drag, twist, or pull out the power cord by force.
- (12) Do not place anything heavy on the cord and do not pinch the cord.
- (13) Do not let pins or dirt get attached to the end of the appliance plug.
- (14) Do not use the device with wet hands. You can use it, only when your hands are dry. Otherwise, it may lead to electric shock or short circuit.

English

- (15) Do not use or store the appliance in bathroom or in the rooms with high humidity, otherwise, it may result in electric shock or fire.
- (16) Keep the appliance away from infants and children.
- (17) Do not immerse the appliance in water.
- (18) Do not use the appliance near flammable substances (alcohol, thinner, benzene, enamel remover, aerosol sprays, etc.), otherwise, it may result in explosion or fire.
- (19) Do not drop or hit the appliance. If this appliance is damaged from being dropped or hit, please do not continue to use it.
- (20) Do not insert metal objects such as pins, wires, or any other foreign objects in the device, otherwise, it may result in electric shock.
- (21) Do not attempt to modify, disassemble, or repair the appliance by yourself. Please directly contact us for services.
- (22) During the use, the heating comb tooth part will be very hot. When the appliance is energized, you cannot grasp the comb teeth with your hand or put your hand close to the comb teeth. Any hot components shall be avoided to contact your skin and eyes. When the appliance is still hot, it shall not be handled.
- (23) Before using the appliance, do not use flammable materials such as hairspray, styling mousse etc. on your head. When these materials contact with hot hair comb, it may ignite.
- (24) This appliance can only be used for dry natural hair, do not use on artificial hair.

CAUTION

- (1) Periodically clean the whole unit to avoid dust accumulation.
- (2) Always ensure the appliance is operated on an electric power source which matches the rated voltage indicated on the appliance.
- (3) Before starting the device, make sure that the plug is plugged in the supply outlet completely.
- (4) Be careful with the hot temperature of the straight hair heating comb teeth during use and after use, or it may result in burns.
- (5) Please do not remove the powersource and use the appliance with wet hand, otherwise, it may cause electric shock or short circuit etc..
- (6) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lacked of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- (7) This appliance is only used connected with grounded AC power socket. Do not put power cord on sharp edge nor clip the cord with clip or hang anything on it. The power cord shall be kept far away from hot or humid places.
- (8) The appliance is not allowed to contact or be close to combustibles since the temperature of the appliance may reach up to around 200°C.
- (9) No materials are allowed to cover the appliance.
- (10) When the appliance is operating, do not put it on soft pad or carpet.

(11) The heating plate of straight hair comb is not allowed to clip any objects.

(12) After the appliance is used or when it is suspended for a long time, please cut off the power and make the appliance cool down. The appliance should never be left unattended when plugged in.

(13) Do not put the appliance or power cord on hot surface such as cooking range or similar products or open fire.

(14) If the appliance has a damaged cord or plug, or it is not working properly, please cut off the appliance immediately and stop using it.

(15) Never block the air openings of the appliance or place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and any other materials which may cause blockage.

(16) Never use it while sleeping.

(17) ~The symbol indicates AC voltage.



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment. This product can be used across EU member states.

FCC Statement

This device complies with Part 15 of the FCC Rule. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed communications. However, there is no guarantee not occur in a particular installation. If this that interference will equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

English

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

The product warranty is governed by regulations in force and applied upon showing the original legible purchase receipt complete of all its parts. For support service under warranty, please take the original purchase receipt to the store where the product was purchased.

Merci de sélectionner le lisseur TYMO. Avant de l'utiliser, lisez minutieusement le manuel de l'utilisateur.

Spécification

Modèle: HC100

Source de courant: 100-240V~ 50/60Hz

courant: 45W

Méthode de chauffage: Chauffage PTC


Température de chauffage: 266°F-410°F (130°C-210°C)

liste d'emballage

Ouvrez minutieusement la boîte et retirez tous les matériaux d'emballage. Assurez-vous qu'aucun matériau d'emballage n'est laissé sur les plaques chauffantes.

liste d'emballage	Quantité
TYMO RING Peigne à lisser les cheveux	1
Sac	1
Gants	1
Épingles à cheveux	2

Présentation du produit

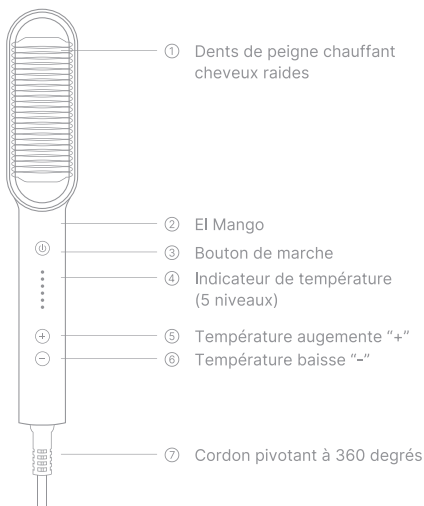

Comment Utiliser

A. étapes de lisser les cheveux

- (1) Lavez et séchez vos cheveux, peignez soigneusement vos cheveux (il est interdit d'utiliser le spray, agent coiffant ou autre produit chimique inflammable pour le soin des cheveux), puis enroulez une serviette autour de votre cou en vue d'éviter d'éventuelles brûlures de la peau.
- (2) Insérez la fiche dans la prise de courant, appuyez sur la bouton de marche pour ouvrir ce produit, puis il fonctionnera au niveau 4 (par défaut).
- (3) Appuyez sur «+» ou choisir les niveaux selon de différents types de cheveux.
- (4) Pendant le chauffage, la LED sera allumée. Après le chauffage à la température réglée, la LED sera allumée à long terme.
- (5) Dès que la LED de réglage du niveau est allumée, tenez sa handle et prêtez l'attention à la distance de sécurité entre ce produit et la peau et les yeux.
- (6) Divisez les cheveux en mèches uniformément, saisissez et mettez-les en dents de peigne à partir de la racine des cheveux.
- (7) Faites glisser de la racine des cheveux vers le bas jusqu'à la fin des cheveux. Répétez ce processus jusqu'à ce que vous obteniez les cheveux lisses.
- (8) Après avoir terminé, appuyez à nouveau sur la bouton de marche pour l'éteindre. Ensuite, peignez les cheveux correctement.



B.Étapes de boucler des cheveux

- (1) Pour une coiffure bouclée vers l'extérieur, effectuer certainement les étapes 1 à 6 pour les cheveux lisses, saisissez et bouclez-les vers l'extérieur autour du peigne. Au bout des cheveux, attendez pendant 3 à 5 secondes et répétez ce processus 3 fois.
- (2) Pour une coiffure bouclée vers l'intérieur, effectuer nécessairement les étapes 1 à 6 pour les cheveux lisses, saisissez et bouclez-les vers l'intérieur autour du peigne. Au bout des cheveux, attendez pendant 3 à 5 secondes et répétez ce processus 3 fois.
- (3) Après avoir terminé, appuyez à nouveau sur la bouton de marche pour l'éteindre. Peignez les cheveux correctement dès que les cheveux sont refroidis.

⚠ Notes:

- (1) Ce produit possède des fonctions intelligentes efficaces et d'économie d'énergie. Après travaillé depuis 30 minutes, il s'éteindra automatiquement. Si vous voulez l'utiliser de nouveau, appuyez sur la bouton de marche pour le rouvrir.
- (2) Au cours de l'utilisation, les cheveux doivent être secs, sinon, il est difficile d'atteindre l'effet souhaité.

ATTENTION

- Quand vous l'utilisez pour la première fois, il est possible d'engendrer une légère odeur de brûlé ou peu de smog qui proviennent du matériau de test restant sur les pièces métalliques et disparaîtront en quelques secondes. C'est normale, n'hésitez pas à l'utiliser.
- La température trop élevés prendra le risque de brûler vos cheveux.
- Choisissez la température convenables et utilisez-le correctement conformément à l'état de vos cheveux, sinon, il y a le risque de rendre vos cheveux secs ou même brûler.

Guide de température

266°F / 130°C	Cheveux doux et fins
302°F / 150°C	Cheveux fins et décolorés
338°F / 170°C	Cheveux teints ou foncés
374°F / 190°C	Cheveux normaux ou légèrement bouclés
410°F / 210°C	Cheveux épais, bouclés et ondulés

AVERTISSEMENTS

- (1) IL EST INTERDIT DE LE MANIER PRÈS DE BAIGNOIRES, D'ÉVIER, D'AUTRES CONTENEURS AVEC DE L'EAU.
- (2) Il est interdit de l'utiliser par des personnes insensibles à la chaleur, sinon cela pourrait causer des brûlures.
- (3) Si vous sentez des douleurs ou des anomalies externes ou internes, arrêtez immédiatement de l'utiliser.
- (4) Surveillez les enfants pour ne pas faire jouer avec l'appareil. Le matériel d'emballage comme son sac plastique doit être déposé dans des endroits hors de la portée des enfants.
- (5) Ce produit ne destine pas au lissage des poils d'animaux domestiques.
- (6) Ne touchez pas le métal de la fiche au cours du branchement.
- (7) Veuillez débrancher la fiche tout de suite dans les circonstances ci-dessous, sinon il y aura un accident et même des blessures physiques:
 - sans manier ce produit
 - être en panne
 - Avant le nettoyage
 - Après l'utilisation
- (8) S'éloigner de l'eau et des liquides ou de l'humidité pour éviter les chocs électriques.
- (9) Ne tordez, pliez ou enroulez jamais le cordon autour de ce produit pour éviter la déformation du cordon, sinon, cela provoque une panne.
- (10) Ne l'utilisez pas quand la fiche est mal branchée.
- (11) N'endommagez, modifiez, tirez, tordez pas le cordon intentionnellement.
- (12) Ne placez pas de lourd sur le cordon et ne le pincez pas.
- (13) Ne laissez pas d'épingles ou qqch salé coller à la fin de la fiche.
- (14) Il est interdit de l'utiliser avec les mains mouillées. Assurez-vous uniquement le manier avec mains sèches. Sinon, un choc électrique ou court-circuit.
- (15) N'utilisez ou stockez-le pas dans une salle de bain ou

Français

dans des chambres très humides, sinon un choc électrique ou un incendie.

(16) Faites-le s'éloigner des nourrissons et des enfants.

(17) N'immergez-le pas dans l'eau.

(18) Il est interdit de le manier près de substances inflammables (alcool, diluant, benzène, dissolvant pour émail, aérosols, etc.), sinon une explosion ou un incendie.

(19) Ne laissez-le pas tomber et ne cognez-le pas. S'il est abîmé dû à une chute ou à un choc, arrêtez de l'utiliser.

(20) N'insérez pas d'objets métalliques comme broche, fils ou tout autre chose là-dedans, sinon un choc électrique.

(21) N'essayez pas de le modifier, de démonter ou de réparer par vous-même. Contactez avec nous directement pour obtenir les services.

(22) Au cours de l'utilisation, les dents du peigne chauffant sera très chaudes.

Quand il est sous tension, il est impossible de les saisir avec votre main ou mettre la main près des dents du peigne. Evitez tout composant chaud d'être en contact avec votre peau et vos yeux. Quand il est encore chaud, il est interdit de le régler.

(23) Avant l'utilisation, il est interdit d'utiliser de matériaux inflammables comme laque, mousse coiffante, etc. sur votre tête. Lorsque ces matériaux entrent en contact avec le peigne à cheveux chauds, sinon, ils peuvent s'enflammer.

(24) Il peut être uniquement utilisé pour les cheveux naturels secs au lieu de l'utiliser sur les cheveux artificiels.

ATTENTION

(1) Nettoyez-le périodiquement pour ne pas accumuler la poussière.

(2) Assurez-vous toujours de l'utiliser correspondant à la tension nominale indiquée sur ce produit.

(3) Avant de le démarrer, assurez-vous que la fiche est absolument branchée dans la prise.

(4) Au cours de l'utilisation et après l'utilisation, soyez prudent avec la température chaude des dents du peigne chauffant, sinon des brûlures.

(5) Il est interdit de couper le courant et l'utiliser avec les mains mouillées, sinon un choc électrique ou un court-circuit.

(6) Pour les personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou morales réduites ou un manque d'expérience et de connaissances, il vaut mieux ne pas l'utiliser, à moins qu'elles ne soient surveillées ou aient reçu des instructions en matière de l'utilisation de l'appareil par un responsable. Surveillez les enfants pour ne pas faire jouer avec l'appareil.

(7) Il est uniquement utilisé avec une prise de courant CA mise à la terre. Il est interdit de poser le cordon sur un bord tranchant, attacher le cordon avec un clip ou suspendre qqch dessus. Le cordon doit être éloigné des endroits chauds ou humides.

(8) Il est interdit de toucher ou être près des combustibles, car la température de ce produit peut atteindre environ 200°C.

(9) Il est interdit de le recouvrir par d'autres choses.

(10) Au cours du fonctionnement, ne le posez pas sur un coussin souple ou un tapis.

- (11) La plaque chauffante du peigne à cheveux lisses n'est pas destinée à couper d'autres objets.
- (12) Dès avoir utilisé l'appareil ou le suspendre à long terme, veuillez couper le courant et faire refroidir ce produit. Il est interdit d'être laissé sans surveillance quand il est branché.
- (13) Ne posez-le pas ou le cordon sur une surface chaude comme une cuisinière, des produits similaires ou un feu.
- (14) Si le cordon ou la prise est endommagé, ou s'il ne fonctionne pas, veuillez couper le courant immédiatement et cesser de le manier.
- (15) Il est interdit de bloquer sa bouche d'aération et le placer sur une surface molle telle que un lit ou un canapé, sinon sa bouche peut être obstruée. Gardez sa bouche d'aération sans peluches, cheveux et tout autre matériau susceptible de causer un blocage.
- (16) Il est interdit de l'utiliser pendant le sommeil.
- (17) ~ Le symbole indique la tension AC.



RECYCLAGE

Ce produit porte le symbole du tri sélectif des déchets d'équipements électriques et électroniques (DEEE). Cela signifie que ce produit doit être traité conformément à la directive européenne 2012/19/EU afin d'être recyclé ou démantelé pour minimiser son impact sur l'environnement. L'utilisateur a le choix de confier son produit à une organisation de recyclage compétente ou au détaillant lorsqu'il achète un nouvel équipement électrique ou électronique.

Ce produit peut être utilisé dans tous les États membres de l'UE.

Garantie du produit

La garantie du produit est régie par la loi en vigueur et valide sur présentation de tous les bons d'achat lisible d'origine de toutes ses parties. Au sujet du service sous garantie, veuillez apporter le reçu d'achat original dans le magasin où vous l'achetez.

